

Von VVO unterstützte VEGA-Auswertsysteme und Schnittstellenwandler



Gerätetypen	VVO 0.99h	VVO 2.0	VVO 2.10 (Aug. '96)	VVO 2.15b (Mär. '97)	VVO 2.20 (Nov. '97)	VVO 2.22 (Jan. '98)	VVO 2.30 (Mär. '98)	VVO 2.40 (Jul. '98)	VVO 2.50 (Dez. '98)	VVO 2.60 (Feb. '00)	VVO 2.70 (Jul. '00)	VVO 2.80 (Mai. '01)	VVO 2.81 (Mär. '02)	VVO 2.82 (Feb. '06)
LOG571 CPU	x	x	x	x	x	x	x	x	x	x	x	x	x	x
LOG571 EA	x	x	x	x	x	x	x	x	x	x	x	x	x	x
LOG571 EV	x	x	x	x	x	x	x	x	x	x	x	x	x	x
LOG571 AA	x	x	x	x	x	x	x	x	x	x	x	x	x	x
LOG571 AD	x	x	x	x	x	x	x	x	x	x	x	x	x	x
LOG571 AR	x	x	x	x	x	x	x	x	x	x	x	x	x	x
LOG571 AT	x	x	x	x	x	x	x	x	x	x	x	x	x	x
LOG571 EP												x	x	x
MET 513 - 515			x	x	x	x	x	x	x	x	x	x	x	x
MET 514V, 515V			x	x	x	x	x	x	x	x	x	x	x	x
MET 514 D			x	x	x	x	x	x	x	x	x	x	x	x
MET 614, 614V					x	x	x	x	x	x	x	x	x	x
COM 557 (GP)				x	x	x	x	x	x	x	x	x	x	x
COM 557 (ASM)				x	x	x	x	x	x	x	x	x	x	x
COM 557 (InterBus)				x	x	x	x	x	x	x	x	x	x	x
COM 557 (Profibus FMS)				x	x	x	x	x	x	x	x	x	x	x
COM 557 (Profibus DP)				x	x	x	x	x	x	x	x	x	x	x
COM 557 (PC-Modem)								x	x	x	x	x	x	x
COM 558 Ethernet												x	x	x
CONNECT			x	x	x	x	x	x	x	x	x	x	x	x
CONNECT 2					x	x	x	x	x	x	x	x	x	x
												x	x	x

Von VVO unterstützte VEGA-Sensoren



Sensortypen	VVO 0.99h	VVO 2.0	VVO 2.10 (Aug. '96)	VVO 2.15b (Mär. '97)	VVO 2.20 (Nov. '97)	VVO 2.22 (Jan. '98)	VVO 2.30 (Mär. '98)	VVO 2.40 (Jul. '98)	VVO 2.50 (Dez. '98)	VVO 2.60 (Feb. '00)	VVO 2.70 (Jul. '00)	VVO 2.80 (Mai. '01)	VVO 2.81 (Mär. '02)	VVO 2.82 (Feb. '06)
SON 80V	x	x	x	x	x	x	x	x	x	x	x	x	x	x
SON 80V (ECHOFOX)	x	x	x	x	x	x	x	x	x	x	x	x	x	x
SON 50 K (HART)					x	x	x	x	x	x	x	x	x	x
SON 50 V (VBUS)						x	x	x	x	x	x	x	x	x
SCAN 850										x	x	x	x	x
SON 50 PA										x	x	x	x	x
PULS 64V	x	x	x	x	x	x	x	x	x	x	x	x	x	x
PULS 64V (ECHOFOX)	x	x	x	x	x	x	x	x	x	x	x	x	x	x
PULS 81				x	x	x	x	x	x	x	x	x	x	x
PULS 50 K (HART)					x	x	x	x	x	x	x	x	x	x
PULS 50 V (VBUS)						x	x	x	x	x	x	x	x	x
PULS 40, PULS 40 V										x	x	x	x	x
PULS 40 PA, PULS 50 PA										x	x	x	x	x
PULS 45 K, PULS 45 V, PULS 45 PA												x	x	x
Flex 50 K, FLEX 50 V									x	x	x	x	x	x
Flex 50 PA										x	x	x	x	x
D-Serie (mit E 20)	x	x	x	x	x	x	x	x	x	x	x	x	x	x
D80-Serie (VBUS)				x	x	x	x	x	x	x	x	x	x	x
D80-Serie (HART)					x	x	x	x	x	x	x	x	x	x
BAR20-Serie (HART)					x	x	x	x	x	x	x	x	x	x
BAR40-Serie (HART)										x	x	x	x	x
D90-Serie (PA)										x	x	x	x	x
BAR40-Serie (PA)										x	x	x	x	x

Von VVO unterstützte VEGA-Sensoren (Fortsetzung)



Sensortypen	VVO 0.99h	VVO 2.0	VVO 2.10 (Aug. '96)	VVO 2.15b (Mär. '97)	VVO 2.20 (Nov. '97)	VVO 2.22 (Jan. '98)	VVO 2.30 (Mär. '98)	VVO 2.40 (Jul. '98)	VVO 2.50 (Dez. '98)	VVO 2.60 (Feb. '00)	VVO 2.70 (Jul. '00)	VVO 2.80 (Mai. '01)	VVO 2.81 (Mär. '02)	VVO 2.82 (Feb. '06)
EL-Serie (HART)							x	x	x	x	x	x	x	x
EK-Serie (HART)							x	x	x	x	x	x	x	x
EL-Serie (PA)										x	x	x	x	x
EK-Serie (PA)										x	x	x	x	x
HART-Fremdsensoren								x	x	x	x	x	x	x