

## PLICSMOBILE 80 series

| Version, available since      | Description  |
|-------------------------------|--|
| <b>1.3.0</b><br><b>6/2010</b> | <p><b>Function extensions</b></p> <ul style="list-style-type: none"> <li>- Daily restart                             <ul style="list-style-type: none"> <li>o Daily restart active</li> </ul> </li> <li>- Provider selection                             <ul style="list-style-type: none"> <li>o Provider selection possible</li> </ul> </li> </ul> <p><b>Error corrections</b></p> <ul style="list-style-type: none"> <li>- Mobile radio                             <ul style="list-style-type: none"> <li>o Improvement of mobile communication in case of interference</li> </ul> </li> <li>- PLICSMOBILE B81                             <ul style="list-style-type: none"> <li>o Incorrect battery charge level corrected</li> </ul> </li> </ul>  |
| <b>1.2.0</b><br><b>4/2019</b> | <p><b>Function extensions</b></p> <ul style="list-style-type: none"> <li>- HART Master                             <ul style="list-style-type: none"> <li>o Change-over between Primary and Secondary Master possible</li> </ul> </li> <li>- Roaming                             <ul style="list-style-type: none"> <li>o Reset value set to "ON"</li> </ul> </li> </ul> <p><b>Error corrections</b></p> <ul style="list-style-type: none"> <li>- Error status HART variables                             <ul style="list-style-type: none"> <li>o The error status of the HART variables was not evaluated correctly</li> </ul> </li> </ul>   |
| <b>1.1.0</b><br><b>3/2018</b> | <p><b>Function extensions</b></p> <ul style="list-style-type: none"> <li>- Power saving function                             <ul style="list-style-type: none"> <li>o The sensors are only switched on as long as necessary. This increases the battery lifetime.</li> </ul> </li> <li>- New power scheme permanent operation/power saving mode (combined)                             <ul style="list-style-type: none"> <li>o New power scheme where PLICSMOBILE decides on the active power scheme.</li> </ul> </li> <li>- Battery/Accumulator warning messageBattery/Accumulator warning message                             <ul style="list-style-type: none"> <li>o PLICSMOBILE can send a warning message by falling below a battery/accumulator level.</li> </ul> </li> <li>- SMS                             <ul style="list-style-type: none"> <li>o In the SMS, the measured values selected in the measurement loop are transmitted.</li> </ul> </li> <li>- Event log                             <ul style="list-style-type: none"> <li>o Texts in the event log switched over to English.</li> </ul> </li> </ul> <p><b>Error corrections</b></p> <ul style="list-style-type: none"> <li>- Percent and lin. percent in the VEGA Inventory System</li> </ul> |

## Overview of the software versions

| Version, available since | Description  |
|--------------------------|--|
|                          | <ul style="list-style-type: none"> <li>○ Exchange of percent and lin. percent removed while transmitting to VEGA Inventory System.</li> <li>- Remote access via dialing connection CSD               <ul style="list-style-type: none"> <li>○ Remote access via CSD is possible again.</li> </ul> </li> <li>- 2. HART Master               <ul style="list-style-type: none"> <li>○ The use of a 2. HART master is now possible.</li> </ul> </li> </ul>  |
| <b>1.0.1,<br/>5/2017</b> | <b>Error corrections</b> <ul style="list-style-type: none"> <li>- Software update               <ul style="list-style-type: none"> <li>○ A software update without inserted SIM card is not possible</li> </ul> </li> <li>- HART variables               <ul style="list-style-type: none"> <li>○ While selecting the values to be transmitted there were transposed digits. Selected value to be sent -Actual value which is sent<br/>                   PV – QV<br/>                   SV – PV<br/>                   TV – SV<br/>                   QV – TV<br/>                   In addition, the units of SV, TV and QV were not sent.</li> </ul> </li> <li>- Bluetooth               <ul style="list-style-type: none"> <li>○ Was Bluetooth switched off and the instrument was switched off and on again, then PLICSMOBILE does not start correctly</li> </ul> </li> <li>- Test transmission               <ul style="list-style-type: none"> <li>○ During a test transmission with the key "Send" the sensor is switched on for a sufficient time in the power saving mode</li> </ul> </li> <li>- Measured value transmission VEGA Inventory System               <ul style="list-style-type: none"> <li>○ With a PLICSMOBILE with up to 15 measuring points, only the first 8 measuring point were sent</li> </ul> </li> </ul> |
| <b>1.0.0,<br/>4/2017</b> | <b>First sales version</b>   |

### Legend:

| Name    | Description  |
|---------|--|
| Version | xx.yy.zz<br>xx: Compatibility version. Will be increased when the compatibility to the previous version is no longer given. Value range 0 ... 99.<br>yy: Function extension version. Will be increased when new functions or function changes were carried out on the previous version. Also errors can have been corrected with a function change.<br>Value range 0 ... 99.<br>zz: Error correction version. Will be increased when only errors were corrected on the previous version. Value range 0 ... 99. |

## Overview of the software versions

| Name            | Description  |
|-----------------|--|
| available since | Month/Year   |
| Device Rev.     | Version number of the instrument defined by Fieldbus.<br>Consecutive integral number<br>Will be increased if in the "Application Layer" modifications were carried out, e.g. new commands, modifications in the data structure in a command. |