

Sicherheitshinweise / Safety instructions

ATEX / UKEX / IECEx / cULus

VEGAMET 841, 842, 861, 862

Installation im Nicht-Ex-Bereich

mit Ausgang Eigensicherheit "i"

Installation in non-Ex area

with output intrinsic safety "i"



Document ID: 61270



VEGA

- 1 ATEX**
- 2 UKEX**
- 3 IECEX**
- 4 cULus**

- EU-Baumusterprüfbescheinigung DEMKO 19 ATEX 2144, Rev. 1 (Document ID: 61271)
- UK Type Examination Certificate UL21UKEX2279 (Document ID: 66336)
- Certificate of Conformity IECEX ULD 19.0015, Issue No. 1 (Document ID: 61272)
- Certificate of Compliance cULus E490658 (Document ID: 61273)

Editing status: 2021-10-01



- DE** Sicherheitshinweise
- EN** Safety instructions
- FR** Consignes de sécurité
- ES** Instrucciones de seguridad

VEGAMET 841, 842, 861, 862

Installation im Nicht-Ex-Bereich
mit Ausgang Eigensicherheit "I"



CE 0044



Document ID: 61270

VEGA

ATEX

Inhaltsverzeichnis

1	Geltung	4
2	Gerätekonfiguration/-eigenschaften	4
3	Allgemeines	4
4	Anwendungsbereich, Einsatz in Gas- und Staumatmosphären	4
5	Sicherer Betrieb	5
6	Wichtige Hinweise für die Montage und Wartung	5
7	Elektrische Daten	6
8	Mechanische Daten	8
9	Thermische Daten	9
10	Installation	9

Ergänzende Dokumentation:

- Betriebsanleitungen VEGAMET 841, 842, 861, 862
- EU-Baumusterprüfbescheinigung DEMKO 19 ATEX 2144 (Document ID: 61271)
- EU-Konformitätserklärung (Document ID: 61837)

Redaktionsstand: 2019-06-17

DE	Sicherheitshinweise für den Einsatz in explosionsgefährdeten Bereichen
EN	Safety instructions for the use in hazardous areas
FR	Consignes de sécurité pour une application en atmosphères explosibles
IT	Normative di sicurezza per l'impiego in luoghi con pericolo di esplosione
ES	Instrucciones de seguridad para el empleo en áreas con riesgo de explosión
PT	Normas de segurança para utilização em zonas sujeitas a explosão
NL	Veiligheidsaanwijzingen voor gebruik op plaatsen waar ontploffingsgevaar kan heersen
SV	Säkerhetsanvisningar för användning i explosionsfarliga områden
DA	Sikkerhedsforskrifter til anvendelse i explosionsfarlig atmosfære
FI	Turvallisuusohjeet räjähdysvaarallisissa tiloissa käyttöä varten
EL	Υποδείξεις ασφαλείας για τη χρησιμοποίηση σε περιοχές που υπάρχει κίνδυνος έκρηξης

DE	Die vorliegenden Sicherheitshinweise sind im Download unter www.vega.com standardmäßig in den Sprachen deutsch, englisch, französisch und spanisch verfügbar. Weitere EU-Landes-sprachen stellt VEGA nach Anforderungen zur Verfügung.
EN	These safety instructions are available as a standard feature in the download area under www.vega.com in the languages German, English, French and Spanish. Further EU languages will be made available by VEGA upon request.
FR	Les présentes consignes de sécurité sont disponibles au téléchargement sous www.vega.com en standard en allemand, en anglais, en français et en espagnol. VEGA met à disposition d'autres langues de l'Union Européenne selon les exigences.
ES	Las indicaciones de seguridad presentes están disponibles en la zona de descarga de www.vega.com de forma estándar en los idiomas inglés, francés y español. VEGA pone a disposición otros idiomas de la UE cuando son requeridos.

1 Geltung

Diese Sicherheitshinweise gelten für die Geräte:

- VEGAMET 841
- VEGAMET 842
- VEGAMET 861
- VEGAMET 862

Gemäß der Zulassung EU-Baumusterprüfbescheinigung DEMKO 19 ATEX 2144, als Zugehörige Betriebsmittel (Bescheinigungsnummer auf dem Typschild) und für alle Geräte mit dem Sicherheits-hinweis 61270.

Die Zündschutzkennzeichnung sowie die zugrundeliegenden Normenstände können aus oben genannten Zertifikaten entnommen werden:

Zündschutzkennzeichen:

- II (1) G [Ex ia Ga] IIC
- II (1) D [Ex ia Da] IIIC

2 Gerätekonfiguration/-eigenschaften

Die detaillierten Gerätekonfigurationen können mit Hilfe der Seriennummersuche auf unserer Homepage abgerufen werden.

Gehen Sie auf "www.vega.com" und geben Sie im Suchfeld die Seriennummer Ihres Gerätes ein.

Alternativ finden Sie alles über Ihr Smartphone:

- VEGA Tools-App aus dem "Apple App Store", "Google Play Store" oder "Baidu Store" herunterladen
- DataMatrix-Code auf dem Typschild des Gerätes scannen oder
- Seriennummer manuell in die App eingeben

3 Allgemeines

Die ein- und zweikanaligen Steuergeräte VEGAMET 841, 842, 861, 862 sind ideal für einfache Regulations- und Steuerungsaufgaben in allen Industriebereichen für Nicht-Ex- oder Ex-Anwendungen zum Anschluss von ein oder zwei 4 ... 20 mA-Sensoren.

Sie dienen als Anzeige für kontinuierliche Sensoren und können gleichzeitig als (Ex)Speisegerät für die angeschlossene Sensorik dienen.

Die Einstellung ist einfach Vor-Ort-Bedienung mittels manueller Bedienung oder remote durch Smartphone/Tablet und PC/Laptop mittels Bluetooth Smart möglich.

Es sind keine weiteren Schnittstellen an den Steuergeräten vorhanden. Die Geräte können im Feld (Feldmontage mittels Rohr-/Wandmontage) eingesetzt werden.

Die Betriebsanleitung sowie die zutreffenden, für den Explosionsschutz gültigen Errichtungsvorschriften bzw. Normen für elektrische Anlagen sind grundsätzlich zu beachten.

Die Errichtung von explosionsgeschützten Anlagen muss grundsätzlich durch Fachpersonal vorgenommen werden.

4 Anwendungsbereich, Einsatz in Gas- und Staubatmosphären

Zugehöriges Betriebsmittel

Die Steuergeräte VEGAMET 841, 842, 861, 862 dürfen außerhalb von explosionsgefährdeten Bereichen als Zugehörige Betriebsmittel errichtet und betrieben werden.

5 Sicherer Betrieb

Allgemeine Betriebsbedingungen

- Gerät nicht außerhalb der elektrischen, thermischen und mechanischen Angaben des Herstellers betreiben

Anschlussbedingungen

- Die Anschlussleitung des VEGAMET 841, 842, 861, 862 ist fest und so zu verlegen, dass sie hinreichend gegen Beschädigungen geschützt ist
- Beträgt die Temperatur an den Einführungsteilen mehr als 70 °C müssen entsprechende temperaturbeständige Anschlussleitungen verwendet werden

6 Wichtige Hinweise für die Montage und Wartung

Allgemeine Hinweise

Für die Montage, die elektrische Installation, die Inbetriebnahme und die Wartung des Gerätes müssen folgende Voraussetzungen erfüllt werden:

- Das Personal muss über die Qualifikation entsprechend seiner Funktion und Tätigkeit verfügen
- Das Personal muss im Explosionsschutz ausgebildet sein
- Das Personal muss mit den entsprechenden gültigen Vorschriften vertraut sein, z. B. Projektierung und Errichtung entsprechend der EN 60079-14
- Bei Arbeiten am Gerät (Montage, Installation, Wartung) ist sicherzustellen, dass keine explosionsfähige Atmosphäre vorhanden ist, wenn möglich, Versorgungsstromkreise spannungslos schalten
- Gerät entsprechend den Herstellerangaben, der EU-Baumusterprüfbescheinigung und entsprechend den gültigen Vorschriften, Regeln und Normen installieren
- Veränderungen am Gerät können den Explosionsschutz und somit die Sicherheit beeinträchtigen
- Veränderungen dürfen nur durch von der Firma VEGA autorisiertes Personal durchgeführt werden
- Nur zugelassene Ersatzteile verwenden
- Für den Ein- und Anbau von in den Zulassungsunterlagen nicht enthaltenen Komponenten sind nur solche zugelassen, die dem auf dem Deckblatt angegebenen Normenstand technisch entsprechen. Sie müssen für die Einsatzbedingungen geeignet sein und eine gesonderte Bescheinigung besitzen. Die besonderen Bedingungen der Komponenten sind zu beachten und die Komponenten sind ggf. mit in die Typprüfung einzubeziehen. Dies gilt auch für die bereits in der technischen Beschreibung genannten Komponenten.

Montage

Bei der Gerätemontage ist zu beachten:

- Mechanische Beschädigungen am Gerät sind zu vermeiden
- Mechanische Reibungen sind zu vermeiden

Wartung

Zur Sicherstellung der Funktion des Gerätes wird eine periodische Sichtkontrolle empfohlen auf:

- Sichere Montage
- Keine mechanischen Beschädigungen oder Korrosion
- Durchgescheuerte oder anderweitig beschädigte Leitungen
- Keine lockere Verbindungen der Leitungsanschlüsse, Potenzialausgleichsanschlüsse
- Korrekte und eindeutig gekennzeichnete Leitungsverbindungen

Eigensicherheit "i"

- Gültige Vorschriften für die Zusammenschaltung von eigensicheren Stromkreisen beachten
- Das Gerät ist ausschließlich für den Anschluss an bescheinigte, eigensichere Betriebsmittel geeignet
- Wird der eigensichere Stromkreis in staubexplosionsgefährdete Bereiche der Zone 20 oder 21 geführt, ist sicherzustellen, dass die Betriebsmittel, die an diesen Stromkreisen angeschlossen werden, die Anforderungen der Kategorie 1D (EPL Da-Betriebsmittel) bzw. 2D (EPL Db-Betriebsmittel) erfüllen und entsprechend zertifiziert sind

7 Elektrische Daten

VEGAMET 841, 842

Nicht eigensicherer Stromkreis

Versorgungsstromkreis:	
Klemmen 91[+, L], 92[-, N]	$U = 24 \dots 65 \text{ V DC } (-15 \dots +10 \%)$ $P = 4 \text{ W (VEGAMET 841), } 5 \text{ W (VEGAMET 842)}$ $U = 100 \dots 230 \text{ V AC } (-15 \dots +10 \%), 50/60 \text{ Hz}$ $P = 13 \text{ VA (VEGAMET 841), } 15 \text{ VA (VEGAMET 842)}$ $U_m = 253 \text{ V AC}$
Relaisausgang:	
Relais 1: Klemmen 61, 62, 63	1 A AC ($\cos \phi > 0,9$), 250 V AC, 250 VA
Relais 2: Klemmen 64, 65, 66	1 A DC, 60 V DC, 40 W
Relais 3: Klemmen 67, 68, 69	$U_m = 253 \text{ V AC}$
Stromausgangskreis:	
$I_{\text{out } 1}$, Klemmen 41[+], 42[-] Zusätzlich nur VEGAMET 842: $I_{\text{out } 2}$, Klemmen 43[+], 44[-]	$I = 0/4 \dots 20 \text{ mA}$ $U \leq 16 \text{ V DC}$ $\text{Last} \leq 500 \text{ Ohm}$ $U_m = 253 \text{ V AC}$

Eigensicherer Stromkreis

Versorgungs- und Signalstromkreis:	
4 ... 20 mA-Sensor 1: Klemmen 1[+], 2[-] Zusätzlich nur VEGAMET 842: 4 ... 20 mA-Sensor 2: Klemmen 4[+], 5[-]	In Zündschutzart Eigensicherheit Ex ia IIC, IIB/IIIC. Zum Anschluss an einen bescheinigten, eigensicheren Stromkreis. $U_o \leq 23,3 \text{ V DC}$ $I_o \leq 109,8 \text{ mA}$ $P_o \leq 639,6 \text{ mW}$ Kennlinie: linear C_i vernachlässigbar klein L_i vernachlässigbar klein Die in der Tabelle angegebenen Maximalwerte können als konzentrierte Kapazitäten und konzentrierte Induktivitäten verwendet werden. Die Werte für IIC und IIB sind auch für staubexplosionsgefährdete Bereiche zulässig.

Ex ia	IIC		IIB, IIIC		IIA
Zulässige äußere Induktivität L_o	0,2 mH	0,5 mH	0,5 mH	2 mH	10 mH
Zulässige äußere Kapazität C_o	120 nF	88 nF	580 nF	470 nF	770 nF

VEGAMET 861, 862

Nicht eigensicherer Stromkreis

Versorgungsstromkreis:	
Klemmen 91[+, L], 92[-, N]	$U = 24 \dots 65 \text{ V DC } (-15 \dots +10 \%)$ $P = 6 \text{ W (VEGAMET 861), } 7 \text{ W (VEGAMET 862)}$ $U = 100 \dots 230 \text{ V AC } (-15 \dots +10 \%), 50/60 \text{ Hz}$ $P = 17 \text{ VA (VEGAMET 861), } 19 \text{ VA (VEGAMET 862)}$ $U_m = 253 \text{ V AC}$

Relaisausgang:	
Relais 1: Klemmen 61, 62, 63 Relais 2: Klemmen 64, 65, 66 Relais 3: Klemmen 67, 68, 69 Relais 4: Klemmen 70, 71, 72 Zusätzlich nur VEGAMET 862: Relais 5: Klemmen 73, 74, 75 Relais 6: Klemmen 76, 77, 78	$1 \text{ A AC } (\cos \phi > 0,9), 250 \text{ V AC}, 250 \text{ VA}$ $1 \text{ A DC}, 60 \text{ V DC}, 40 \text{ W}$ $U_m = 253 \text{ V AC}$

Stromausgangskreis:	
$I_{out} 1$, Klemmen 41[+], 42[-] Zusätzlich nur VEGAMET 862: $I_{out} 2$, Klemmen 43[+], 44[-] $I_{out} 3$, Klemmen 45[+], 46[-]	$I = 0/4 \dots 20 \text{ mA}$ $U \leq 16 \text{ V DC}$ $Last \leq 500 \text{ Ohm}$ $U_m = 253 \text{ V AC}$

Digitaleingangskreis:	
Digital IN 1, Klemmen 21, 22, 23 Digital IN 2, Klemmen 24, 25, 26 Zusätzlich nur VEGAMET 862: Digital IN 3, Klemmen 27, 28, 29 Digital IN 4, Klemmen 30, 31, 32	$U_{\max}$ 30 V DC $I_{\max}$ 30 mA

Eigensicherer Stromkreis

Versorgungs- und Signalstromkreis:	
4 ... 20 mA-Sensor 1: Klemmen 1[+], 2[-] Zusätzlich nur VEGAMET 862: 4 ... 20 mA-Sensor 2: Klemmen 4[+], 5[-]	In Zündschutzart Eigensicherheit Ex ia IIC, IIB/IIIC. Zum Anschluss an einen bescheinigten, eigensicheren Stromkreis. $U_o \leq 23,3$ V DC $I_o \leq 111,3$ mA $P_o \leq 648,4$ mW Kennlinie: linear C_i vernachlässigbar klein L_i vernachlässigbar klein Die in der Tabelle angegebenen Maximalwerte können als konzentrierte Kapazitäten und konzentrierte Induktivitäten verwendet werden. Die Werte für IIC und IIB sind auch für staubexplosionsgefährdete Bereiche zulässig.

Ex ia	IIC		IIB, IIIC		IIA
Zulässige äußere Induktivität L_o	0,2 mH	0,5 mH	0,5 mH	2 mH	10 mH
Zulässige äußere Kapazität C_o	120 nF	88 nF	580 nF	470 nF	760 nF

Die eigensicheren Stromkreise des VEGAMET 841, 842, 861, 862 sind galvanisch von Erde getrennt.

Die eigensicheren Stromkreise des VEGAMET 841, 842, 861, 862 sind bis zu einem Spitzenwert von 375 V sicher von den nichteigensicheren Stromkreisen getrennt.

Die maximale Spannung an den nicht eigensicheren Stromkreisen darf im Fehlerfall 253 Vrms nicht überschreiten.

8 Mechanische Daten

Die folgenden mechanischen Daten gelten für alle Gehäuse- und Elektronikausführungen.

Mechanische Daten	
Schutzart (IEC/EN 60529)	TYPE 4X, IP66/IP67
Anschlussquerschnitt	0,25 ... 2,5 mm ²
Überspannungskategorie	II
Verschmutzungsgrad	4

61270-01-191219

9 Thermische Daten

Zulässige Umgebungstemperaturen

Zulässige Umgebungstemperatur am Einbauort eines Gerätes	Umgebungstemperatur (Ta)
als Zugehörige Betriebsmittel	-40 ... +60 °C (-40 ... +140 °F)

10 Installation

Die Steuergeräte VEGAMET 841, 842, 861, 862 als zugehöriges Betriebsmittel müssen außerhalb von explosionsgefährdeten Bereichen montiert und betrieben werden.

Wird der eigensichere Stromkreis in staubexplosionsgefährdete Bereiche der Zone 20 oder 21 geführt, ist sicherzustellen, dass die Betriebsmittel, die an diesen Stromkreisen angeschlossen werden, die Anforderungen der Kategorie 1D (EPL Da-Betriebsmittel) bzw. 2D (EPL Db-Betriebsmittel) erfüllen und entsprechend zertifiziert sind.

Contents

1	Area of applicability	12
2	Device configuration/-properties	12
3	General information	12
4	Application area, use in gas and dust atmospheres.....	12
5	Safe operating mode	13
6	Important information for mounting and maintenance.....	13
7	Electrical data.....	14
8	Mechanical data	16
9	Thermal data	16
10	Installation.....	16

Supplementary documentation:

- Operating instructions VEGAMET 841, 842, 861, 862
- EU type approval certificate DEMKO 19 ATEX 2144 (Document ID: 61271)
- EU declaration of conformity (Document ID: 61837)

Editing status: 2019-06-17

DE	Sicherheitshinweise für den Einsatz in explosionsgefährdeten Bereichen
EN	Safety instructions for the use in hazardous areas
FR	Consignes de sécurité pour une application en atmosphères explosibles
IT	Normative di sicurezza per l'impiego in luoghi con pericolo di esplosione
ES	Instrucciones de seguridad para el empleo en áreas con riesgo de explosión
PT	Normas de segurança para utilização em zonas sujeitas a explosão
NL	Veiligheidsaanwijzingen voor gebruik op plaatsen waar ontploffingsgevaar kan heersen
SV	Säkerhetsanvisningar för användning i explosionsfarliga områden
DA	Sikkerhedsforskrifter til anvendelse i explosionsfarlig atmosfære
FI	Turvallisuusohjeet räjähdysvaarallisissa tiloissa käyttöä varten
EL	Υποδείξεις ασφαλείας για τη χρησιμοποίηση σε περιοχές που υπάρχει κίνδυνος έκρηξης

DE	Die vorliegenden Sicherheitshinweise sind im Download unter www.vega.com standardmäßig in den Sprachen deutsch, englisch, französisch und spanisch verfügbar. Weitere EU-Landes-sprachen stellt VEGA nach Anforderungen zur Verfügung.
EN	These safety instructions are available as a standard feature in the download area under www.vega.com in the languages German, English, French and Spanish. Further EU languages will be made available by VEGA upon request.
FR	Les présentes consignes de sécurité sont disponibles au téléchargement sous www.vega.com en standard en allemand, en anglais, en français et en espagnol. VEGA met à disposition d'autres langues de l'Union Européenne selon les exigences.
ES	Las indicaciones de seguridad presentes están disponibles en la zona de descarga de www.vega.com de forma estándar en los idiomas inglés, francés y español. VEGA pone a disposición otros idiomas de la UE cuando son requeridos.

1 Area of applicability

These safety instructions apply to the devices:

- VEGAMET 841
- VEGAMET 842
- VEGAMET 861
- VEGAMET 862

In accordance with the EU type approval certificate DEMKO 19 ATEX 2144, as associated equipment (certificate number on type plate) and for all devices with safety instruction 61270.

The classification as well as the respective standards are stated in the above certificates:

Type of protection marking:

- II (1) G [Ex ia Ga] IIC
- II (1) D [Ex ia Da] IIIC

2 Device configuration/-properties

The detailed device configurations can be retrieved using the serial number search on our homepage.

Move to "www.vega.com" and enter in the search field the serial number of your instrument.

Alternatively, you can find all via your smartphone:

- Download the VEGA Tools app from the "*Apple App Store*", "*Google Play Store*" or "*Baidu Store*"
- Scan the DataMatrix code on the type label of the instrument or
- Enter the serial number manually in the app

3 General information

The single and double channel controllers VEGAMET 841, 842, 861, 862 are ideal for simple control tasks in all industrial areas for non-Ex or Ex applications for the connection of one or two 4 ... 20 mA sensors.

They serve as a display for continuous sensors and can also be used as a (Ex)power supply unit for the connected sensors.

The setting can be easily done on site using manual operation or remotely using smartphone/tablet and PC/Laptop using Bluetooth Smart.

There are no further interfaces on the controllers. The devices can be used in the field (field mounting using tube/wall mounting).

The operating instructions as well as the installation regulations or standards that apply for explosion protection of electrical systems must generally be observed.

The installation of explosion-protected systems must always be carried out by qualified personnel.

4 Application area, use in gas and dust atmospheres

Associated apparatus

The controllers VEGAMET 841, 842, 861, 862 may be installed and operated outside of hazardous areas as associated equipment.

5 Safe operating mode

General operating conditions

- Do not operate the instrument outside the electrical, thermal and mechanical specifications of the manufacturer

Connection conditions

- The connection cable of VEGAMET 841, 842, 861, 862 has to be wired fix and in such a way that damages can be excluded
- If the temperature at the inlet components exceeds 70 °C, temperature-resistant connection cables must be used

6 Important information for mounting and maintenance

General instructions

The following requirements must be fulfilled for mounting, electrical installation, setup and maintenance of the instrument:

- The staff must be qualified according the respective tasks
- The staff must be trained in explosion protection
- The staff must be familiar with the respectively valid regulations, e.g. planning and installation acc. to EN 60079-14
- Make sure when working on the instrument (mounting, installation, maintenance) that there is no explosive atmosphere present, the supply circuits should be voltage-free, if possible.
- The instrument has to be mounted according to the manufacturer specifications, the EU type approval certificate and the valid regulations and standards
- Modifications on the instrument can influence the explosion protection and hence the safety
- Modifications must only be carried out by employees authorized by VEGA company
- Use only approved spare parts
- Components for installation and connection not included in the approval documents are only permitted if these correspond technically to the latest standard mentioned on the cover sheet. They must be suitable for the application conditions and have a separate certificate. The special conditions of the components must be noted and if necessary, the components must be integrated in the type test. This applies also to the components already mentioned in the technical description.

Mounting

Keep in mind for instrument mounting

- Mechanical damage on the instrument must be avoided
- Mechanical friction must be avoided

Maintenance

To ensure the functionality of the device, periodic visual inspection is recommended for:

- Secure mounting
- No mechanical damages or corrosion
- Worn or otherwise damaged cables
- The potential equalization terminal must be secured against loosening
- Correct and clearly marked cable connections

Intrinsic safety "i"

- Observe the valid regulations for the interconnection of intrinsically safe circuits.
- The instrument is only suitable for connection to certified, intrinsically safe instruments

- If the intrinsically safe circuit is led into dust-explosive areas of zone 20 or 21, please make sure that the instruments connected to these circuits meet the requirements of category 1D (EPL Da instruments) or 2D (EPL Db instruments) and are certified respectively

7 Electrical data

VEGAMET 841, 842

Non-intrinsically safe circuit

Supply circuit:	
Terminals 91[+, L], 92[-, N]	$U = 24 \dots 65 \text{ V DC } (-15 \dots +10 \%)$ $P = 4 \text{ W (VEGAMET 841), } 5 \text{ W (VEGAMET 842)}$ $U = 100 \dots 230 \text{ V AC } (-15 \dots +10 \%), 50/60 \text{ Hz}$ $P = 13 \text{ VA (VEGAMET 841), } 15 \text{ VA (VEGAMET 842)}$ $U_m = 253 \text{ V AC}$

Relay output:	
Relay 1: terminals 61, 62, 63	1 A AC ($\cos \phi > 0.9$), 250 V AC, 250 VA
Relay 2: terminals 64, 65, 66	1 A DC, 60 V DC, 40 W
Relay 3: terminals 67, 68, 69	$U_m = 253 \text{ V AC}$

Current output circuit:	
$I_{out} 1$, terminals 41[+], 42[-] In addition only VEGAMET 842: $I_{out} 2$, terminals 43[+], 44[-]	$I = 0/4 \dots 20 \text{ mA}$ $U \leq 16 \text{ V DC}$ $\text{Load} \leq 500 \text{ Ohm}$ $U_m = 253 \text{ V AC}$

Intrinsically safe circuit

Supply and signal circuit:	
4 ... 20 mA-Sensor 1: Terminals 1[+], 2[-] In addition only VEGAMET 842: 4 ... 20 mA sensor 2: Terminals 4[+], 5[-]	In type of protection intrinsic safety Ex ia IIC, IIB/IIIC. For connection to a certified, intrinsically safe circuit. $U_o \leq 23.3 \text{ V DC}$ $I_o \leq 109.8 \text{ mA}$ $P_o \leq 639.6 \text{ mW}$ Characteristics: linear C_i negligibly small L_i negligibly small The maximum values given in the table can be used as concentrated capacitances and concentrated inductances. The values for IIC and IIB are also permissible for dust explosive areas.

Ex ia	IIC		IIB, IIIC		IIA
Permissible external inductance L_o	0.2 mH	0.5 mH	0.5 mH	2 mH	10 mH

Ex ia	IIC		IIB, IIC		IIA
Permissible external capacitance C ₀	120 nF	88 nF	580 nF	470 nF	770 nF

VEGAMET 861, 862

Non-intrinsically safe circuit

Supply circuit:	
Terminals 91[+, L], 92[-, N]	$U = 24 \dots 65 \text{ V DC } (-15 \dots +10 \%)$ $P = 6 \text{ W (VEGAMET 861), } 7 \text{ W (VEGAMET 862)}$ $U = 100 \dots 230 \text{ V AC } (-15 \dots +10 \%), 50/60 \text{ Hz}$ $P = 17 \text{ VA (VEGAMET 861), } 19 \text{ VA (VEGAMET 862)}$ $U_m = 253 \text{ V AC}$

Relay output:	
Relay 1: terminals 61, 62, 63 Relay 2: terminals 64, 65, 66 Relay 3: terminals 67, 68, 69 Relay 4: terminals 70, 71, 72 In addition only VEGAMET 862: Relay 5: terminals 73, 74, 75 Relay 6: terminals 76, 77, 78	$1 \text{ A AC (cos phi} > 0.9), 250 \text{ V AC, } 250 \text{ VA}$ $1 \text{ A DC, } 60 \text{ V DC, } 40 \text{ W}$ $U_m = 253 \text{ V AC}$

Current output circuit:	
I_{out1} , terminals 41[+], 42[-] In addition only VEGAMET 862: I_{out2} , terminals 43[+], 44[-] I_{out3} , terminals 45[+], 46[-]	$I = 0/4 \dots 20 \text{ mA}$ $U \leq 16 \text{ V DC}$ $\text{Load} \leq 500 \text{ Ohm}$ $U_m = 253 \text{ V AC}$

Digital input circuit:	
Digital IN 1, terminals 21, 22, 23 Digital IN 2, terminals 24, 25, 26 In addition only VEGAMET 862: Digital IN 3, terminals 27, 28, 29 Digital IN 4, terminals 30, 31, 32	$U_{max} 30 \text{ V DC}$ $I_{max} 30 \text{ mA}$

Intrinsically safe circuit

Supply and signal circuit:	
4 ... 20 mA-Sensor 1: Terminals 1[+], 2[-] In addition only VEGAMET 862: 4 ... 20 mA sensor 2: Terminals 4[+], 5[-]	In type of protection intrinsic safety Ex ia IIC, IIB/IIIC. For connection to a certified, intrinsically safe circuit. $U_o \leq 23.3 \text{ V DC}$ $I_o \leq 111.3 \text{ mA}$ $P_o \leq 648.4 \text{ mW}$ Characteristics: linear C_i negligibly small L_i negligibly small The maximum values given in the table can be used as concentrated capacitances and concentrated inductances. The values for IIC and IIB are also permissible for dust explosive areas.

Ex ia	IIC		IIB, IIIC		IIA
Permissible external inductance L_o	0.2 mH	0.5 mH	0.5 mH	2 mH	10 mH
Permissible external capacitance C_o	120 nF	88 nF	580 nF	470 nF	760 nF

The intrinsically safe circuits of VEGAMET 841, 842, 861, 862 are galvanically separated from ground.

The intrinsically safe circuits of the VEGAMET 841, 842, 861, 862 are reliably separated from the non-intrinsically safe circuit up to a peak value of 375 V.

The maximum voltage on the non-intrinsically safe circuits must not exceed 253 Vrms in the event of a fault.

8 Mechanical data

The following mechanical data are valid for all housing and electronics versions.

Mechanical data	
Protection (IEC/EN 60529)	TYPE 4X, IP66/IP67
Connection cross-section:	0.25 ... 2.5 mm ²
Overvoltage category	II
Pollution degree	4

9 Thermal data

Permissible ambient temperatures

Permissible ambient temperature at the installation location of an instrument	Ambient temperature (Ta)
As associated equipment	-40 ... +60 °C (-40 ... +140 °F)

10 Installation

Controllers VEGAMET 841, 842, 861, 862 as associated equipment must be mounted and operated

outside hazardous areas.

If the intrinsically safe circuit is led into dust-explosive areas of zone 20 or 21, please make sure that the instruments connected to these circuits meet the requirements of category 1D (EPL Da instruments) or 2D (EPL Db instruments) and are certified respectively.

Table des matières

1	Validité.....	20
2	Configuration / propriétés des appareils	20
3	Généralités	20
4	Domaine d'application, utilisation dans des atmosphères gazeuses et poussiéreuses ... 21	
5	Fonctionnement sécurisé	21
6	Instructions importantes pour le montage et l'entretien	21
7	Caractéristiques électriques	22
8	Caractéristiques mécaniques.....	24
9	Caractéristiques thermiques	25
10	Installation.....	25

Documentation complémentaire:

- Notices de mise en service VEGAMET 841, 842, 861, 862
- Certificat de contrôle de type UE DEMKO 19 ATEX 2144 (Document ID: 61271)
- Déclaration de conformité UE (ID du document : 61837)

Date de rédaction : 2019-06-17

DE	Sicherheitshinweise für den Einsatz in explosionsgefährdeten Bereichen
EN	Safety instructions for the use in hazardous areas
FR	Consignes de sécurité pour une application en atmosphères explosibles
IT	Normative di sicurezza per l'impiego in luoghi con pericolo di esplosione
ES	Instrucciones de seguridad para el empleo en áreas con riesgo de explosión
PT	Normas de segurança para utilização em zonas sujeitas a explosão
NL	Veiligheidsaanwijzingen voor gebruik op plaatsen waar ontploffingsgevaar kan heersen
SV	Säkerhetsanvisningar för användning i explosionsfarliga områden
DA	Sikkerhedsforskrifter til anvendelse i explosionsfarlig atmosfære
FI	Turvallisuusohjeet räjähdyksvaarallisissa tiloissa käyttöä varten
EL	Υποδείξεις ασφαλείας για τη χρησιμοποίηση σε περιοχές που υπάρχει κίνδυνος έκρηξης

DE	Die vorliegenden Sicherheitshinweise sind im Download unter www.vega.com standardmäßig in den Sprachen deutsch, englisch, französisch und spanisch verfügbar. Weitere EU-Landes-sprachen stellt VEGA nach Anforderungen zur Verfügung.
EN	These safety instructions are available as a standard feature in the download area under www.vega.com in the languages German, English, French and Spanish. Further EU languages will be made available by VEGA upon request.
FR	Les présentes consignes de sécurité sont disponibles au téléchargement sous www.vega.com en standard en allemand, en anglais, en français et en espagnol. VEGA met à disposition d'autres langues de l'Union Européenne selon les exigences.
ES	Las indicaciones de seguridad presentes están disponibles en la zona de descarga de www.vega.com de forma estándar en los idiomas inglés, francés y español. VEGA pone a disposición otros idiomas de la UE cuando son requeridos.

1 Validité

Les présentes consignes de sécurité concernent les appareils suivants :

- VEGAMET 841
- VEGAMET 842
- VEGAMET 861
- VEGAMET 862

Conformément à l'agrément de certificat de contrôle de type UE DEMKO 19 ATEX 2144, comme matériel correspondant (numéro de certificat sur la plaque signalétique) et pour tous les appareils avec la consigne de sécurité 61270.

L'identification de protection contre l'inflammation ainsi que les états normalisés sur lesquels elle se fonde figurent dans les certificats mentionnés ci-dessus :

Mode de protection :

- II (1) G [Ex ia Ga] IIC
- II (1) D [Ex ia Da] IIIC

2 Configuration / propriétés des appareils

Vous pouvez consulter la configuration détaillée de l'appareil au moyen de la recherche de numéros de série sur notre page d'accueil.

Rendez-vous sur "www.vega.com" et indiquez dans la zone de recherche le numéro de série de votre appareil.

Vous trouverez en alternative tout sur votre smartphone :

- Télécharger l'application VEGA Tools depuis l'"*Apple App Store*", le "*Google Play Store*" ou le "*Baidu Store*"
- Numériser le code DataMatrix situé sur la plaque signalétique de l'appareil ou
- Entrer le numéro de série manuellement dans l'application

3 Généralités

Les unités de commande à un ou deux canaux VEGAMET 841, 842, 861, 862 sont idéales pour les tâches de commande et de régulation simples pour les applications antidéflagrantes et non-antidéflagrantes dans tous les secteurs industriels pour le raccordement d'un ou deux capteurs 4 ... 20 mA.

Elles servent d'affichage pour les capteurs continus et peuvent simultanément faire office de bloc d'alimentation (Ex) pour la technique sensorielle raccordée.

L'ajustement peut être effectué localement simplement au moyen du réglage manuel ou à distance avec un smartphone/une tablette et un PC/un ordinateur portable via Bluetooth Smart.

Les unités de commande ne possèdent aucune autre interface. Les appareils peuvent être utilisés sur le terrain (montage terrain par montage mural/tubulaire).

La notice de mise en service et les règlements d'installation en vigueur concernant la protection Ex et les normes relatives aux installations électriques doivent être respectés.

Seul un personnel spécialisé et qualifié est autorisé à installer le matériel ou les groupes de matériel pour atmosphères protégées contre les explosions.

4 Domaine d'application, utilisation dans des atmosphères gazeuses et poussiéreuses

Matériel associé

Les unités de commande VEGAMET 841, 842, 861, 862 peuvent être mises en place et exploitées hors des zones antidéflagrantes comme matériel associé.

5 Fonctionnement sécurisé

Conditions de service générales

- Ne pas utiliser l'appareil hors des spécifications électriques, thermiques et mécaniques du fabricant

Conditions de raccordement

- Le câble de raccordement du VEGAMET 841, 842, 861, 862 doit être posé de manière fixe et de telle manière qu'il soit suffisamment protégé contre les endommagements.
- Si la température aux pièces d'introduction dépasse 70 °C, il faudra utiliser des lignes de raccordement adéquates et résistantes aux températures régnant sur le site

6 Instructions importantes pour le montage et l'entretien

Remarques générales

Pour le montage, l'installation électrique, la mise en service et l'entretien de l'appareil, les conditions suivantes doivent être réunies :

- Le personnel doit disposer des qualifications correspondant à ses fonctions et activités
- Le personnel doit être formé à la protection contre les explosions
- Le personnel doit être familier des dispositions en vigueur, par ex. sur la conception, sélection et construction d'installations électriques selon la norme EN 60079-14
- Lors des opérations sur l'appareil (montage, installation, entretien), il est impératif de s'assurer de l'absence totale d'atmosphère explosible, et si possible mettre les circuits électriques d'alimentation hors tension.
- Installer l'appareil conformément aux indications du fabricant, au certificat de contrôle de type UE et aux réglementations en vigueur.
- Les modifications de l'appareil peuvent affecter la protection anti-déflagrante et ainsi la sécurité
- Le personnel de la Société VEGA est le seul habilité à procéder à des modifications
- Utiliser uniquement des pièces de rechange homologuées
- Seuls des composants qui satisfont techniquement la situation des normes indiquée sur la page de garde sont autorisés pour le montage et l'ajout de composants non inclus dans les dossiers d'agrément. Ils doivent être appropriés pour les conditions d'utilisation et être assortis d'un certificat spécial. Respecter impérativement les conditions particulières des composants, lesquels doivent le cas échéant être intégrés dans le contrôle du type. Cela concerne également les composants mentionnés dans la description technique.

Montage

Lors du montage de l'appareil, respecter les consignes suivantes :

- Éviter les dommages mécaniques à l'appareil
- Éviter les frottements mécaniques

Maintenance

Pour garantir le fonctionnement de l'appareil, un contrôle visuel périodique est recommandé concernant :

- Fiabilité du montage
- Aucune détérioration mécanique ou corrosion
- Câbles usés ou autrement détériorés
- Aucune connexion lâche des raccordements de conduite, raccordements de compensation de potentiel
- Connexions de câbles correctes et clairement marquées

Sécurité intrinsèque "i"

- Respecter les règles en vigueur pour l'interconnexion des circuits courant à sécurité intrinsèque
- L'appareil est exclusivement destiné au raccordement sur des matériels certifiés à sécurité intrinsèque
- Si le circuit courant à sécurité intrinsèque passe dans des atmosphères explosibles de zone 20 ou 21, s'assurer que le matériel raccordé à ces circuits courant satisfait aux exigences des catégories 1D (matériel EPL Da) ou 2D (matériel EPL Db) et qu'il est certifié en conséquence.

7 Caractéristiques électriques

VEGAMET 841, 842

Circuit courant non de sécurité intrinsèque

Circuit d'alimentation électrique:	
Bornes 91[+, L], 92[-, N]	$U = 24 \dots 65 \text{ V DC } (-15 \dots +10 \%)$ $P = 4 \text{ W (VEGAMET 841), } 5 \text{ W (VEGAMET 842)}$ $U = 100 \dots 230 \text{ V AC } (-15 \dots +10 \%), 50/60 \text{ Hz}$ $P = 13 \text{ VA (VEGAMET 841), } 15 \text{ VA (VEGAMET 842)}$ $U_m = 253 \text{ V AC}$

Sortie relais:	
Relais 1: Bornes 61, 62, 63	1 A AC ($\cos \phi > 0,9$), 250 V AC, 250 VA
Relais 2: Bornes 64, 65, 66	1 A DC, 60 V DC, 40 W
Relais 3: Bornes 67, 68, 69	$U_m = 253 \text{ V AC}$

Circuit de sortie courant :	
$I_{out} 1$, Bornes 41[+], 42[-] En supplément uniquement VEGAMET 842 : $I_{out} 2$, Bornes 43[+], 44[-]	$I = 0/4 \dots 20 \text{ mA}$ $U \leq 16 \text{ V DC}$ $\text{Charge} \leq 500 \text{ Ohm}$ $U_m = 253 \text{ V AC}$

Circuit courant de sécurité intrinsèque

Circuit d'alimentation et signal :	
Capteur 4 ... 20 mA 1 : bornes 1[+], 2[-] En supplément uniquement VEGAMET 842 : Capteur 4 ... 20 mA 2 : bornes 4[+], 5[-]	En mode de protection sécurité intrinsèque Ex ia IIC, IIB/IIC. Pour le raccordement à un circuit courant de sécurité intrinsèque certifié. $U_o \leq 23,3 \text{ V DC}$ $I_o \leq 109,8 \text{ mA}$ $P_o \leq 639,6 \text{ mW}$ Courbe caractéristique : linéaire C_i petite valeur négligeable L_i petite valeur négligeable Les valeurs maximales indiquées dans le tableau peuvent être utilisées comme capacités concentrées et inductances concentrées. Les valeurs pour IIC et IIB sont aussi autorisées pour des zones explosibles poussiéreuses.

Ex ia	IIC		IIB, IIC		IIA
Inductance externe tolérée L_o	0,2 mH	0,5 mH	0,5 mH	2 mH	10 mH
Capacité externe tolérée C_o	120 nF	88 nF	580 nF	470 nF	770 nF

VEGAMET 861, 862

Circuit courant non de sécurité intrinsèque

Circuit d'alimentation électrique:	
Bornes 91[+, L], 92[-, N]	$U = 24 \dots 65 \text{ V DC } (-15 \dots +10 \%)$ $P = 6 \text{ W (VEGAMET 861), } 7 \text{ W (VEGAMET 862)}$ $U = 100 \dots 230 \text{ V AC } (-15 \dots +10 \%), 50/60 \text{ Hz}$ $P = 17 \text{ VA (VEGAMET 861), } 19 \text{ VA (VEGAMET 862)}$ $U_m = 253 \text{ V AC}$

Sortie relais:	
Relais 1: Bornes 61, 62, 63 Relais 2: Bornes 64, 65, 66 Relais 3: Bornes 67, 68, 69 Relais 4: Bornes 70, 71, 72 En supplément uniquement VEGAMET 862 : Relais 5: Bornes 73, 74, 75 Relais 6: Bornes 76, 77, 78	$1 \text{ A AC (cos phi} > 0,9), 250 \text{ V AC, } 250 \text{ VA}$ $1 \text{ A DC, } 60 \text{ V DC, } 40 \text{ W}$ $U_m = 253 \text{ V AC}$

Circuit de sortie courant :	
I_{out} 1, Bornes 41[+], 42[-] En supplément uniquement VEGAMET 862 : I_{out} 2, Bornes 43[+], 44[-] I_{out} 3, Bornes 45[+], 46[-]	$I = 0/4 \dots 20 \text{ mA}$ $U \leq 16 \text{ V DC}$ Charge $\leq 500 \text{ Ohm}$ $U_m = 253 \text{ V AC}$
Circuit d'entrée numérique :	
Digital IN 1, bornes 21, 22, 23 Digital IN 2, bornes 24, 25, 26 En supplément uniquement VEGAMET 862 : Digital IN 3, bornes 27, 28, 29 Digital IN 4, bornes 30, 31, 32	$U_{max} 30 \text{ V DC}$ $I_{max} 30 \text{ mA}$

Circuit courant de sécurité intrinsèque

Circuit d'alimentation et signal :	
Capteur 4 ... 20 mA 1 : bornes 1[+], 2[-] En supplément uniquement VEGAMET 862 : Capteur 4 ... 20 mA 2 : bornes 4[+], 5[-]	En mode de protection sécurité intrinsèque Ex ia IIC, IIB/IIIC. Pour le raccordement à un circuit courant de sécurité intrinsèque certifié. $U_o \leq 23,3 \text{ V DC}$ $I_o \leq 111,3 \text{ mA}$ $P_o \leq 648,4 \text{ mW}$ Courbe caractéristique : linéaire C_i petite valeur négligeable L_i petite valeur négligeable Les valeurs maximales indiquées dans le tableau peuvent être utilisées comme capacités concentrées et inductances concentrées. Les valeurs pour IIC et IIB sont aussi autorisées pour des zones explosibles poussiéreuses.

Ex ia	IIC		IIB, IIIC		IIA
Inductance externe tolérée L_o	0,2 mH	0,5 mH	0,5 mH	2 mH	10 mH
Capacité externe tolérée C_o	120 nF	88 nF	580 nF	470 nF	760 nF

Les circuits électriques à sécurité intrinsèque du VEGAMET 841, 842, 861, 862 sont isolés galvaniquement de la terre.

Les circuits électriques à sécurité intrinsèque de VEGAMET 841, 842, 861, 862 sont séparés de manière sûr des circuits électriques sans sécurité intrinsèque jusqu'à 375 V.

La tension maximale sur les circuits électriques sans sécurité intrinsèque ne doit pas dépasser 253 Vms en cas de défaut.

8 Caractéristiques mécaniques

Les caractéristiques mécaniques suivantes sont valides pour toutes les versions de boîtiers et d'électronique.

Caractéristiques mécaniques	
Protection (IEC/EN 60529)	TYPE 4X, IP66/IP67
Section de raccordement	0,25 ... 2,5 mm ²
Catégorie de surtensions	II
Degré de pollution	4

9 Caractéristiques thermiques

Températures ambiantes admissibles

Température ambiante tolérée sur le lieu de montage d'un appareil	Température ambiante (Ta)
comme matériel associé	-40 ... +60 °C (-40 ... +140 °F)

10 Installation

Les unités de commande VEGAMET 841, 842, 861, 862 comme matériel associé doit être monté et utilisé en dehors des zones dangereuses.

Si le circuit courant à sécurité intrinsèque passe dans des atmosphères explosibles de zone 20 ou 21, s'assurer que le matériel raccordé à ces circuits courant satisfait aux exigences des catégories 1D (matériel EPL Da) ou 2D (matériel EPL Db) et qu'il est certifié en conséquence.

Índice

1 Vigencia	28
2 Configuración/propiedades del equipo	28
3 Informaciones generales	28
4 Campo de aplicación, uso en atmósferas de gas y polvo	28
5 Funcionamiento seguro	29
6 Indicaciones importantes para el montaje y mantenimiento	29
7 Datos eléctricos	30
8 Datos mecánicos	32
9 Datos térmicos	33
10 Instalación	33

Documentación adicional:

- Instrucciones de servicio VEGAMET 841, 842, 861, 862
- Certificado de examen de tipo UE DEMKO 19 ATEX 2144 (Document ID: 61271)
- Declaración de conformidad EU (Document ID: 61837)

Estado de redacción: 2019-06-17

DE	Sicherheitshinweise für den Einsatz in explosionsgefährdeten Bereichen
EN	Safety instructions for the use in hazardous areas
FR	Consignes de sécurité pour une application en atmosphères explosibles
IT	Normative di sicurezza per l'impiego in luoghi con pericolo di esplosione
ES	Instrucciones de seguridad para el empleo en áreas con riesgo de explosión
PT	Normas de segurança para utilização em zonas sujeitas a explosão
NL	Veiligheidsaanwijzingen voor gebruik op plaatsen waar ontploffingsgevaar kan heersen
SV	Säkerhetsanvisningar för användning i explosionsfarliga områden
DA	Sikkerhedsforskrifter til anvendelse i explosionsfarlig atmosfære
FI	Turvallisuusohjeet räjähdysvaarallisissa tiloissa käyttöä varten
EL	Υποδείξεις ασφαλείας για τη χρησιμοποίηση σε περιοχές που υπάρχει κίνδυνος έκρηξης

DE	Die vorliegenden Sicherheitshinweise sind im Download unter www.vega.com standardmäßig in den Sprachen deutsch, englisch, französisch und spanisch verfügbar. Weitere EU-Landes-sprachen stellt VEGA nach Anforderungen zur Verfügung.
EN	These safety instructions are available as a standard feature in the download area under www.vega.com in the languages German, English, French and Spanish. Further EU languages will be made available by VEGA upon request.
FR	Les présentes consignes de sécurité sont disponibles au téléchargement sous www.vega.com en standard en allemand, en anglais, en français et en espagnol. VEGA met à disposition d'autres langues de l'Union Européenne selon les exigences.
ES	Las indicaciones de seguridad presentes están disponibles en la zona de descarga de www.vega.com de forma estándar en los idiomas inglés, francés y español. VEGA pone a disposición otros idiomas de la UE cuando son requeridos.

1 Vigencia

Las presentes instrucciones de seguridad son validas para los equipos:

- VEGAMET 841
- VEGAMET 842
- VEGAMET 861
- VEGAMET 862

De acuerdo con el certificado de examen de tipo de la UE DEMKO 19 ATEX 2144, como equipo correspondiente (Número de certificación en la placa de tipos) y para todos los instrumentos con la instrucción de seguridad 61270.

La marca de protección e y las normas correspondientes se encuentran en los certificados mencionados anteriormente:

Símbolo de protección e:

- II (1) G [Ex ia Ga] IIC
- II (1) D [Ex ia Da] IIIC

2 Configuración/propiedades del equipo

Las configuraciones detalladas de los equipos se pueden consultar con ayuda de la búsqueda de números de serie en nuestra página web.

Vaya a "www.vega.com" e introduzca el número de serie de su dispositivo en el campo de búsqueda.

Opcionalmente, también podrá encontrar todo lo relacionado con su smartphone:

- Descargar las aplicaciones VEGA Tools desde "*Apple App Store*", "*Google Play Store*" o "*Baidu Store*"
- Escanear DataMatrix-Code de la placa de tipos del instrumento o
- Entrar el número de serie manualmente en el App

3 Informaciones generales

Las unidades de control de uno y dos canales VEGAMET 841, 842, 861, 862 son ideales para tareas de regulación y control sencillas en todas las áreas industriales para aplicaciones no Ex o Ex para la conexión de uno o dos sensores de 4 ... 20 mA.

Sirven como indicación para sensores continuos y también pueden utilizarse como fuentes de alimentación (Ex) para los sensores conectados.

La configuración se puede hacer fácilmente en el sitio usando la operación manual o remotamente usando Smartphone/Tablet y PC/Laptop a través de Bluetooth Smart.

No hay más interfaces en los controladores. Los aparatos se pueden utilizar en el campo (montaje en campo con fijación en tubo/pared).

Hay que observar siempre el manual de instrucciones así como las especificaciones generales de montaje o normas para equipos eléctricos, aplicables para la protección contra explosión.

La instalación de equipos protegidos contra explosión tiene que ser realizada básicamente por personal especializado.

4 Campo de aplicación, uso en atmósferas de gas y polvo

Material correspondiente

Los controladores VEGAMET 841, 842, 861, 862 pueden instalarse y utilizarse como equipo correspondiente fuera de las zonas peligrosas.

5 Funcionamiento seguro

Condiciones de operación generales

- No operar ningún instrumento fuera de las especificaciones eléctricas, térmicas y mecánicas del fabricante

Condiciones de conexión

- Hay que tender y fijar cable de conexión del VEGAMET 841, 842, 861, 862 de forma tal que quede completamente protegido contra daños.
- Si la temperatura en las piezas de entrada es mayor de 70 °C, hay que emplear líneas de conexión adecuadas resistentes a la temperatura

6 Indicaciones importantes para el montaje y mantenimiento

Instrucciones generales

Para el montaje, la instalación eléctrica, la puesta en marcha y el mantenimiento del instrumento hay cumplir los requisitos siguientes:

- El personal debe tener las calificaciones de acuerdo a su función y actividad
- El personal tiene que estar entrenado en la protección contra explosión
- El personal debe estar familiarizado con la normativa vigente, por ejemplo, planificación y construcción de acuerdo con la norma EN 60079-14
- Cuando trabaje en el dispositivo (instalación, instalación, mantenimiento), asegúrese de que no haya atmósfera potencialmente explosiva; si es posible, desconecte los circuitos de la fuente de alimentación.
- Instale el dispositivo de acuerdo con las instrucciones del fabricante, el certificado de examen de tipo UE y las reglamentaciones, reglas y normas aplicables.
- Cambios en el instrumento pueden afectar la protección contra explosión y por lo tanto la seguridad
- Modificaciones solamente pueden ser realizada por personal autorizado por la empresa VEGA.
- Usar solo piezas de repuesto aprobadas
- Para el montaje y desmontaje de componentes no incluidos en los documentos de homologación, sólo se admiten aquellos componentes que corresponden técnicamente al estado estándar indicado en la portada. Deben ser adecuados para las condiciones de utilización y disponer de un certificado individual. Deben observarse las condiciones especiales de los componentes y, en caso necesario, estos deben incluirse en el ensayo de tipo. Esto también se aplica a los componentes mencionados anteriormente en la descripción técnica.

Montaje

Durante el montaje del instrumento, por favor tenga en cuenta:

- Hay que evitar daños mecánicos en el instrumento
- Hay que evitar fricción mecánica

Mantenimiento

Para asegurar el funcionamiento del instrumento se recomienda realizar un control visual periódico de los siguientes puntos:

- Montaje seguro
- Ningún deterioro mecánico o corrosión
- Líneas desgastadas o dañadas de otra manera
- Ninguna conexión floja de las conexiones de los cables, conexiones de compensación de potencial
- Conexiones de líneas marcadas de forma clara y correcta

Seguridad intrínseca "I"

- Observar las normas vigentes para la interconexión de circuitos de seguridad intrínseca.
- El equipo sólo es adecuado para la conexión a instrumentos de seguridad intrínseca certificados
- Si el circuito con seguridad intrínseca es conducido por áreas con riesgo de explosión a causa de los polvos las zonas 20 o 21, hay que asegurar que los medios de producción a conectar en esos circuitos, cumplan con los requisitos de las categorías 1D (Medio de producción EPL Da) o 2D (Medio de producción EPL Db) y estén certificados correspondientemente.

7 Datos eléctricos

VEGAMET 841, 842

Circuito sin seguridad intrínseca.

Circuito de alimentación:	
Terminales 91[+, L], 92[-, N]	$U = 24 \dots 65 \text{ V DC } (-15 \dots +10 \%)$ $P = 4 \text{ W (VEGAMET 841), } 5 \text{ W (VEGAMET 842)}$ $U = 100 \dots 230 \text{ V AC } (-15 \dots +10 \%), 50/60 \text{ Hz}$ $P = 13 \text{ VA (VEGAMET 841), } 15 \text{ VA (VEGAMET 842)}$ $U_m = 253 \text{ V AC}$

Salida de relé:	
Relé 1: Terminales 61, 62, 63	1 A AC ($\cos \phi > 0,9$), 250 V AC, 250 VA
Relé 2: Terminales 64, 65, 66	1 A DC, 60 V DC, 40 W
Relé 3: Terminales 67, 68, 69	$U_m = 253 \text{ V AC}$

Circuito de salida de corriente:	
$I_{out} 1$, Terminales 41[+], 42[-] Adicional sólo VEGAMET 842: $I_{out} 2$, Terminales 43[+], 44[-]	$I = 0/4 \dots 20 \text{ mA}$ $U \leq 16 \text{ V DC}$ $\text{Carga} \leq 500 \text{ Ohm}$ $U_m = 253 \text{ V AC}$

Circuito con seguridad intrínseca

Circuito de alimentación y señal.	
Sensor de 4 ... 20 mA 1: bornes 1[+], 2[-] Adicional sólo VEGAMET 842: Sensor de 4 ... 20 mA 2: bornes 4[+], 5[-]	En tipo de protección seguridad intrínseca Ex ia IIC, IIB/IIC. Para la conexión a un circuito con seguridad intrínseca certificado. $U_o \leq 23,3 \text{ V DC}$ $I_o \leq 109,8 \text{ mA}$ $P_o \leq 639,6 \text{ mW}$ Curva característica: lineal C_i despreciablemente pequeña L_i despreciablemente pequeña Los valores máximos indicados en la tabla se pueden utilizar como capacidades e inductancias concentradas. Los valores para IIC y IIB también son admisibles para zonas con peligro de explosión por polvo.

Ex ia	IIC		IIB, IIIC		IIA
Inductividad externa permisible L_o	0,2 mH	0,5 mH	0,5 mH	2 mH	10 mH
Capacidad externa permisible C_o	120 nF	88 nF	580 nF	470 nF	770 nF

VEGAMET 861, 862

Circuito sin seguridad intrínseca.

Circuito de alimentación:	
Terminales 91[+, L], 92[-, N]	$U = 24 \dots 65 \text{ V DC } (-15 \dots +10 \%)$ $P = 6 \text{ W (VEGAMET 861), } 7 \text{ W (VEGAMET 862)}$ $U = 100 \dots 230 \text{ V AC } (-15 \dots +10 \%), 50/60 \text{ Hz}$ $P = 17 \text{ VA (VEGAMET 861), } 19 \text{ VA (VEGAMET 862)}$ $U_m = 253 \text{ V AC}$

Salida de relé:	
Relé 1: Terminales 61, 62, 63 Relé 2: Terminales 64, 65, 66 Relé 3: Terminales 67, 68, 69 Relé 4: Terminales 70, 71, 72 Adicional sólo VEGAMET 862: Relé 5: Terminales 73, 74, 75 Relé 6: Terminales 76, 77, 78	$1 \text{ A AC (cos } \phi > 0,9), 250 \text{ V AC, } 250 \text{ VA}$ $1 \text{ A DC, } 60 \text{ V DC, } 40 \text{ W}$ $U_m = 253 \text{ V AC}$

Circuito de salida de corriente:	
$I_{out} 1$, Terminales 41[+], 42[-] Adicional sólo VEGAMET 862: $I_{out} 2$, Terminales 43[+], 44[-] $I_{out} 3$, Terminales 45[+], 46[-]	$I = 0/4 \dots 20 \text{ mA}$ $U \leq 16 \text{ V DC}$ Carga $\leq 500 \text{ Ohm}$ $U_m = 253 \text{ V AC}$

Circuito de entrada digital:	
Digital IN 1, bornes 21, 22, 23 Digital IN 2, bornes 24, 25, 26 Adicional sólo VEGAMET 862: Digital IN 3, bornes 27, 28, 29 Digital IN 4, bornes 30, 31, 32	$U_{\max}$ 30 V DC $I_{\max}$ 30 mA

Circuito con seguridad intrínseca

Circuito de alimentación y señal.	
Sensor de 4 ... 20 mA 1: bornes 1[+], 2[-] Adicional sólo VEGAMET 862: Sensor de 4 ... 20 mA 2: bornes 4[+], 5[-]	En tipo de protección seguridad intrínseca Ex ia IIC, IIB/IIIC. Para la conexión a un circuito con seguridad intrínseca certificado. $U_o \leq 23,3$ V DC $I_o \leq 111,3$ mA $P_o \leq 648,4$ mW Curva característica: lineal C_i despreciablemente pequeña L_i despreciablemente pequeña Los valores máximos indicados en la tabla se pueden utilizar como capacidades e inductancias concentradas. Los valores para IIC y IIB también son admisibles para zonas con peligro de explosión por polvo.

Ex ia	IIC		IIB, IIIC		IIA
Inductancia externa permisible L_o	0,2 mH	0,5 mH	0,5 mH	2 mH	10 mH
Capacidad externa permisible C_o	120 nF	88 nF	580 nF	470 nF	760 nF

Los circuitos de seguridad intrínseca del VEGAMET 841, 842, 861, 862 están separados galvánicamente de la tierra.

Los circuitos de seguridad intrínseca del VEGAMET 841, 842, 861, 862 están separados con seguridad de los circuitos de seguridad no intrínseca hasta un valor máximo de 375 V.

La tensión máxima en los circuitos sin seguridad intrínseca no debe superar los 253 Vrms en caso de fallo.

8 Datos mecánicos

Los siguientes datos mecánicos se aplican a todas las versiones de carcasas y electrónicas.

Datos mecánicos	
Grado de protección (IEC/EN 60529)	TYPE 4X, IP66/IP67
Sección de cable	0,25 ... 2,5 mm ²
Categoría de sobretensión	II
Grado de contaminación	4

9 Datos térmicos


Temperaturas ambientales homologadas

Temperatura ambiente permisible en el lugar de montaje de un equipo	Temperatura ambiente (Ta)
como material correspondent	-40 ... +60 °C (-40 ... +140 °F)

10 Instalación

Los controladores VEGAMET 841, 842, 861, 862 como equipo correspondiente se deben montar y utilizar fuera de las zonas peligrosas.

Si el circuito con seguridad intrínseca es conducido por áreas con riesgo de explosión a causa de los polvos las zonas 20 o 21, hay que asegurar que los medios de producción a conectar en esos circuitos, cumplan con los requisitos de las categorías 1D (Medio de producción EPL Da) o 2D (Medio de producción EPL Db) y estén certificados correspondientemente.

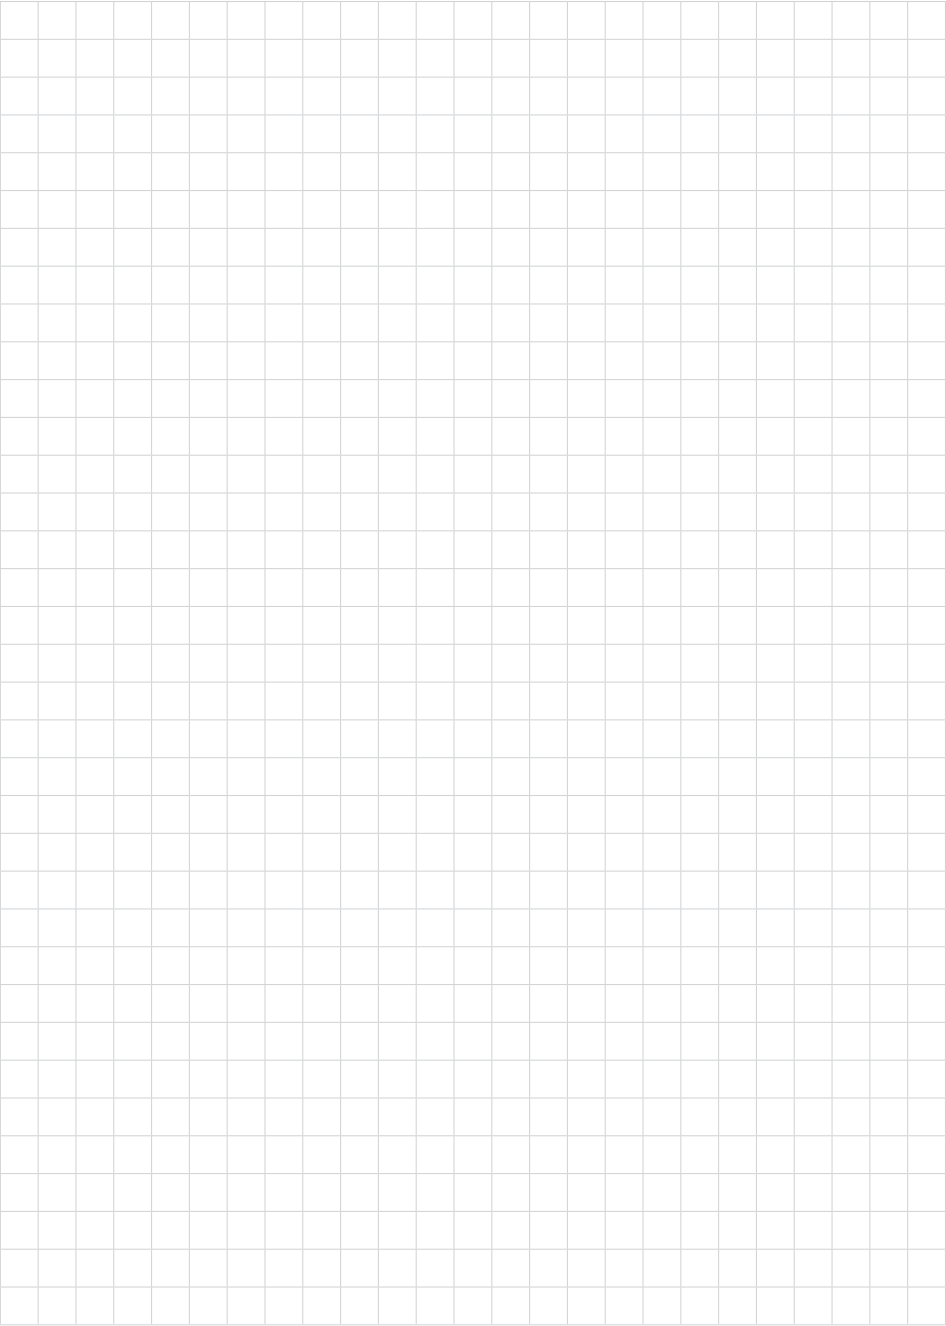

Druckdatum:

VEGA

Die Angaben über Lieferumfang, Anwendung, Einsatz und Betriebsbedingungen der Sensoren und Auswertsysteme entsprechen den zum Zeitpunkt der Drucklegung vorhandenen Kenntnissen.
Änderungen vorbehalten

© VEGA Grieshaber KG, Schiltach/Germany 2019



61270-01-191219

VEGA Grieshaber KG
Am Hohenstein 113
77761 Schiltach
Deutschland

Telefon +49 7836 50-0
Fax +49 7836 50-201
E-Mail: info.de@vega.com
www.vega.com

ATEX



Safety instructions

VEGAMET 841, 842, 861, 862

Installation in non-Ex area
with output intrinsic safety "i"



0891



Document ID: 61270

VEGA

Contents

1	Area of applicability.....	4
2	Device configuration/-properties	4
3	General information.....	4
4	Application area, use in gas and dust atmospheres.....	4
5	Safe operating mode	5
6	Important information for mounting and maintenance.....	5
7	Electrical data.....	6
8	Mechanical data	8
9	Thermal data	8
10	Installation	8

Supplementary documentation:

- Operating instructions VEGAMET 841, 842, 861, 862
- UK Type Examination Certificate UL21UKEX2279 (Document ID: 66336)
- UK Declaration of Conformity (Document ID: 66291)

Editing status: 2021-09-01

DE	Sicherheitshinweise für den Einsatz in explosionsgefährdeten Bereichen
EN	Safety instructions for the use in hazardous areas
FR	Consignes de sécurité pour une application en atmosphères explosibles
IT	Normative di sicurezza per l'impiego in luoghi con pericolo di esplosione
ES	Instrucciones de seguridad para el empleo en áreas con riesgo de explosión
PT	Normas de segurança para utilização em zonas sujeitas a explosão
NL	Veiligheidsaanwijzingen voor gebruik op plaatsen waar ontploffingsgevaar kan heersen
SV	Säkerhetsanvisningar för användning i explosionsfarliga områden
DA	Sikkerhedsforskrifter til anvendelse i explosionsfarlig atmosfære
FI	Turvallisuusohjeet räjähdysvaarallisissa tiloissa käyttöä varten
EL	Υποδείξεις ασφαλείας για τη χρησιμοποίηση σε περιοχές που υπάρχει κίνδυνος έκρηξης

DE	Die vorliegenden Sicherheitshinweise sind im Download unter www.vega.com standardmäßig in den Sprachen deutsch, englisch, französisch und spanisch verfügbar. Weitere EU-Landessprachen stellt VEGA nach Anforderungen zur Verfügung.
EN	These safety instructions are available as a standard feature in the download area under www.vega.com in the languages German, English, French and Spanish. Further EU languages will be made available by VEGA upon request.
FR	Les présentes consignes de sécurité sont disponibles au téléchargement sous www.vega.com en standard en allemand, en anglais, en français et en espagnol. VEGA met à disposition d'autres langues de l'Union Européenne selon les exigences.
ES	Las indicaciones de seguridad presentes están disponibles en la zona de descarga de www.vega.com de forma estándar en los idiomas inglés, francés y español. VEGA pone a disposición otros idiomas de la UE cuando son requeridos.

1 Area of applicability

These safety instructions apply to the devices:

- VEGAMET 841
- VEGAMET 842
- VEGAMET 861
- VEGAMET 862

In accordance with the UK Type Examination Certificate UL21UKEX2279, as associated equipment (certificate number on type plate) and for all devices with safety instruction 61270.

The classification as well as the respective standards are stated in the above certificates:

Type of protection marking:

- II (1) G [Ex ia Ga] IIC
- II (1) D [Ex ia Da] IIIC

2 Device configuration/-properties

The detailed device configurations can be retrieved using the serial number search on our homepage.

Move to "www.vega.com" and enter in the search field the serial number of your instrument.

Alternatively, you can find all via your smartphone:

- Download the VEGA Tools app from the "*Apple App Store*", "*Google Play Store*" or "*Baidu Store*"
- Scan the DataMatrix code on the type label of the instrument or
- Enter the serial number manually in the app

3 General information

The single and double channel controllers VEGAMET 841, 842, 861, 862 are ideal for simple control tasks in all industrial areas for non-Ex or Ex applications for the connection of one or two 4 ... 20 mA sensors.

They serve as a display for continuous sensors and can also be used as a (Ex)power supply unit for the connected sensors.

The setting can be easily done on site using manual operation or remotely using smartphone/tablet and PC/Laptop using Bluetooth Smart.

There are no further interfaces on the controllers. The devices can be used in the field (field mounting using tube/wall mounting).

The operating instructions as well as the installation regulations or standards that apply for explosion protection of electrical systems must generally be observed.

The installation of explosion-protected systems must always be carried out by qualified personnel.

4 Application area, use in gas and dust atmospheres

Associated apparatus

The VEGAMET 841, 842, 861, 862 may be installed and operated outside of hazardous areas as associated equipment.

5 Safe operating mode

General operating conditions

- Do not operate the instrument outside the electrical, thermal and mechanical specifications of the manufacturer

Connection conditions

- The connection cable of VEGAMET 841, 842, 861, 862 has to be wired fix and in such a way that damages can be excluded
- If the temperature at the entry parts exceeds 70 °C, temperature-resistant connection cables must be used

6 Important information for mounting and maintenance

General instructions

The following requirements must be fulfilled for mounting, electrical installation, setup and maintenance of the instrument:

- The staff must be qualified according the respective tasks
- The staff must be trained in explosion protection
- The staff must be familiar with the respectively valid regulations, e.g. planning and installation acc. to EN 60079-14
- Make sure when working on the instrument (mounting, installation, maintenance) that there is no explosive atmosphere present, the supply circuits should be voltage-free, if possible.
- The instrument has to be mounted according to the manufacturer specifications, the UK Type Examination Certificate and the valid regulations and standards
- Modifications on the instrument can influence the explosion protection and hence the safety, therefore repairs are not permitted to be conducted by the end user
- Modifications must only be carried out by employees authorized by VEGA company
- Use only approved spare parts
- Components for installation and connection not included in the approval documents are only permitted if these correspond technically to the latest standard mentioned on the cover sheet. They must be suitable for the application conditions and have a separate certificate. The special conditions of the components must be noted and if necessary, the components must be integrated in the type test. This applies also to the components already mentioned in the technical description.

Mounting

Keep in mind for instrument mounting

- Mechanical damage on the instrument must be avoided
- Mechanical friction must be avoided

Maintenance

To ensure the functionality of the device, periodic visual inspection is recommended for:

- Secure mounting
- No mechanical damages or corrosion
- Worn or otherwise damaged cables
- No loose connections of the line connections, equipotential bonding connections
- Correct and clearly marked cable connections

Intrinsic safety "i"

- Observe the valid regulations for the interconnection of intrinsically safe circuits.
- The instrument is only suitable for connection to certified, intrinsically safe instruments

- If the intrinsically safe circuit is led into dust-explosive areas of zone 20 or 21, please make sure that the instruments connected to these circuits meet the requirements of category 1D (EPL Da instruments) or 2D (EPL Db instruments) and are certified respectively

7 Electrical data

VEGAMET 841, 842

Non-intrinsically safe circuit

Supply circuit:	
Terminals 91[+, L], 92[-, N]	$U = 24 \dots 65 \text{ V DC } (-15 \dots +10 \%)$ $P = 4 \text{ W (VEGAMET 841), } 5 \text{ W (VEGAMET 842)}$ $U = 100 \dots 230 \text{ V AC } (-15 \dots +10 \%), 50/60 \text{ Hz}$ $P = 13 \text{ VA (VEGAMET 841), } 15 \text{ VA (VEGAMET 842)}$ $U_m = 253 \text{ V AC}$

Relay output:	
Relay 1: terminals 61, 62, 63	1 A AC ($\cos \phi > 0.9$), 250 V AC, 250 VA
Relay 2: terminals 64, 65, 66	1 A DC, 60 V DC, 40 W
Relay 3: terminals 67, 68, 69	$U_m = 253 \text{ V AC}$

Current output circuit:	
$I_{out} 1$, terminals 41[+], 42[-] In addition only VEGAMET 842: $I_{out} 2$, terminals 43[+], 44[-]	$I = 0/4 \dots 20 \text{ mA}$ $U \leq 16 \text{ V DC}$ Load $\leq 500 \text{ Ohm}$ $U_m = 253 \text{ V AC}$

Intrinsically safe circuit

Supply and signal circuit:	
4 ... 20 mA sensor 1: Terminals 1[+], 2[-]	In type of protection intrinsic safety Ex ia IIC, IIB/IIIC.
In addition only VEGAMET 842:	For connection to a certified, intrinsically safe circuit.
4 ... 20 mA sensor 2: Terminals 4[+], 5[-]	$U_o \leq 23.3 \text{ V DC}$ $I_o \leq 109.8 \text{ mA}$ $P_o \leq 639.6 \text{ mW}$ Characteristics: linear C_i negligibly small L_i negligibly small The maximum values given in the table can be used as concentrated capacitances and concentrated inductances. The values for IIC and IIB are also permissible for dust explosive areas.

Ex ia	IIC		IIB, IIIC		IIA
Permissible external inductance L_o	0.2 mH	0.5 mH	0.5 mH	2 mH	10 mH

Ex ia	IIC		IIB, IIIC		IIA
Permissible external capacitance C ₀	120 nF	88 nF	580 nF	470 nF	770 nF

VEGAMET 861, 862

Non-intrinsically safe circuit

Supply circuit:	
Terminals 91[+, L], 92[-, N]	$U = 24 \dots 65 \text{ V DC } (-15 \dots +10 \%)$ $P = 6 \text{ W (VEGAMET 861), } 7 \text{ W (VEGAMET 862)}$ $U = 100 \dots 230 \text{ V AC } (-15 \dots +10 \%), 50/60 \text{ Hz}$ $P = 17 \text{ VA (VEGAMET 861), } 19 \text{ VA (VEGAMET 862)}$ $U_m = 253 \text{ V AC}$

Relay output:	
Relay 1: terminals 61, 62, 63 Relay 2: terminals 64, 65, 66 Relay 3: terminals 67, 68, 69 Relay 4: terminals 70, 71, 72 In addition only VEGAMET 862: Relay 5: terminals 73, 74, 75 Relay 6: terminals 76, 77, 78	$1 \text{ A AC (cos phi} > 0.9), 250 \text{ V AC, } 250 \text{ VA}$ $1 \text{ A DC, } 60 \text{ V DC, } 40 \text{ W}$ $U_m = 253 \text{ V AC}$

Current output circuit:	
I_{out1} , terminals 41[+], 42[-] In addition only VEGAMET 862: I_{out2} , terminals 43[+], 44[-] I_{out3} , terminals 45[+], 46[-]	$I = 0/4 \dots 20 \text{ mA}$ $U \leq 16 \text{ V DC}$ $\text{Load} \leq 500 \text{ Ohm}$ $U_m = 253 \text{ V AC}$

Digital input circuit:	
Digital IN 1, terminals 21, 22, 23 Digital IN 2, terminals 24, 25, 26 In addition only VEGAMET 862: Digital IN 3, terminals 27, 28, 29 Digital IN 4, terminals 30, 31, 32	$U_{max} 30 \text{ V DC}$ $I_{max} 30 \text{ mA}$

Intrinsically safe circuit

Supply and signal circuit:	
4 ... 20 mA sensor 1: Terminals 1[+], 2[-] In addition only VEGAMET 862:	In type of protection intrinsic safety Ex ia IIC, IIB/IIIC.
4 ... 20 mA sensor 2: Terminals 4[+], 5[-]	For connection to a certified, intrinsically safe circuit. $U_o \leq 23.3 \text{ V DC}$ $I_o \leq 111.3 \text{ mA}$ $P_o \leq 648.4 \text{ mW}$
	Characteristics: linear
	C_i negligibly small L_i negligibly small
	The maximum values given in the table can be used as concentrated capacitances and concentrated inductances. The values for IIC and IIB are also permissible for dust explosive areas.

Ex ia	IIC		IIB, IIIC		IIA
Permissible external inductance L_o	0.2 mH	0.5 mH	0.5 mH	2 mH	10 mH
Permissible external capacitance C_o	120 nF	88 nF	580 nF	470 nF	760 nF

The intrinsically safe circuits of VEGAMET 841, 842, 861, 862 are galvanically separated from ground.

The intrinsically safe circuits of the VEGAMET 841, 842, 861, 862 are reliably separated from the non-intrinsically safe circuit up to a peak value of 375 V.

The maximum voltage on the non-intrinsically safe circuits must not exceed 253 Vrms in the event of a fault.

8 Mechanical data

The following mechanical data are valid for all housing and electronics versions.

Mechanical data	
Protection (IEC/EN 60529)	TYPE 4X, IP66/IP67
Connection cross-section:	0.25 ... 2.5 mm ²
Overvoltage category	II
Pollution degree	4

9 Thermal data

Permissible ambient temperatures


Permissible ambient temperature at the installation location of an instrument	Ambient temperature (Ta)
As associated equipment	-40 ... +60 °C (-40 ... +140 °F)

10 Installation

Controllers VEGAMET 841, 842, 861, 862 as associated equipment must be mounted and operated

outside hazardous areas.

If the intrinsically safe circuit is led into dust-explosive areas of zone 20 or 21, please make sure that the instruments connected to these circuits meet the requirements of category 1D (EPL Da instruments) or 2D (EPL Db instruments) and are certified respectively.

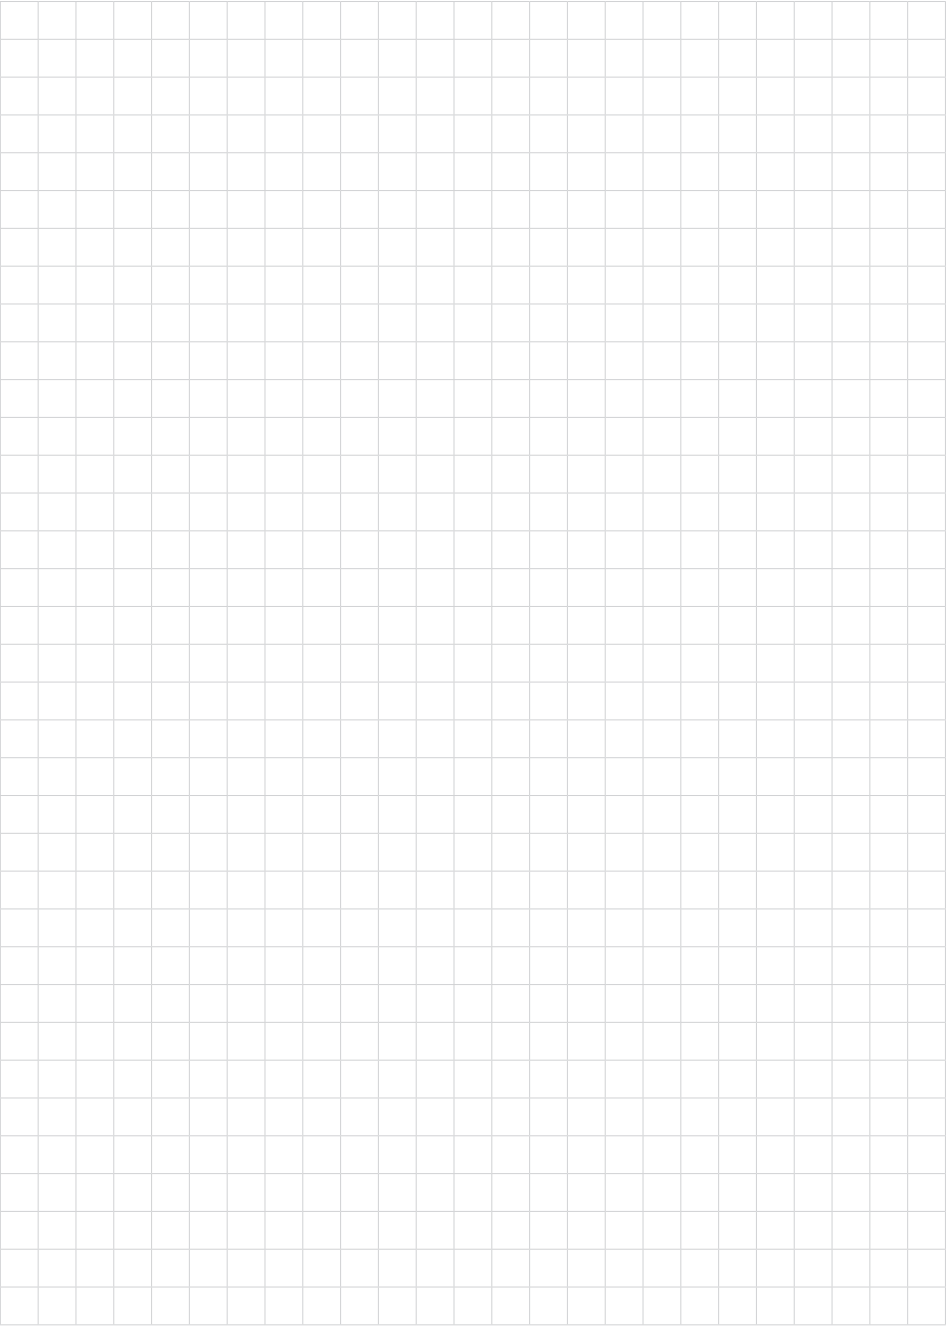

61270-EN-211001

Printing date:

VEGA

All statements concerning scope of delivery, application, practical use and operating conditions of the sensors and processing systems correspond to the information available at the time of printing.

Subject to change without prior notice

© VEGA Grieshaber KG, Schiltach/Germany 2021

**UK
CA**

61270-EN-211001

VEGA Grieshaber KG
Am Hohenstein 113
77761 Schiltach
Germany

Phone +49 7836 50-0
E-mail: info.de@vega.com
www.vega.com

UKEX

Safety instructions

VEGAMET 841, 842, 861, 862

Installation in non-Ex area
with output intrinsic safety "i"



Document ID: 61270

VEGA

Contents

1	Area of applicability.....	3
2	Device configuration/-properties	3
3	General information.....	3
4	Application area, use in gas and dust atmospheres.....	3
5	Safe operating mode	4
6	Important information for mounting and maintenance.....	4
7	Electrical data.....	5
8	Mechanical data	7
9	Thermal data	7
10	Installation	7

Supplementary documentation:

- Operating instructions VEGAMET 841, 842, 861, 862
- Certificate of Conformity IECEx ULD 19.0015 (Document ID: 61272)

Editing status: 2019-06-17

1 Area of applicability

These safety instructions apply to the devices:

- VEGAMET 841
- VEGAMET 842
- VEGAMET 861
- VEGAMET 862

In accordance with the IECEx Certificate of Conformity IECEx ULD 19.0015, as associated equipment (certificate number on type plate) and for all devices with safety instruction 61270.

The classification as well as the respective standards are stated in the above certificates:

Type of protection marking:

- [Ex ia Ga] IIC
- [Ex ia Da] IIIC

2 Device configuration/-properties

The detailed device configurations can be retrieved using the serial number search on our homepage.

Move to "www.vega.com" and enter in the search field the serial number of your instrument.

Alternatively, you can find all via your smartphone:

- Download the VEGA Tools app from the "*Apple App Store*", "*Google Play Store*" or "*Baidu Store*"
- Scan the DataMatrix code on the type label of the instrument or
- Enter the serial number manually in the app

3 General information

The single and double channel controllers VEGAMET 841, 842, 861, 862 are ideal for simple control tasks in all industrial areas for non-Ex or Ex applications for the connection of one or two 4 ... 20 mA sensors.

They serve as a display for continuous sensors and can also be used as a (Ex)power supply unit for the connected sensors.

The setting can be easily done on site using manual operation or remotely using smartphone/tablet and PC/Laptop using Bluetooth Smart.

There are no further interfaces on the controllers. The devices can be used in the field (field mounting using tube/wall mounting).

The operating instructions as well as the installation regulations or standards that apply for explosion protection of electrical systems must generally be observed.

The installation of explosion-protected systems must always be carried out by qualified personnel.

4 Application area, use in gas and dust atmospheres

Associated apparatus

The controllers VEGAMET 841, 842, 861, 862 may be installed and operated outside of hazardous areas as associated equipment.

5 Safe operating mode

General operating conditions

- Do not operate the instrument outside the electrical, thermal and mechanical specifications of the manufacturer

Connection conditions

- The connection cable of VEGAMET 841, 842, 861, 862 has to be wired fix and in such a way that damages can be excluded
- If the temperature at the inlet components exceeds 70 °C, temperature-resistant connection cables must be used

6 Important information for mounting and maintenance

General instructions

The following requirements must be fulfilled for mounting, electrical installation, setup and maintenance of the instrument:

- The staff must be qualified according the respective tasks
- The staff must be trained in explosion protection
- The staff must be familiar with the respectively valid regulations, e.g. planning and installation acc. to IEC 60079-14
- Make sure when working on the instrument (mounting, installation, maintenance) that there is no explosive atmosphere present, the supply circuits should be voltage-free, if possible.
- The instrument has to be mounted according to the manufacturer specifications, the Certificate of Conformity and the valid regulations and standards
- Modifications on the instrument can influence the explosion protection and hence the safety
- Modifications must only be carried out by employees authorized by VEGA company
- Use only approved spare parts
- Components for installation and connection not included in the approval documents are only permitted if these correspond technically to the latest standard mentioned on the cover sheet. They must be suitable for the application conditions and have a separate certificate. The special conditions of the components must be noted and if necessary, the components must be integrated in the type test. This applies also to the components already mentioned in the technical description.

Mounting

Keep in mind for instrument mounting

- Mechanical damage on the instrument must be avoided
- Mechanical friction must be avoided

Maintenance

To ensure the functionality of the device, periodic visual inspection is recommended for:

- Secure mounting
- No mechanical damages or corrosion
- Worn or otherwise damaged cables
- The potential equalization terminal must be secured against loosening
- Correct and clearly marked cable connections

Intrinsic safety "i"

- Observe the valid regulations for the interconnection of intrinsically safe circuits.
- The instrument is only suitable for connection to certified, intrinsically safe instruments

- If the intrinsically safe circuit is lead into dust-explosive areas of zone 20 or 21, please make sure that the instruments which are connected to these circuits meet the requirements of EPL Da or EPL Db and are certified respectively

7 Electrical data

VEGAMET 841, 842

Non-intrinsically safe circuit

Supply circuit:	
Terminals 91[+, L], 92[-, N]	$U = 24 \dots 65 \text{ V DC } (-15 \dots +10 \%)$ $P = 4 \text{ W (VEGAMET 841), } 5 \text{ W (VEGAMET 842)}$ $U = 100 \dots 230 \text{ V AC } (-15 \dots +10 \%), 50/60 \text{ Hz}$ $P = 13 \text{ VA (VEGAMET 841), } 15 \text{ VA (VEGAMET 842)}$ $U_m = 253 \text{ V AC}$

Relay output:	
Relay 1: terminals 61, 62, 63	1 A AC ($\cos \phi > 0.9$), 250 V AC, 250 VA
Relay 2: terminals 64, 65, 66	1 A DC, 60 V DC, 40 W
Relay 3: terminals 67, 68, 69	$U_m = 253 \text{ V AC}$

Current output circuit:	
$I_{out} 1$, terminals 41[+], 42[-] In addition only VEGAMET 842: $I_{out} 2$, terminals 43[+], 44[-]	$I = 0/4 \dots 20 \text{ mA}$ $U \leq 16 \text{ V DC}$ $\text{Load} \leq 500 \text{ Ohm}$ $U_m = 253 \text{ V AC}$

Intrinsically safe circuit

Supply and signal circuit:	
4 ... 20 mA-Sensor 1: Terminals 1[+], 2[-] In addition only VEGAMET 842:	In type of protection intrinsic safety Ex ia IIC, IIB/IIIC.
4 ... 20 mA sensor 2: Terminals 4[+], 5[-]	For connection to a certified, intrinsically safe circuit.
	$U_o \leq 23.3 \text{ V DC}$
	$I_o \leq 109.8 \text{ mA}$
	$P_o \leq 639.6 \text{ mW}$
	Characteristics: linear
	C_i negligibly small
	L_i negligibly small
	The maximum values given in the table can be used as concentrated capacitances and concentrated inductances.
	The values for IIC and IIB are also permissible for dust explosive areas.

Ex ia	IIC		IIB, IIIC		IIA
Permissible external inductance L_o	0.2 mH	0.5 mH	0.5 mH	2 mH	10 mH

Ex ia	IIC		IIB, IIIC		IIA
Permissible external capacitance C_o	120 nF	88 nF	580 nF	470 nF	770 nF

VEGAMET 861, 862

Non-intrinsically safe circuit

Supply circuit:	
Terminals 91[+, L], 92[-, N]	$U = 24 \dots 65 \text{ V DC } (-15 \dots +10 \%)$ $P = 6 \text{ W (VEGAMET 861), } 7 \text{ W (VEGAMET 862)}$ $U = 100 \dots 230 \text{ V AC } (-15 \dots +10 \%), 50/60 \text{ Hz}$ $P = 17 \text{ VA (VEGAMET 861), } 19 \text{ VA (VEGAMET 862)}$ $U_m = 253 \text{ V AC}$

Relay output:	
Relay 1: terminals 61, 62, 63 Relay 2: terminals 64, 65, 66 Relay 3: terminals 67, 68, 69 Relay 4: terminals 70, 71, 72 In addition only VEGAMET 862: Relay 5: terminals 73, 74, 75 Relay 6: terminals 76, 77, 78	$1 \text{ A AC } (\cos \phi > 0.9), 250 \text{ V AC}, 250 \text{ VA}$ $1 \text{ A DC}, 60 \text{ V DC}, 40 \text{ W}$ $U_m = 253 \text{ V AC}$

Current output circuit:	
I_{out1} , terminals 41[+], 42[-] In addition only VEGAMET 862: I_{out2} , terminals 43[+], 44[-] I_{out3} , terminals 45[+], 46[-]	$I = 0/4 \dots 20 \text{ mA}$ $U \leq 16 \text{ V DC}$ $\text{Load} \leq 500 \text{ Ohm}$ $U_m = 253 \text{ V AC}$

Digital input circuit:	
Digital IN 1, terminals 21, 22, 23 Digital IN 2, terminals 24, 25, 26 In addition only VEGAMET 862: Digital IN 3, terminals 27, 28, 29 Digital IN 4, terminals 30, 31, 32	$U_{max} 30 \text{ V DC}$ $I_{max} 30 \text{ mA}$

Intrinsically safe circuit

Supply and signal circuit:	
4 ... 20 mA-Sensor 1: Terminals 1[+], 2[-] In addition only VEGAMET 862: 4 ... 20 mA sensor 2: Terminals 4[+], 5[-]	In type of protection intrinsic safety Ex ia IIC, IIB/IIIC. For connection to a certified, intrinsically safe circuit. $U_o \leq 23.3 \text{ V DC}$ $I_o \leq 111.3 \text{ mA}$ $P_o \leq 648.4 \text{ mW}$ Characteristics: linear C_i negligibly small L_i negligibly small The maximum values given in the table can be used as concentrated capacitances and concentrated inductances. The values for IIC and IIB are also permissible for dust explosive areas.

Ex ia	IIC		IIB, IIIC		IIA
Permissible external inductance L_o	0.2 mH	0.5 mH	0.5 mH	2 mH	10 mH
Permissible external capacitance C_o	120 nF	88 nF	580 nF	470 nF	760 nF

The intrinsically safe circuits of VEGAMET 841, 842, 861, 862 are galvanically separated from ground.

The intrinsically safe circuits of the VEGAMET 841, 842, 861, 862 are reliably separated from the non-intrinsically safe circuit up to a peak value of 375 V.

The maximum voltage on the non-intrinsically safe circuits must not exceed 253 Vrms in the event of a fault.

8 Mechanical data

The following mechanical data are valid for all housing and electronics versions.

Mechanical data	
Protection (IEC/EN 60529)	TYPE 4X, IP66/IP67
Connection cross-section:	0.25 ... 2.5 mm ²
Overvoltage category	II
Pollution degree	4

9 Thermal data

Permissible ambient temperatures


Permissible ambient temperature at the installation location of an instrument	Ambient temperature (Ta)
As associated equipment	-40 ... +60 °C (-40 ... +140 °F)

10 Installation

Controllers VEGAMET 841, 842, 861, 862 as associated equipment must be mounted and operated

outside hazardous areas.

If the intrinsically safe circuit is led into dust-explosive areas of zone 20 or 21, please make sure that the instruments connected to these circuits meet the requirements of the device protection level (EPL) Da or Db and are certified respectively.

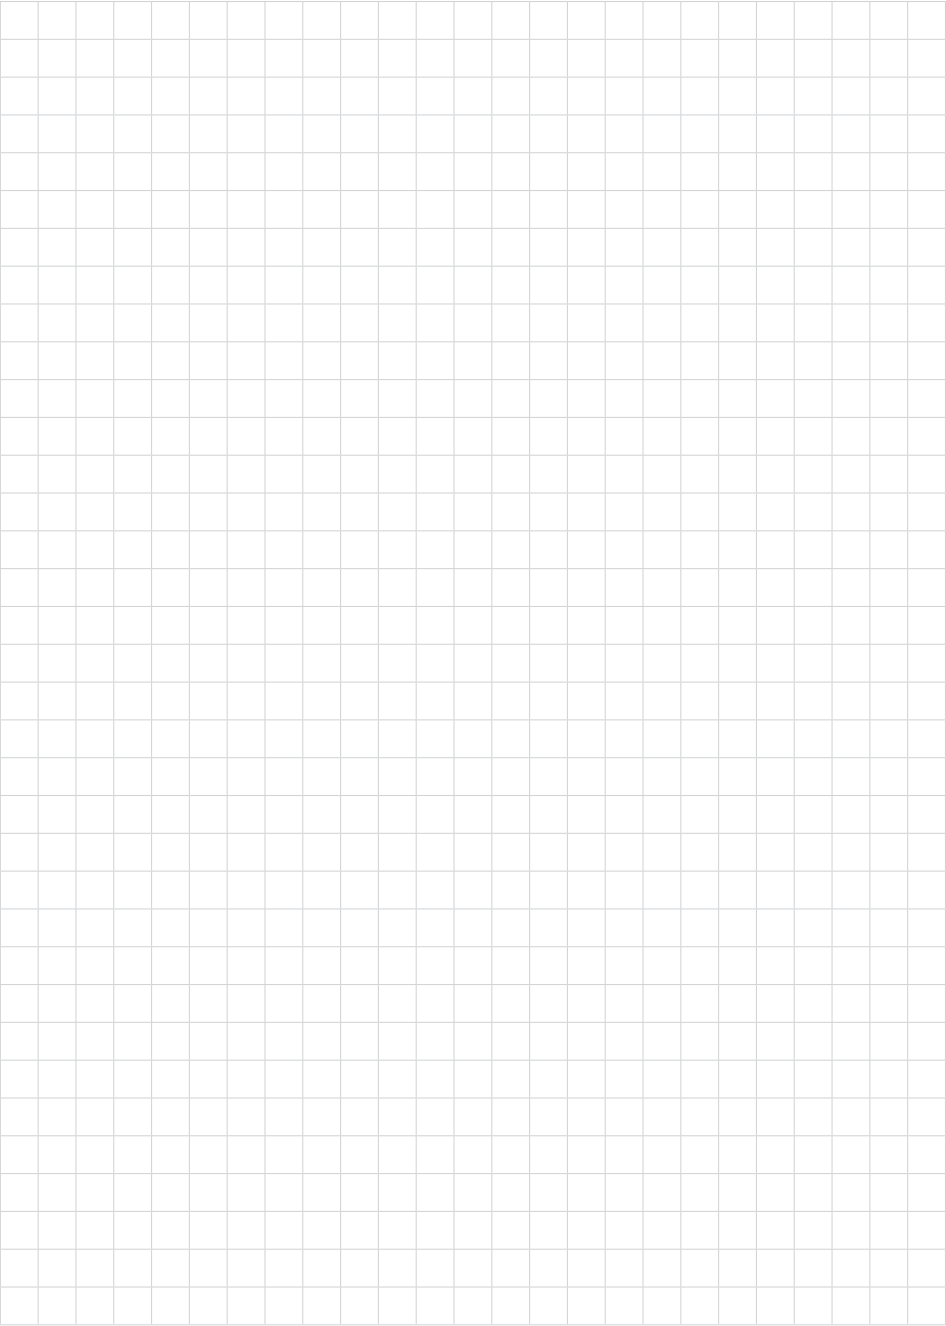

Printing date:

VEGA

All statements concerning scope of delivery, application, practical use and operating conditions of the sensors and processing systems correspond to the information available at the time of printing.

Subject to change without prior notice

© VEGA Grieshaber KG, Schiltach/Germany 2019

61270-EN-191219

VEGA Grieshaber KG
Am Hohenstein 113
77761 Schiltach
Germany

Phone +49 7836 50-0
Fax +49 7836 50-201
E-mail: info.de@vega.com
www.vega.com

IECEX



Safety instructions

VEGAMET 841, 842, 861, 862

Installation in non-Ex area
with output intrinsic safety "i"



Document ID: 61270

VEGA

Contents

1	Area of applicability.....	3
2	Device configuration/-properties	3
3	General information.....	3
4	Application area, use in gas and dust atmospheres (zones and divisions).....	3
5	Safe operating mode	4
6	Important information for mounting and maintenance.....	4
7	Electrical data.....	5
8	Mechanical data	7
9	Thermal data	8
10	Installation	8
11	Installation diagram.....	9

Supplementary documentation:

- Operating instructions VEGAMET 841, 842, 861, 862
- Certificate of Compliance cULus E490658 (Document ID: 61273)

Editing status: 2021-02-22

1 Area of applicability

These safety instructions apply to the devices:

- VEGAMET 841
- VEGAMET 842
- VEGAMET 861
- VEGAMET 862

In accordance with the Certificate of Compliance cULus E490658, as associated equipment (certificate number on type plate) and for all devices with safety instruction 61270.

The classification as well as the respective standards are stated in the above certificates:

Type of protection marking:

- [Ex ia Ga] IIC, [Ex ia Da] IIIC
- [AEx ia Ga] IIC, [AEx ia Da] IIIC
- Associated Apparatus for use in Unclassified Locations

2 Device configuration/-properties

The detailed device configurations can be retrieved using the serial number search on our homepage.

Move to "www.vega.com" and enter in the search field the serial number of your instrument.

Alternatively, you can find all via your smartphone:

- Download the VEGA Tools app from the "*Apple App Store*", "*Google Play Store*" or "*Baidu Store*"
- Scan the DataMatrix code on the type label of the instrument or
- Enter the serial number manually in the app

3 General information

The single and double channel controllers VEGAMET 841, 842, 861, 862 are ideal for simple control tasks in all industrial areas for non-Ex or Ex applications for the connection of one or two 4 ... 20 mA sensors.

They serve as a display for continuous sensors and can also be used as a (Ex)power supply unit for the connected sensors.

The setting can be easily done on site using manual operation or remotely using smartphone/tablet and PC/Laptop using Bluetooth Smart.

There are no further interfaces on the controllers. The devices can be used in the field (field mounting using tube/wall mounting).

The operating instructions as well as the installation regulations or standards that apply for explosion protection of electrical systems must generally be observed.

The installation of explosion-protected systems must always be carried out by qualified personnel.

4 Application area, use in gas and dust atmospheres (zones and divisions)

Associated apparatus for non-hazardous locations

The controllers VEGAMET 841, 842, 861, 862 may be installed and operated outside of hazardous areas as associated equipment.

5 Safe operating mode

General operating conditions

- Do not operate the instrument outside the electrical, thermal and mechanical specifications of the manufacturer

Connection conditions

- The connection cable of VEGAMET 841, 842, 861, 862 has to be wired fix and in such a way that damages can be excluded
- If the temperature at the inlet components exceeds 60 °C (USA and Canada), temperature-resistant connection cables must be used

6 Important information for mounting and maintenance

General instructions

The following requirements must be fulfilled for mounting, electrical installation, setup and maintenance of the instrument:

- The staff must be qualified according the respective tasks
- The staff must be trained in explosion protection
- The staff must be familiar with the respectively valid regulations, e.g. planning and installation acc. to ANSI/ISA RP12.06.01 „Installation of Intrinsically Safe Systems for Hazardous (Classifies) Locations“ and the National Electrical Code® (ANSI/NFPA 70) or Canadian Electrical Code
- Make sure when working on the instrument (mounting, installation, maintenance) that there is no explosive atmosphere present, the supply circuits should be voltage-free, if possible.
- The instrument has to be mounted according to the manufacturer specifications, the Certificate of Conformity and the valid regulations and standards
- Modifications on the instrument can influence the explosion protection and hence the safety, therefore repairs are not permitted to be conducted by the end user
- Modifications must only be carried out by employees authorized by VEGA company
- Use only approved spare parts
- Components for installation and connection not included in the approval documents are only permitted if these correspond technically to the latest standard mentioned on the cover sheet. They must be suitable for the application conditions and have a separate certificate. The special conditions of the components must be noted and if necessary, the components must be integrated in the type test. This applies also to the components already mentioned in the technical description.

Mounting

Keep in mind for instrument mounting

- Mechanical damage on the instrument must be avoided
- Mechanical friction must be avoided

Maintenance

To ensure the functionality of the device, periodic visual inspection is recommended for:

- Secure mounting
- No mechanical damages or corrosion
- Worn or otherwise damaged cables
- No loose connections of the line connections, equipotential bonding connections
- Correct and clearly marked cable connections

Intrinsic safety "i"

- Observe the valid regulations for connection of intrinsically safe circuits, e.g. proof of intrinsic safety in accordance with ANSI/ISA RP12.06.01 „Installation of Intrinsically Safe Systems for Hazardous (Classifies) Locations“ and the National Electrical Code® (ANSI/NFPA 70) or Canadian Electrical Code.
- The instrument is only suitable for connection to certified, intrinsically safe instruments
- If the intrinsically safe circuit is led into dust-explosive areas of zone 20, 21 or Div 1, Div 2, please make sure that the instruments connected to these circuits meet the requirements of the device protection level (EPL) Da, Db or Div 1, Div 2 and are certified respectively

7 Electrical data

VEGAMET 841, 842

Non-intrinsically safe circuit

Supply circuit:	
Terminals 91[+, L], 92[-, N]	$U = 24 \dots 65 \text{ V DC } (-15 \dots +10 \%)$ $P = 4 \text{ W (VEGAMET 841), } 5 \text{ W (VEGAMET 842)}$ $U = 100 \dots 230 \text{ V AC } (-15 \dots +10 \%), 50/60 \text{ Hz}$ $P = 13 \text{ VA (VEGAMET 841), } 15 \text{ VA (VEGAMET 842)}$ $U_m = 253 \text{ V AC}$
Relay output:	
Relay 1: terminals 61, 62, 63	1 A AC ($\cos \phi > 0.9$), 250 V AC, 250 VA
Relay 2: terminals 64, 65, 66	1 A DC, 60 V DC, 40 W
Relay 3: terminals 67, 68, 69	$U_m = 253 \text{ V AC}$
Current output circuit:	
$I_{\text{out } 1}$, terminals 41[+], 42[-] In addition only VEGAMET 842: $I_{\text{out } 2}$, terminals 43[+], 44[-]	$I = 0/4 \dots 20 \text{ mA}$ $U \leq 16 \text{ V DC}$ $\text{Load} \leq 500 \text{ Ohm}$ $U_m = 253 \text{ V AC}$

Intrinsically safe circuit

Supply and signal circuit:	
4 ... 20 mA sensor 1: Terminals 1[+], 2[-] In addition only VEGAMET 842:	In type of protection intrinsic safety Ex ia IIC, IIB/IIIC. In type of protection intrinsic safety IS Grps. ABCDEFG.
4 ... 20 mA sensor 2: Terminals 4[+], 5[-]	For connection to a certified, intrinsically safe circuit. $U_o \leq 23.3 \text{ V DC}$ $I_o \leq 109.8 \text{ mA}$ $P_o \leq 639.6 \text{ mW}$ Characteristics: linear C_i negligibly small L_i negligibly small The maximum values given in the table can be used as concentrated capacitances and concentrated inductances. The values for IIC and IIB are also permissible for dust explosive areas.

Ex ia	IIC		IIB, IIIC		IIA
Permissible external inductance L_o	0.2 mH	0.5 mH	0.5 mH	2 mH	10 mH
Permissible external capacitance C_o	120 nF	88 nF	580 nF	470 nF	770 nF

VEGAMET 861, 862

Non-intrinsically safe circuit

Supply circuit:	
Terminals 91[+, L], 92[-, N]	$U = 24 \dots 65 \text{ V DC } (-15 \dots +10 \%)$ $P = 6 \text{ W (VEGAMET 861), } 7 \text{ W (VEGAMET 862)}$ $U = 100 \dots 230 \text{ V AC } (-15 \dots +10 \%), 50/60 \text{ Hz}$ $P = 17 \text{ VA (VEGAMET 861), } 19 \text{ VA (VEGAMET 862)}$ $U_m = 253 \text{ V AC}$

Relay output:	
Relay 1: terminals 61, 62, 63 Relay 2: terminals 64, 65, 66 Relay 3: terminals 67, 68, 69 Relay 4: terminals 70, 71, 72 In addition only VEGAMET 862: Relay 5: terminals 73, 74, 75 Relay 6: terminals 76, 77, 78	$1 \text{ A AC (cos phi} > 0.9), 250 \text{ V AC, } 250 \text{ VA}$ $1 \text{ A DC, } 60 \text{ V DC, } 40 \text{ W}$ $U_m = 253 \text{ V AC}$

Current output circuit:	
$I_{out} 1$, terminals 41[+], 42[-] In addition only VEGAMET 862: $I_{out} 2$, terminals 43[+], 44[-] $I_{out} 3$, terminals 45[+], 46[-]	$I = 0/4 \dots 20 \text{ mA}$ $U \leq 16 \text{ V DC}$ Load $\leq 500 \text{ Ohm}$ $U_m = 253 \text{ V AC}$

Digital input circuit:	
Digital IN 1, terminals 21, 22, 23 Digital IN 2, terminals 24, 25, 26 In addition only VEGAMET 862: Digital IN 3, terminals 27, 28, 29 Digital IN 4, terminals 30, 31, 32	$U_{\max}$ 30 V DC $I_{\max}$ 30 mA

Intrinsically safe circuit

Supply and signal circuit:	
4 ... 20 mA sensor 1: Terminals 1[+], 2[-] In addition only VEGAMET 862: 4 ... 20 mA sensor 2: Terminals 4[+], 5[-]	In type of protection intrinsic safety Ex ia IIC, IIB/IIIC. In type of protection intrinsic safety IS Grps. ABCDEFG. For connection to a certified, intrinsically safe circuit. $U_o \leq 23.3$ V DC $I_o \leq 111.3$ mA $P_o \leq 648.4$ mW Characteristics: linear C_i negligibly small L_i negligibly small The maximum values given in the table can be used as concentrated capacitances and concentrated inductances. The values for IIC and IIB are also permissible for dust explosive areas.

Ex ia	IIC		IIB, IIIC		IIA
Permissible external inductance L_o	0.2 mH	0.5 mH	0.5 mH	2 mH	10 mH
Permissible external capacitance C_o	120 nF	88 nF	580 nF	470 nF	760 nF

The intrinsically safe circuits of VEGAMET 841, 842, 861, 862 are galvanically separated from ground.

The intrinsically safe circuits of the VEGAMET 841, 842, 861, 862 are reliably separated from the non-intrinsically safe circuit up to a peak value of 375 V.

The maximum voltage on the non-intrinsically safe circuits must not exceed 253 Vrms in the event of a fault.

8 Mechanical data

The following mechanical data are valid for all housing and electronics versions.

Mechanical data	
Protection (IEC/EN 60529)	TYPE 4X, IP66/IP67
Connection cross-section:	0.25 ... 2.5 mm ²
Overvoltage category	II
Pollution degree	4

9 Thermal data


Permissible ambient temperatures

Permissible ambient temperature at the installation location of an instrument	Ambient temperature (Ta)
As associated equipment	-40 ... +60 °C (-40 ... +140 °F)

10 Installation

Controllers VEGAMET 841, 842, 861, 862 as associated equipment must be mounted and operated outside hazardous areas.

 If the intrinsically safe circuit is led into dust-explosive areas of zone 20, 21 or Div 1, Div 2, please make sure that the instruments connected to these circuits meet the requirements of the device protection level (EPL) Da, Db or Div 1, Div 2 and are certified respectively.



Hazardous Location (Classified) Class I, Zone 0, Group IIC Zone 20, Group IIC Class I, Division 1, Groups A, B, C and D Class II, Division 1, Groups E, F and G, Class III	Non hazardous Location associated apparatus provides intrinsically safe circuits for use in Class I, Zone 0, Group IIC Zone 20, Group IIC associated apparatus provides intrinsically safe circuits for use in Class I, Division 1, Groups A, B, C and D Class II, Division 1, Groups E, F and G, Class III	Intrinsic safety sensor Note 6) Note 7) Note 8) + -	Associated Apparatus VEGANET861/862 Sensor Channel 1: KL1/KL2 Sensor Channel 2: KL4/KL5 Note 2) Note 3) Note 6) Control Equipment and Supply (Note 2)	Current input circuits— Channel 1: Maximum values per channel: Uo / Voc = ± 233 V Io / Ioc = ± 113 mA Po = ± 648.4 mW Channel 2: Characteristic line: linear Channel 4 and 5: The effective internal capacitances and inductances are negligibly small.	Relay output Relay 1: Terminals 61, 62, 63 Relay 2: Terminals 64, 65, 66 Relay 3: Terminals 67, 68, 69 Relay 4: Terminals 70, 71, 72 Relay 5: Terminals 73, 74, 75 Relay 6: Terminals 76, 77, 78	Relay output 1 A, 250 V a.c., 250 VA 1 A, 60 V d.c., 40 W Uo = 253 V a.c. Uo = 253 V d.c. Channel 1: Terminals 41, 42 Channel 2: Terminals 43, 44 Channel 3: Terminals 45, 46 Channel 4: Terminals 47, 48 Channel 5: Terminals 49, 50	Digital input circuits 0/4 ... 20 mA U = 16 V Load ≤ 500 Ohm Uo = 253 V a.c. Channel 2: Terminals 24, 25, 26 Channel 3: Terminals 27, 28, 29 Channel 4: Terminals 30, 31, 32	U < 30 V dc I < 30 mA Uo = 253 V a.c.

The maximum values of Lo/Co from this table apply, when circuits are connected. With combined inductances and capacitances considered as concentrated reactances.

The values of this table are the maximum values acc. EN60079-11 Annex A and can be used up to the permissible limits as cable reactances.

Ex ia	IC, Gp. A	IB, Gp. C or IIC, Gp. E, F, G	IIA, Gp. D
Max. permissible external inductance Lo	2.87 nH	11.47 nH	27.95 nH
Max. permissible external capacitance Co	136 pF	1000 pF	3500 pF

Notes:

- The Intrinsic Safety Entity concept allows the interconnection of two intrinsically safe devices.
 - Class I, Zone 0, Group IIC
 - Class II, Zone 0, Group IIC
 - Class III, Zone 0, Group IIC
 - Class I, Zone 1, Group IIC
 - Class II, Zone 1, Group IIC
 - Class III, Zone 1, Group IIC
 - Class I, Zone 2, Group IIC
 - Class II, Zone 2, Group IIC
 - Class III, Zone 2, Group IIC
 - Class I, Zone 3, Group IIC
 - Class II, Zone 3, Group IIC
 - Class III, Zone 3, Group IIC
 - Class I, Zone 4, Group IIC
 - Class II, Zone 4, Group IIC
 - Class III, Zone 4, Group IIC
 - Class I, Zone 5, Group IIC
 - Class II, Zone 5, Group IIC
 - Class III, Zone 5, Group IIC
 - Class I, Zone 6, Group IIC
 - Class II, Zone 6, Group IIC
 - Class III, Zone 6, Group IIC
 - Class I, Zone 7, Group IIC
 - Class II, Zone 7, Group IIC
 - Class III, Zone 7, Group IIC
 - Class I, Zone 8, Group IIC
 - Class II, Zone 8, Group IIC
 - Class III, Zone 8, Group IIC
 - Class I, Zone 9, Group IIC
 - Class II, Zone 9, Group IIC
 - Class III, Zone 9, Group IIC
 - Class I, Zone 10, Group IIC
 - Class II, Zone 10, Group IIC
 - Class III, Zone 10, Group IIC
 - Class I, Zone 11, Group IIC
 - Class II, Zone 11, Group IIC
 - Class III, Zone 11, Group IIC
 - Class I, Zone 12, Group IIC
 - Class II, Zone 12, Group IIC
 - Class III, Zone 12, Group IIC
 - Class I, Zone 13, Group IIC
 - Class II, Zone 13, Group IIC
 - Class III, Zone 13, Group IIC
 - Class I, Zone 14, Group IIC
 - Class II, Zone 14, Group IIC
 - Class III, Zone 14, Group IIC
 - Class I, Zone 15, Group IIC
 - Class II, Zone 15, Group IIC
 - Class III, Zone 15, Group IIC
 - Class I, Zone 16, Group IIC
 - Class II, Zone 16, Group IIC
 - Class III, Zone 16, Group IIC
 - Class I, Zone 17, Group IIC
 - Class II, Zone 17, Group IIC
 - Class III, Zone 17, Group IIC
 - Class I, Zone 18, Group IIC
 - Class II, Zone 18, Group IIC
 - Class III, Zone 18, Group IIC
 - Class I, Zone 19, Group IIC
 - Class II, Zone 19, Group IIC
 - Class III, Zone 19, Group IIC
 - Class I, Zone 20, Group IIC
 - Class II, Zone 20, Group IIC
 - Class III, Zone 20, Group IIC
 - Class I, Zone 21, Group IIC
 - Class II, Zone 21, Group IIC
 - Class III, Zone 21, Group IIC
 - Class I, Zone 22, Group IIC
 - Class II, Zone 22, Group IIC
 - Class III, Zone 22, Group IIC
 - Class I, Zone 23, Group IIC
 - Class II, Zone 23, Group IIC
 - Class III, Zone 23, Group IIC
 - Class I, Zone 24, Group IIC
 - Class II, Zone 24, Group IIC
 - Class III, Zone 24, Group IIC
 - Class I, Zone 25, Group IIC
 - Class II, Zone 25, Group IIC
 - Class III, Zone 25, Group IIC
 - Class I, Zone 26, Group IIC
 - Class II, Zone 26, Group IIC
 - Class III, Zone 26, Group IIC
 - Class I, Zone 27, Group IIC
 - Class II, Zone 27, Group IIC
 - Class III, Zone 27, Group IIC
 - Class I, Zone 28, Group IIC
 - Class II, Zone 28, Group IIC
 - Class III, Zone 28, Group IIC
 - Class I, Zone 29, Group IIC
 - Class II, Zone 29, Group IIC
 - Class III, Zone 29, Group IIC
 - Class I, Zone 30, Group IIC
 - Class II, Zone 30, Group IIC
 - Class III, Zone 30, Group IIC
 - Class I, Zone 31, Group IIC
 - Class II, Zone 31, Group IIC
 - Class III, Zone 31, Group IIC
 - Class I, Zone 32, Group IIC
 - Class II, Zone 32, Group IIC
 - Class III, Zone 32, Group IIC
 - Class I, Zone 33, Group IIC
 - Class II, Zone 33, Group IIC
 - Class III, Zone 33, Group IIC
 - Class I, Zone 34, Group IIC
 - Class II, Zone 34, Group IIC
 - Class III, Zone 34, Group IIC
 - Class I, Zone 35, Group IIC
 - Class II, Zone 35, Group IIC
 - Class III, Zone 35, Group IIC
 - Class I, Zone 36, Group IIC
 - Class II, Zone 36, Group IIC
 - Class III, Zone 36, Group IIC
 - Class I, Zone 37, Group IIC
 - Class II, Zone 37, Group IIC
 - Class III, Zone 37, Group IIC
 - Class I, Zone 38, Group IIC
 - Class II, Zone 38, Group IIC
 - Class III, Zone 38, Group IIC
 - Class I, Zone 39, Group IIC
 - Class II, Zone 39, Group IIC
 - Class III, Zone 39, Group IIC
 - Class I, Zone 40, Group IIC
 - Class II, Zone 40, Group IIC
 - Class III, Zone 40, Group IIC
 - Class I, Zone 41, Group IIC
 - Class II, Zone 41, Group IIC
 - Class III, Zone 41, Group IIC
 - Class I, Zone 42, Group IIC
 - Class II, Zone 42, Group IIC
 - Class III, Zone 42, Group IIC
 - Class I, Zone 43, Group IIC
 - Class II, Zone 43, Group IIC
 - Class III, Zone 43, Group IIC
 - Class I, Zone 44, Group IIC
 - Class II, Zone 44, Group IIC
 - Class III, Zone 44, Group IIC
 - Class I, Zone 45, Group IIC
 - Class II, Zone 45, Group IIC
 - Class III, Zone 45, Group IIC
 - Class I, Zone 46, Group IIC
 - Class II, Zone 46, Group IIC
 - Class III, Zone 46, Group IIC
 - Class I, Zone 47, Group IIC
 - Class II, Zone 47, Group IIC
 - Class III, Zone 47, Group IIC
 - Class I, Zone 48, Group IIC
 - Class II, Zone 48, Group IIC
 - Class III, Zone 48, Group IIC
 - Class I, Zone 49, Group IIC
 - Class II, Zone 49, Group IIC
 - Class III, Zone 49, Group IIC
 - Class I, Zone 50, Group IIC
 - Class II, Zone 50, Group IIC
 - Class III, Zone 50, Group IIC

The values of this table are the maximum values acc. EN60079-11 Annex A and can be used up to the permissible limits as cable reactance's.

The maximum values of Lo/Co from this table apply, when circuits are connected, with combined inductances and capacitances considered as concentrated reactance's.

votes:

- The Intrinsic Safety Entry concept allows the interconnection of two intrinsically safe devices. The intrinsic safety entry parameters need specifying in combination as a system where U_o or V_{oc} or I_{sc} or P_{max} , or I_a or $G > G_0$. C_{ob} , L_a or $U_i > U_i^o$, L_{ob} or U_i or V_{ic} or I_{sc} or P_{max} .
- Control equipment connected to the Associated Apparatus that not use generate more than 10 mW.
- Division 1 installations should be in accordance with the National Electrical Code (NFPA70).
- For Division 1 installations, the configuration of associated Apparatus and be cLUS Under Entry Concept.
- Field service/manufacturer's installation drawing shall be followed when installing the cLUS.
- The Configuration of Field Device must be cLUS Under Entry Concept.
- The Configuration of Field Service's installation drawing shall be followed when installing the cLUS.

Die Zeichnung bleibt Eigentum der Firma VEGA-Gesamtholz KG. Diese darf unsere Genehmigung weder kopiert, noch 3. Personen oder Konkurrenzfirmen mitgeteilt werden. competitors without our approval.

(§ 2 paragraph 1 fig.2 copyright act of 9th Sept. 1965)

Printing date:

VEGA

All statements concerning scope of delivery, application, practical use and operating conditions of the sensors and processing systems correspond to the information available at the time of printing.

Subject to change without prior notice

© VEGA Grieshaber KG, Schiltach/Germany 2021

61270-EN-210222

VEGA Grieshaber KG
Am Hohenstein 113
77761 Schiltach
Germany

Phone +49 7836 50-0
E-mail: info.de@vega.com
www.vega.com

c-UL-us

Printing date:

VEGA

All statements concerning scope of delivery, application, practical use and operating conditions of the sensors and processing systems correspond to the information available at the time of printing.

Subject to change without prior notice

© VEGA Grieshaber KG, Schiltach/Germany 2021

61270-UN-211001

VEGA Grieshaber KG
Am Hohenstein 113
77761 Schiltach
Germany

Phone +49 7836 50-0
E-mail: info.de@vega.com
www.vega.com