

Operating Instructions

Overvoltage protection in two-wire technology

B63-48, B63-32

For 4 ... 20 mA/HART, Profibus PA and Foundation Fieldbus circuits



Document ID: 33012



VEGA

Contents

1	About this document	3
1.1	Function	3
1.2	Target group	3
1.3	Symbols used	3
2	For your safety	4
2.1	Authorised personnel	4
2.2	Appropriate use	4
2.3	Warning about incorrect use	4
2.4	General safety instructions	4
2.5	Installation and operation in the USA and Canada	5
3	Product description	6
3.1	Configuration	6
3.2	Principle of operation	6
3.3	Packaging, transport and storage	7
4	Mounting instructions	8
5	Connecting to power supply	9
5.1	Preparing the connection	9
5.2	Connection procedure	9
5.3	Wiring plan	11
6	Diagnostics and servicing	12
6.1	Maintenance	12
6.2	Rectify faults	12
6.3	How to proceed if a repair is necessary	12
7	Dismount	13
7.1	Dismounting steps	13
7.2	Disposal	13
8	Certificates and approvals	14
8.1	Conformity	14
8.2	Environment management system	14
9	Supplement	15
9.1	Technical data	15
9.2	Dimensions	16
9.3	Industrial property rights	17
9.4	Trademark	17

1 About this document

1.1 Function

This instruction provides all the information you need for mounting, connection and setup as well as important instructions for maintenance, fault rectification, safety and the exchange of parts. Please read this information before putting the instrument into operation and keep this manual accessible in the immediate vicinity of the device.

1.2 Target group

This instruction manual is directed to trained personnel. The contents of this manual must be made available to the qualified personnel and implemented.

1.3 Symbols used



Document ID

This symbol on the front page of this instruction refers to the Document ID. By entering the Document ID on www.vega.com you will reach the document download.



Information, note, tip: This symbol indicates helpful additional information and tips for successful work.



Note: This symbol indicates notes to prevent failures, malfunctions, damage to devices or plants.



Caution: Non-observance of the information marked with this symbol may result in personal injury.



Warning: Non-observance of the information marked with this symbol may result in serious or fatal personal injury.



Danger: Non-observance of the information marked with this symbol results in serious or fatal personal injury.



Ex applications

This symbol indicates special instructions for Ex applications.



List

The dot set in front indicates a list with no implied sequence.



Sequence of actions

Numbers set in front indicate successive steps in a procedure.



Disposal

This symbol indicates special instructions for disposal.

2 For your safety

2.1 Authorised personnel

All operations described in this documentation must be carried out only by trained and authorized personnel.

During work on and with the device, the required personal protective equipment must always be worn.

2.2 Appropriate use

B63-48, B63-32 are overvoltage arresters in two-wire technology for installation in VEGA sensors of the plics® family.

You can find detailed information about the area of application in chapter "*Product description*".

2.3 Warning about incorrect use

Inappropriate or incorrect use of this product can give rise to application-specific hazards, e.g. vessel overflow through incorrect mounting or adjustment. Damage to property and persons or environmental contamination can result. Also, the protective characteristics of the instrument can be impaired.

2.4 General safety instructions

This is a state-of-the-art instrument complying with all prevailing regulations and directives. The instrument must only be operated in a technically flawless and reliable condition. The operating company is responsible for the trouble-free operation of the instrument. When measuring aggressive or corrosive media that can cause a dangerous situation if the instrument malfunctions, the operating company has to implement suitable measures to make sure the instrument is functioning properly.

During the entire duration of use, the operating company is obliged to determine the compliance of the necessary occupational safety measures with the current valid rules and regulations and also take note of new regulations.

The safety instructions in this operating instructions manual, the national installation standards as well as the valid safety regulations and accident prevention rules must be observed.

For safety and warranty reasons, any invasive work on the device beyond that described in the operating instructions manual may be carried out only by personnel authorised by us. Arbitrary conversions or modifications are explicitly forbidden. For safety reasons, only the accessory specified by us must be used.

To avoid any danger, the safety approval markings and safety tips on the device must also be observed.

2.5 Installation and operation in the USA and Canada

This information is only valid for USA and Canada. Hence the following text is only available in the English language.

Installations in the US shall comply with the relevant requirements of the National Electrical Code (NEC - NFPA 70) (USA).

Installations in Canada shall comply with the relevant requirements of the Canadian Electrical Code (CEC Part I) (Canada).

3 Product description

3.1 Configuration

Scope of delivery

The scope of delivery encompasses:

- Overvoltage arrester B63-48, B63-32
- O-ring seal¹⁾
- Documentation
 - This operating instructions manual
 - Ex specific safety instructions and, if necessary, further certificates

Constituent parts

The following illustration shows the structure of B63-48, B63-32:

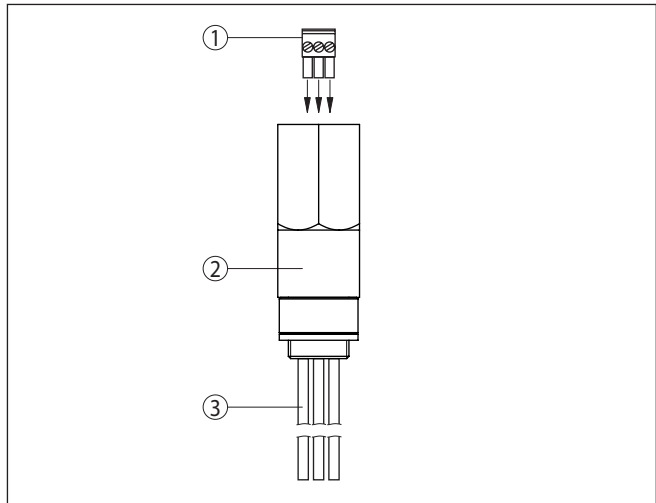


Fig. 1: Configuration of B63-48, B63-32

- 1 Terminals for the signal cable input (unprotected side)
- 2 B63-48, B63-32
- 3 Signal cable output to the sensor (protected side)

3.2 Principle of operation

Application area

The overvoltage arresters B63-48, B63-32 are completely enclosed in a stainless steel housing. They can be used for VEGA sensors of the plics® family.

- Type B63-48 for 4 ... 20 mA and 4 ... 20 mA/HART sensors
- Type B63-32 for Profibus PA and Foundation Fieldbus sensors

Functional principle

B63-48, B63-32 overvoltage arresters reduce any voltage surges that may reach the signal cables to a harmless level. The devices contain voltage-limiting components as well as gas conductors for bleeding off impulses of up to 10 kA to ground.

¹⁾ Is only used with version thread M20 x 1.5

3.3 Packaging, transport and storage

Packaging

Your instrument was protected by packaging during transport. Its capacity to handle normal loads during transport is assured by a test based on ISO 4180.

The packaging consists of environment-friendly, recyclable cardboard. For special versions, PE foam or PE foil is also used. Dispose of the packaging material via specialised recycling companies.

Transport

Transport must be carried out in due consideration of the notes on the transport packaging. Nonobservance of these instructions can cause damage to the device.

Transport inspection

The delivery must be checked for completeness and possible transit damage immediately at receipt. Ascertained transit damage or concealed defects must be appropriately dealt with.

Storage

Up to the time of installation, the packages must be left closed and stored according to the orientation and storage markings on the outside.

Unless otherwise indicated, the packages must be stored only under the following conditions:

- Not in the open
 - Dry and dust free
 - Not exposed to corrosive media
 - Protected against solar radiation
 - Avoiding mechanical shock and vibration
-
- Storage and transport temperature see chapter "*Technical data - Ambient conditions*"
 - Relative moisture 20 ... 85 %

Storage and transport temperature

4 Mounting instructions

B63-48, B63-32 overvoltage arresters are screwed into the position of the cable gland on the sensor housing. The thread of the overvoltage arrester must match with the thread on the sensor housing. The cable gland of the sensor is screwed into the overvoltage arrester. No further assembling necessary.

**Note:**

The attached O-ring seal must be used to reach the housing protection rating of the sensor with version M20 x 1.5.

**Note:**

In order to reach the housing protection rating of the sensor, PTFE gasket strip must be used with the ½ NPT version. First of all, screw in by hand; if necessary, use grease and finally tighten with a ½ turn with a SW 27 wrench.²⁾

²⁾ Do not use any grease for sensors with plastic housing

5 Connecting to power supply

5.1 Preparing the connection

Note safety instructions

Always keep in mind the following safety instructions:

- Connect only in the complete absence of line voltage



Danger:

The stainless steel housing of B63-48, B63-32 has no electrical function and therefore provides no internal or external connection to ground or potential equalization.

The plant operator is responsible for ensuring an adequate connection, for example within the context of protective grounding, depending on the installation and protection rating.

The B63-48, B63-32 exhibit a voltage resistance of 0.5 kV for one minute in the signal circuit with respect to the stainless steel housing, but not with respect to the green/yellow cable in the sensor circuit. This must be taken into account for the electrical installation.

Before starting setup make sure that the power supply corresponds to the specifications on the type label.



In Ex systems, grounding is carried out in accordance with the installation regulations. For example, according to DIN EN IEC 60079-14, the cable shielding may only be connected to ground potential on one side.

5.2 Connection procedure

Proceed as follows:

1. Unscrew housing cover of the sensor
2. If a display and adjustment module is present, remove it according to the operating instructions of the sensor
3. Unscrew the cable gland
4. Push the connection cables through the cable gland into the sensor
5. Screw B63-48, B63-32 into the opening of the cable gland according to the description under "*Mounting instructions*"
6. Shorten the connection cables of B63-48, B63-32 to the suitable length, strip off the wire ends approx. 1 cm (0.4 in)



Note:

To ensure an effective overvoltage protection, the connection cables should be as short as possible. Unnecessary cable should not be wound up and placed inside the sensor housing. This could influence the protective function of B63-48, B63-32.

7. Connect wire ends red and black according to chapter "*Wiring plan*" and operating instructions of the respective sensor
8. Connect wire end green/yellow to the internal ground terminal in the sensor housing, connect external ground terminal to potential equalisation

9. Pull out terminal block inside B63-48, B63-32 with pliers
10. Push signal cables and screen through the cable gland and connect according to chapter "*Wiring plan*" to the terminals
11. Check all cable connections, especially the ground connection, to make sure they are tightened sufficiently
12. Insert terminal block into its position by using the pliers. A mechanical coding ensures the correct position
13. Screw cable gland into the thread of B63-48, B63-32, tighten compression nut. The seal ring must completely encircle the cable

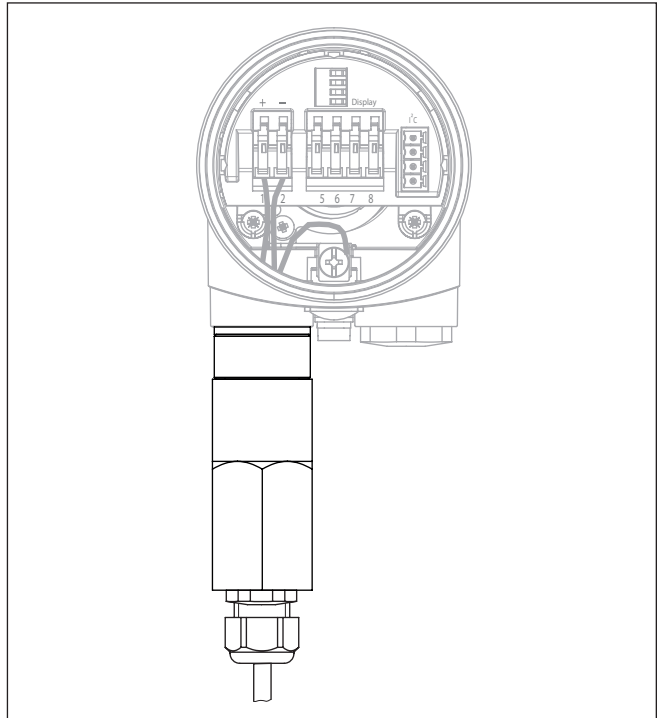


Fig. 2: Overvoltage protection B63-48, B63-32 after installation and connection

14. Screw the housing lid back on
The electrical connection is finished.

5.3 Wiring plan

Wiring plan

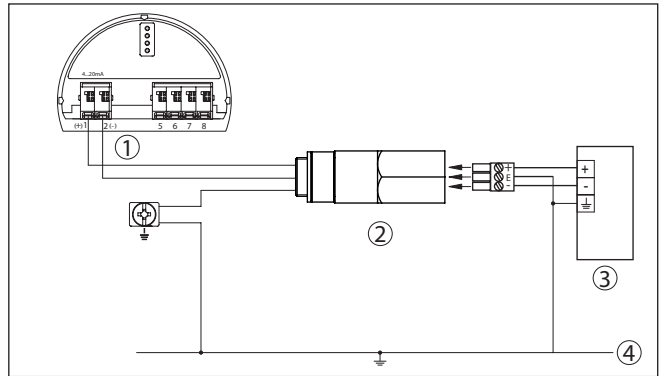


Fig. 3: Wiring schematic B63-32, B63-48

- 1 Sensor
- 2 Overvoltage protection
- 3 Controller/PLC
- 4 Potential equalisation

Terminals sensor	Wire colour/Polarity
1	Red (+)
2	Black (-)
Ground terminal	Green/Yellow



In Ex systems, grounding is carried out in accordance with the installation regulations. For example, according to DIN EN IEC 60079-14, the cable shielding may only be connected to ground potential on one side.

6 Diagnostics and servicing

6.1 Maintenance

Maintenance

If the device is used properly, no special maintenance is required in normal operation.

6.2 Rectify faults

Reaction when malfunction occurs

The operator of the system is responsible for taking suitable measures to rectify faults.

Causes of malfunction

Maximum reliability is ensured. Nevertheless, faults can occur during operation. These may be caused by the following, e.g.:

- Voltage supply
- Interference on the lines, contact problems

Fault rectification

The first measure to be taken is to check the input/output signal as well as the power supply. In many cases, the causes can be determined and faults can be quickly rectified.

Reaction after fault rectification

Depending on the reason for the fault and the measures taken, the steps described in chapter "Setup" must be carried out again or must be checked for plausibility and completeness.

24 hour service hotline

Should these measures not be successful, please call in urgent cases the VEGA service hotline under the phone no. **+49 1805 858550**.

The hotline is also available outside normal working hours, seven days a week around the clock.

Since we offer this service worldwide, the support is provided in English. The service itself is free of charge, the only costs involved are the normal call charges.

6.3 How to proceed if a repair is necessary

On our homepage you will find detailed information on how to proceed in the event of a repair.

So that we can carry out the repair quickly and without queries, generate an instrument return form there with the data of your device.

The following is required:

- The serial number of the instrument
- A short description of the fault
- Details of the medium, if applicable

Print the generated instrument return form.

Clean the instrument and pack it damage-proof.

Send the printed instrument return form and possibly a safety data sheet together with the device.

You will find the address for the return on the generated instrument return form.

7 Dismount

7.1 Dismounting steps

Take note of chapters "*Mounting*" and "*Connecting to voltage supply*" and carry out the listed steps in reverse order.

7.2 Disposal



Pass the instrument on to a specialised recycling company and do not use the municipal collecting points.

Remove any batteries in advance, if they can be removed from the device, and dispose of them separately.

If personal data is stored on the old device to be disposed of, delete it before disposal.

If you have no way to dispose of the old instrument properly, please contact us concerning return and disposal.

8 Certificates and approvals

8.1 Conformity

The device complies with the legal requirements of the applicable country-specific directives or technical regulations. We confirm conformity with the corresponding labelling.

The corresponding conformity declarations can be found on our homepage.

8.2 Environment management system

Protection of the environment is one of our most important duties. That is why we have introduced an environment management system with the goal of continuously improving company environmental protection. The environment management system is certified according to DIN EN ISO 14001.

Help us to meet these requirements and observe the environmental instructions in the chapters "*Packaging, transport and storage*", "*Disposal*" of this instructions manual.

9 Supplement

9.1 Technical data

Note for approved instruments

The technical data in the respective safety instructions are valid for approved instruments (e.g. with Ex approval). In some cases, these data can differ from the data listed herein.

All approval documents can be downloaded from our homepage.

General data

Version	The device can be screwed into the sensor housing instead of the cable gland
Housing material	316Ti
Weight	approx. 175 g (0.385 lbs)

Electrical characteristics³⁾

Operating voltage/Signal	
– B63-48	9 ... 48 V DC/4 ... 20 mA/HART
– B63-32	9 ... 32 V DC/Profibus PA, Foundation Fieldbus
Leakage current at nominal voltage	< 10 µA
Max. permissible current	1 A
Internal resistance	1 Ω
Response voltage (1 kV/µs)	< 76 V
Response time	< 1 µs
Discharge current	< 10 kA (8/20 µs)
Band width	1 MHz

Electromechanical data

Screw terminals for cable cross-section	< 1 mm ² (AWG 18)
Number of wires	two signal cables, one ground cable
Wire cross-section	1.5 mm ² (AWG 14)
Cable length	250 mm (9.843 in)

Ambient conditions

Ambient temperature	-40 ... +85 °C (-40 ... +185 °F)
Storage and transport temperature	-40 ... +85 °C (-40 ... +185 °F)
Moisture	5 ... 95 % (non-condensing)

Electrical protective measures

Protection in assembled and connected state	IP66/IP67
---	-----------

Approvals

Instruments with approvals can have different technical specifications depending on the version.

³⁾ Reference temperature 25 °C (77 °F).

For that reason the associated approval documents of these instruments have to be carefully noted. They are part of the delivery or can be downloaded under "www.vega.com", "*Instrument search (serial number)*" as well as via "*Downloads*" and "*Approvals*".

9.2 Dimensions

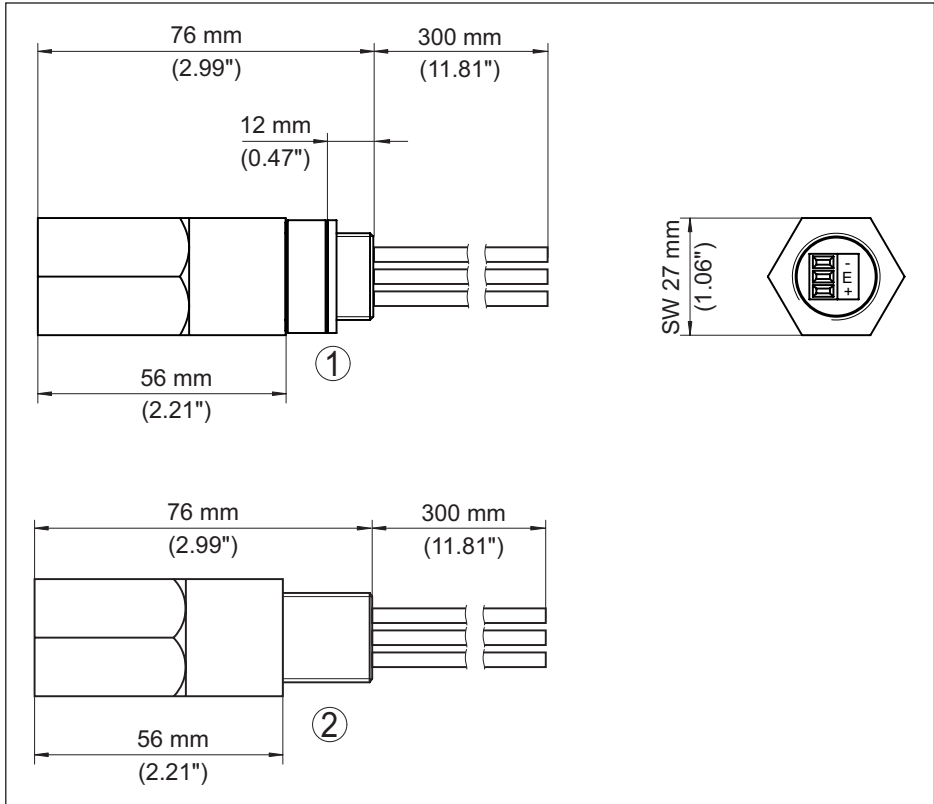


Fig. 4: Dimensions B63-48, B63-32

- 1 Thread M20 x 1.5
- 2 Thread ½ NPT

9.3 Industrial property rights

VEGA product lines are global protected by industrial property rights. Further information see www.vega.com.

VEGA Produktfamilien sind weltweit geschützt durch gewerbliche Schutzrechte.

Nähere Informationen unter www.vega.com.

Les lignes de produits VEGA sont globalement protégées par des droits de propriété intellectuelle. Pour plus d'informations, on pourra se référer au site www.vega.com.

VEGA líneas de productos están protegidas por los derechos en el campo de la propiedad industrial. Para mayor información revise la pagina web www.vega.com.


Линии продукции фирмы ВЕГА защищаются по всему миру правами на интеллектуальную собственность. Дальнейшую информацию смотрите на сайте www.vega.com.

VEGA系列产品在全球享有知识产权保护。

进一步信息请参见网站www.vega.com。

9.4 Trademark

All the brands as well as trade and company names used are property of their lawful proprietor/originator.

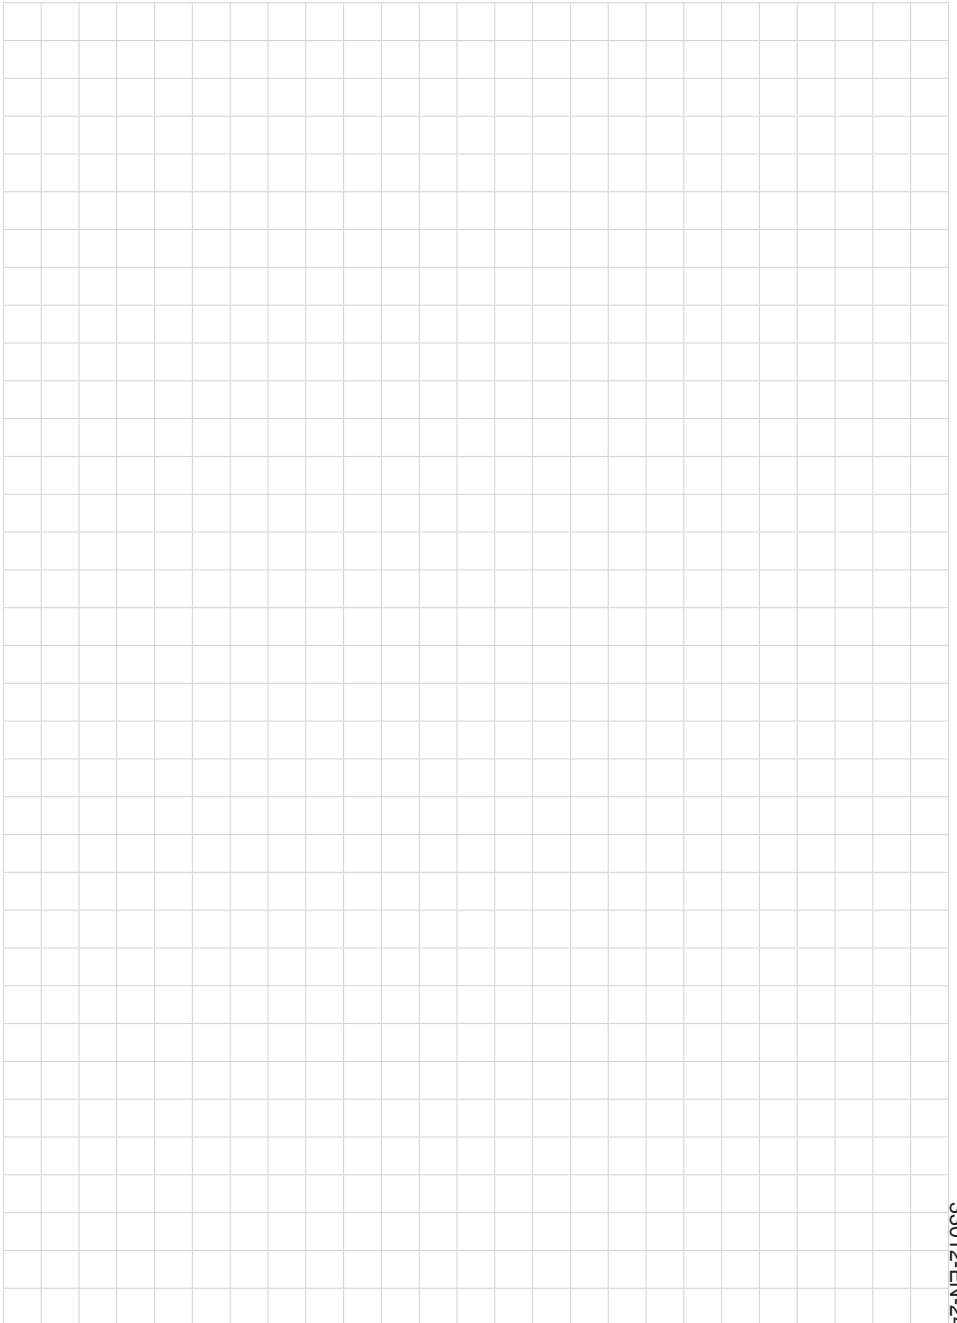



Printing date:

VEGA

All statements concerning scope of delivery, application, practical use and operating conditions of the sensors and processing systems correspond to the information available at the time of printing.

Subject to change without prior notice

© VEGA Grieshaber KG, Schiltach/Germany 2024



33012-EN-240422

VEGA Grieshaber KG
Am Hohenstein 113
77761 Schiltach
Germany

Phone +49 7836 50-0
E-mail: info.de@vega.com
www.vega.com