



Safety instructions

VEGAPULS 66

Intrinsic safety

PTB 03 ATEX 2060 X

Two-wire 4 ... 20 mA/HART

HW ≤ 1.10 - SW ≤ 3.90



CE 0044



Document ID: 34238



VEGA

Contents

| | | |
|----|--|----|
| 1 | Area of applicability..... | 4 |
| 2 | General information..... | 4 |
| 3 | Important specification in the type code..... | 5 |
| 4 | Technical data | 6 |
| 5 | Application conditions | 8 |
| 6 | Protection against static electricity | 9 |
| 7 | Use of an overvoltage arrester | 9 |
| 8 | Versions with antenna extension | 9 |
| 9 | Grounding..... | 9 |
| 10 | Impact and friction sparks | 9 |
| 11 | Non-grounded, metallic parts..... | 10 |
| 12 | Material resistance | 10 |
| 13 | Versions with rinsing connection..... | 10 |
| 14 | Mounting with external display unit VEGADIS 61/81..... | 10 |
| 15 | Removing and replacing the red threaded/dust cover | 10 |

Supplementary documentation:

- Operating Instructions VEGAPULS 66
- EU-type approval certificate PTB 03 ATEX 2060 X (Document ID: 37315)
- EU declaration of conformity (Document ID: 56305)

Editing status: 2018-03-20

| | |
|----|---|
| DE | Sicherheitshinweise für den Einsatz in explosionsgefährdeten Bereichen |
| EN | Safety instructions for the use in hazardous areas |
| FR | Consignes de sécurité pour une application en atmosphères explosibles |
| IT | Normative di sicurezza per l'impiego in luoghi con pericolo di esplosione |
| ES | Instrucciones de seguridad para el empleo en áreas con riesgo de explosión |
| PT | Normas de segurança para utilização em zonas sujeitas a explosão |
| NL | Veiligheidsaanwijzingen voor gebruik op plaatsen waar ontploffingsgevaar kan heersen |
| SV | Säkerhetsanvisningar för användning i explosionsfarliga områden |
| DA | Sikkerhedsforskrifter til anvendelse i explosionsfarlig atmosfære |
| FI | Turvallisuusohjeet räjähdysvaarallisissa tiloissa käyttöä varten |
| EL | Υποδείξεις ασφαλείας για τη χρησιμοποίηση σε περιοχές που υπάρχει κίνδυνος έκρηξης |

| | |
|----|--|
| DE | Die vorliegenden Sicherheitshinweise sind im Download unter www.vega.com standardmäßig in den Sprachen deutsch, englisch, französisch und spanisch verfügbar. Weitere EU-Landessprachen stellt VEGA nach Anforderungen zur Verfügung. |
| EN | These safety instructions are available as a standard feature in the download area under www.vega.com in the languages German, English, French and Spanish. Further EU languages will be made available by VEGA upon request. |
| FR | Les présentes consignes de sécurité sont disponibles au téléchargement sous www.vega.com en standard en allemand, en anglais, en français et en espagnol. VEGA met à disposition d'autres langues de l'Union Européenne selon les exigences. |
| ES | Las indicaciones de seguridad presentes están disponibles en la zona de descarga de www.vega.com de forma estándar en los idiomas inglés, francés y español. VEGA pone a disposición otros idiomas de la UE cuando son requeridos. |

1 Area of applicability

These safety instructions apply to the radar sensor VEGAPULS 66 series VEGAPULS PS66(*).CX/A/M/K****H**** according to EU type approval certificate PTB 03 ATEX 2060 X (certificate number on the type label) and the number of the safety instruction (34238) on the type label.

Electronics module PS60HC is integrated in VEGAPULS PS66(*).CX/A/M/K****H****.

2 General information

The level measuring instrument VEGAPULS PS66(*).CX/A/M/K****H**** is based on radar technology and is used to detect the distance between medium surface and sensor by means of high frequency electromagnetic waves in the GHz range. The electronics uses the running time of the signals reflected by the medium surface to calculate the distance to the medium surface.

The VEGAPULS PS66(*).CX/A/M/K****H**** consist of an electronics housing, a process connection element and a sensor (the antenna). As an option the display and adjustment module can also be integrated.

The measured products can also be combustible liquids, gases, mist or vapour.

The VEGAPULS PS66(*).CX/A/M/K****H**** are suitable for use in hazardous atmospheres of all combustible materials of explosion group IIA, IIB and IIC for applications requiring instruments of category 1G, category 1/2G or category 2G.

If the VEGAPULS PS66(*).CX/A/M/K****H**** are installed and operated in hazardous areas, the general Ex installation regulations EN 60079-14 as well as these safety instructions must be observed.

The operating instructions as well as the installation regulations or standards that apply for explosion protection of electrical systems must generally be observed.

The installation of explosion-endangered systems must always be carried out by qualified personnel.

Category 1G instruments

The VEGAPULS PS66(*).CX/A/M/K****H**** are installed in hazardous areas requiring an instrument of category 1G.

Category 1/2G instruments

The electronics housing is installed in hazardous areas requiring instruments of category 2G. The process connection element is installed in the separating wall, which separates areas requiring instruments of category 2G or 1G. The antenna system with the mechanical fixing element is installed in hazardous areas requiring instruments of category 1G.

Category 2G instruments

The VEGAPULS PS66(*).CX/A/M/K****H**** are installed in hazardous areas requiring an instrument of category 2G.

Ignition protection type:

II 1G, 1/2G, 2G Ex ia IIC T6 ... T1 Ga, Ga/Gb, Gb

3 Important specification in the type code

VEGAPULS PS66(*).abcdefghijklmnopqrstuvwxyz

| Position | | Feature | Description |
|----------|----------------------------|---------|--|
| ab | Approval | CX | ATEX II 1G, 1/2G, 2G Ex ia IIC T6 |
| | | CA | ATEX II 1G, 1/2G, 2G Ex ia IIC T6 + WHG |
| | | CM | ATEX II 1G, 1/2G, 2G Ex ia IIC T6 + Ship approval |
| | | CK | ATEX II 1G, 1/2G, 2G Ex ia IIC + II 1D, 1/2D, 2D Ex t IIIC |
| c | Version / Material | * | Horn antennas, standpipe; One-digit alphanumeric variable for metal antenna, standpipe with different metal materials and diameters |
| de | Process fitting / Material | ** | Flanges, Clamp; two-digit alphanumeric code for metallic process fittings, industrial flanges according to ASME, BS, DIN, EN, GOST, HG/T, JIS and for other international, national or industrial standards, guidelines or standards with suitable pressure and temperature specifications |
| f | Seal / Process temperature | 1 | FKM (A+P GLT FPM 70.16-06) / -40 ... +80 °C |
| | | 2 | FKM (A+P GLT FPM 70.16-06) / -40 ... +150 °C |
| | | 3 | FFKM (Kalrez 6375) / -25 ... +150 °C |
| | | 4 | Silicone FEP coated (A+P FEP-O-SEAL)-Viton / -40 ... +150 °C |
| | | 5 | EPDM (A+P 70.10-02) / -40 ... +150 °C |
| | | 6 | PTFE (Teflon) / -40 ... +200 °C |
| | | G | Graphite and ceramic / -60 ... +250 °C |
| | | I | Graphite and ceramic / -60 ... +300 °C |
| | | H | Graphite and ceramic / -60 ... +400 °C |
| g | Electronics | H | Two-wire 4 ... 20 mA/HART |
| h | Housing / Protection | K | Plastic single chamber / IP66/IP67 |
| | | A | Aluminium single chamber / IP66/IP68 (0.2 bar) |
| | | H | Special colour Aluminium single chamber / IP66/IP68 (0.2 bar) |
| | | 3 | Aluminium single chamber / IP66/IP68 (1 bar) |
| | | D | Aluminium double chamber / IP66/IP68 (0.2 bar) |
| | | S | Special colour Aluminium double chamber / IP66/IP68 (0.2 bar) |
| | | Y | Aluminium double chamber / IP66/IP67 with M12 x 1 for VEGADIS 61/81 |
| | | V | Stainless steel single chamber (precision casting) / IP66/IP68 (0.2 bar) |
| | | 5 | Stainless steel single chamber (precision casting) / IP66/IP68 (1 bar) |
| | | 8 | Stainless steel single chamber (electropolished) / IP66/IP68 (0.2 bar) |
| | | W | Stainless steel double chamber / IP66/IP68 (0.2 bar) |
| | | Q | Stainless steel double chamber / IP66/IP67 with M12 x 1 for VEGADIS 61/81 |
| | | R | Plastic double chamber / IP66/IP67 |
| | | X | Plastic double chamber / IP66/IP67 with M12 x 1 for VEGADIS 61/81 |

| Position | | Feature | Description |
|----------|---|---------|--|
| i | Cable entry / Cable gland / Plug connection | M | M20 x 1.5 / with / without |
| | | N | ½ NPT / without / without |
| | | * | One-digit alphanumeric code for further suitable fittings, cable entries and closing screws. |
| j | Display and adjustment module PLICSCOM | X | without |
| | | A | mounted |
| | | F | without; lid with inspection window |
| | | B | Laterally mounted |
| | | K | mounted; with Bluetooth, magnetic pen operation |
| | | L | laterally mounted; with Bluetooth, magnetic pen operation |
| | | U | mounted; with Bluetooth, magnetic pen operation, battery |
| | | S | laterally mounted; with Bluetooth, magnetic pen operation, battery |
| k | Additional equipment | X | without |
| | | V | Purging connection with reflux valve |
| | | * | with equipment |

In the following, all above mentioned versions are called VEGAPULS PS66(*).CX/A/M/K****H****. If parts of these safety instructions refer only to certain versions, then these will be mentioned explicitly with their type code.

4 Technical data

Electrical data

Type of protection intrinsic safety Ex i

Power supply and signal circuit: (terminals 1[+], 2[-] in "Ex-i" electronics compartment; with double chamber housing version in connection compartment)

In type of protection intrinsic safety Ex ia IIC

Only for connection to a certified, intrinsically safe circuit.

Maximum values:

- $U_i = 30 \text{ V}$
- $I_i = 131 \text{ mA}$
- $P_i = 983 \text{ mW}$

The effective internal capacitance C_i is negligibly small.

Effective internal inductance L_i is negligibly small.

In the version with fix mounted connection cable $L_i = 0,55 \mu\text{H/m}$, $C_{i \text{ wire/wire}} = 58 \text{ pF/m}$ and $C_{i \text{ wire/screen}} = 270 \text{ pF/m}$ must be taken into account.

Indicating and adjustment circuit: (terminals 5, 6, 7, 8 in "Ex-i" electronics compartment or plug connection; with double chamber housing version in the connection compartment)

In type of protection intrinsic safety Ex ia IIC

For connection to the intrinsically safe circuit of the associated external indicating unit VEGADIS 61/81 (PTB 02 ATEX 2136 X).

The rules for the interconnection of intrinsically safe circuits between VEGAPULS PS66(*).CX/A/M/K****H**** and the external indicating unit VEGADIS 61/81 are fulfilled, provided that the total inductance and total capacitance of the connection cable between VEGAPULS PS66(*).CX/A/M/K****H**** and the external indicating unit VEGADIS 61/81 $L_{\text{cable}} = 100 \mu\text{H}$ and $C_{\text{cable}} = 2.8 \mu\text{F}$ are not exceeded.

When using the delivered VEGA connection cable between VEGAPULS PS66(*).CX/A/M/K****H**** and the external indicating unit VEGADIS 61/81, the following listed cable inductances L_c and cable capacitances C_c must be taken into account with a cable length $\geq 50 \text{ m}$.

- $L_c = 0.62 \mu\text{H/m}$
- $C_{\text{1 wire/wire}} = 132 \text{ pF/m}$
- $C_{\text{1 wire/screen}} = 208 \text{ pF/m}$
- $C_{\text{1 screen/screen}} = 192 \text{ pF/m}$

Circuit of the display and adjustment module: (spring contacts in the "Ex-i" connection compartment; with double chamber housing version also in the connection compartment)

In type of protection intrinsic safety Ex ia IIC

For connection to the display and adjustment module PLICSCOM resp. PLICSCOM(*).*B/W* (TÜV 15 ATEX 161127 U).

With the double chamber housing version, the display and adjustment module can be installed either in the "Ex -i" connection compartment or in the connection compartment.

Communication circuit:

In type of protection intrinsic safety Ex ia IIC

For connection to the intrinsically safe signal circuit of an VEGA interface converter VEGACONNECT (PTB 01 ATEX 2007, PTB 07 ATEX 2013 X).

For applications requiring category 2G equipment, the intrinsically safe power supply and signal circuit can correspond to protection class ia or ib. For connection to a circuit with protection class ib, the ignition protection identification is Ex ib IIC T6 oder T5.

For applications requiring instruments of category 1G or 1/2G, the intrinsically safe power supply and signal circuit must correspond to protection class ia.

For applications requiring instruments of category 1G or 1/2G the VEGAPULS PS66(*).CX/A/M/K****H**** is preferably connected to appropriate equipment with galvanically isolated, intrinsically safe circuits.

The metal parts of the level measuring instruments on radar basis type VEGAPULS PS6* are electrically connected to the earth terminals.

In the versions of the radar sensors VEGAPULS PS66(*).CX/A/M/K****H**** the intrinsically safe circuits are electrically isolated from elements that may be earthed.

5 Application conditions

The max. permissible ambient temperatures depending on the temperature classes are specified in the following tables.

For assessment and reduction of the explosion risk, valid standards such as for example EN 1127-1 must be taken into account.

Category 1G instruments

| Temperature class | Temperature on the antenna | Ambient temperature on the electronics |
|-------------------|----------------------------|--|
| T5 | -20 ... +50 °C | -20 ... +50 °C |
| T4, T3, T2, T1 | -20 ... +60 °C | -20 ... +60 °C |

For applications requiring instruments of category 1G the process pressure of the media must be between 0.8 ... 1.1 bar. The application conditions when operating in the absence of explosive mixtures can be found in the manufacturer information.

Category 1/2G instruments

| Temperature class | Temperature on the antenna | Ambient temperature on the electronics |
|-------------------|----------------------------|--|
| T6 | -20 ... +60 °C | -40 ... +46 °C |
| T5 | -20 ... +60 °C | -40 ... +61 °C |
| T4, T3, T2, T1 | -20 ... +60 °C | -40 ... +80 °C |

For applications requiring instruments of category 1G the process pressure of the media must be between 0.8 ... 1.1 bar. If the VEGAPULS PS66(*).CX/A/M/K****H**** are operated at temperatures higher than those specified in the above table, please make sure by means of appropriate measures that there is no danger of ignition from the hot surfaces. The max. permissible temperature on the electronics/housing should not exceed the values according to the above table.

Please make sure that the sensor also in case of failure does not generate heat itself. Responsibility for safe operation of the equipment, with respect to pressures/temperatures of the materials used, rests with the operator.

The prerequisites for operation in the absence of explosive mixtures can be found in the manufacturer specifications.

Category 2G instruments

| Temperature class | Temperature on the antenna | Ambient temperature on the electronics |
|-------------------|----------------------------|--|
| T6 | -60 ... +80 °C | -40 ... +46 °C |
| T5 | -60 ... +95 °C | -40 ... +61 °C |
| T4 | -60 ... +130 °C | -40 ... +80 °C |
| T3 | -60 ... +195 °C | -40 ... +80 °C |
| T2 | -60 ... +290 °C | -40 ... +80 °C |
| T1 | -60 ... +390 °C | -40 ... +80 °C |

If the VEGAPULS PS66(*).CX/A/M/K****H**** are operated at higher temperatures than those specified in the above table, please make sure by means of appropriate measures that there is no danger of ignition from hot surfaces. The max. permissible temperature on the electronics/housing

must not exceed the values specified in the above table.

Please make sure that the sensor also in case of failure does not generate heat itself. Responsibility for safe operation of the equipment, with respect to pressures/temperatures of the materials used, rests with the operator.

The prerequisites for operation in the absence of explosive mixtures can be found in the manufacturer specifications.

6 Protection against static electricity

The VEGAPULS PS66(*).CX/A/M/K****H**** in versions with electrostatically chargeable plastic parts, such as e.g. plastic housing, metal housing with inspection window or plastic antenna, have a caution label pointing out the safety measures that must be taken with regard to electrostatic charges during operation.

WARNING - POTENTIAL ELECTROSTATIC
CHARGING HAZARD - SEE INSTRUCTIONS

Caution: Plastic parts! Danger of electrostatic charging!

- Avoid friction
- No dry cleaning
- Construction/Installation: The VEGAPULS PS66(*).CX/A/M/K****H**** must be constructed/ installed in such a way that
 - electrostatic charges are ruled out during operation, maintenance and cleaning.
 - process-related electrostatic charges, e.g. by measuring media flowing past, are ruled out

7 Use of an overvoltage arrester

If necessary, a suitable overvoltage arrester can be connected in front of the VEGAPULS PS66(*).CX/A/M/K****H****.

When used as category 1G or 1/2G instrument, as far as necessary analogue, a suitable overvoltage arrester must be connected in front as protection against voltage surges according to EN 60079-14.

8 Versions with antenna extension

The VEGAPULS PS66(*).CX/A/M/K****H**** with antenna extension have to be mounted so that the extension is effectively secured against bending or oscillating as well as contact of the sensor to the vessel wall, under consideration of the vessel installations and flow conditions in the vessel.

9 Grounding

In order to avoid the danger of electrostatic charging of the metallic parts, the VEGAPULS PS66(*).CX/A/M/K****H**** must be electrostatically connected to the local potential equalisation (transfer resistance $\leq 1 \text{ M}\Omega$), e.g. via the ground terminal, when used as category 1G or 1/2G instruments.

10 Impact and friction sparks

When used as category 1G instruments, the VEGAPULS PS66(*).CX/A/M/K****H**** in aluminium/ titanium versions must be mounted in such a way that sparks from impact and friction between aluminium/titanium and steel (except stainless steel, if the presence of rust particles can be excluded) cannot occur.

11 Non-grounded, metallic parts

The resistance between aluminium housing to metal measuring point identification plate is $> 10^9$ Ohm.

The capacitance of the metal measuring point identification plate was measured as follows:

| Measurement loop identification label | Capacitance |
|---------------------------------------|-------------|
| 45 x 23 mm (standard) | 21 pF |
| 100 x 30 mm | 52 pF |
| 73 x 47 mm | 61 pF |

12 Material resistance

For applications requiring instruments of category 1G or category 1/2G the VEGAPULS PS66(*).CX/A/M/K****H**** must only be used in products against which the wetted materials are sufficiently resistant.

13 Versions with rinsing connection

For VEGAPULS PS66(*).CX/A/M/K****H**** as category 1/2G instrument in the version with rinsing connection make sure the protection rating IP67 is ensured on the connection to the reflux valve.

After removal of the reflux valve or the rinsing air connection on the reflux valve, the opening has to be closed with an appropriate closing screw, so that protection class IP67 is maintained. Please make sure that during rinsing processes in the antennas, i.e. when the sensor is cleaned, no hazardous atmosphere is present.

14 Mounting with external display unit VEGADIS 61/81


The intrinsically safe signal circuit between VEGAPULS PS66(*).CX/A/M/K****H**** and the external indicating unit VEGADIS 61/81 should be set up without grounding. The required insulation voltage is > 500 V AC. When using the VEGA connection cable included with the delivery, this requirement is fulfilled. If grounding of the cable screen is required, it must be carried out according to EN 60079-14.

15 Removing and replacing the red threaded/dust cover

When the VEGAPULS PS66(*).CX/A/M/K****H**** are delivered, depending on the version, the red threaded or dust protection caps must be removed before installing the device and the openings must be sealed according to the requirements of the type of protection and the IP protection type specified on the type label.

When using certified i.e. suitable cable glands, sealing plugs or plug connectors, they must be mounted correctly and the respective certificates/documents must be observed.

The sealing plugs included in the delivery by VEGA meet the necessary requirements.

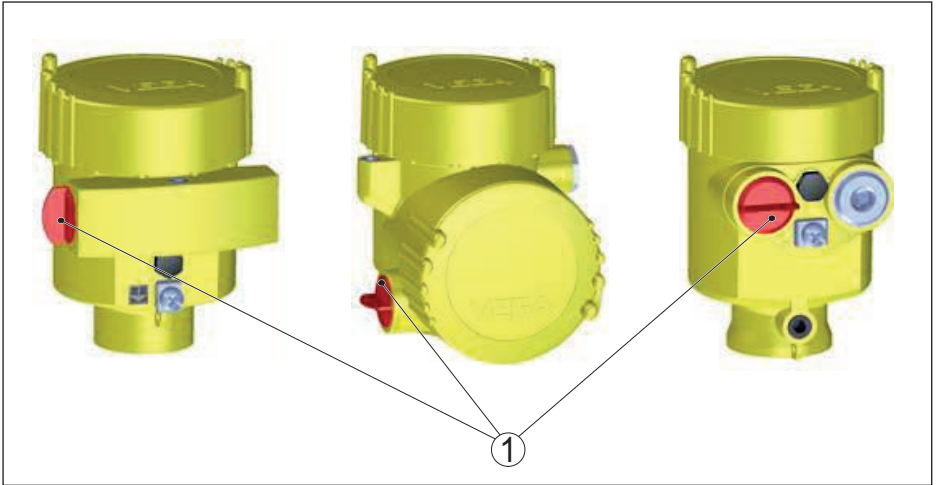

1 Red threaded or dust protection cap

Printing date:

VEGA

All statements concerning scope of delivery, application, practical use and operating conditions of the sensors and processing systems correspond to the information available at the time of printing.

Subject to change without prior notice

© VEGA Grieshaber KG, Schiltach/Germany 2020



34238-EN-200821

VEGA Grieshaber KG
Am Hohenstein 113
77761 Schiltach
Germany

Phone +49 7836 50-0
Fax +49 7836 50-201
E-mail: info.de@vega.com
www.vega.com