


Operating instructions

Chemical seal CSB

for VEGADIF 85

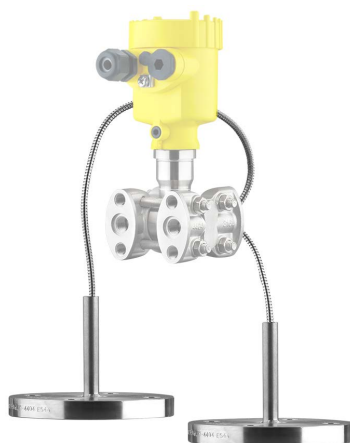

Document ID: 54850



VEGA

Contents

1	About this document	3
1.1	Function	3
1.2	Target group	3
1.3	Symbols used.....	3
2	For your safety	4
2.1	Authorised personnel	4
2.2	Appropriate use.....	4
2.3	Warning about incorrect use.....	4
2.4	General safety instructions	4
2.5	Installation and operation in the USA and Canada	4
3	Product description	5
3.1	Configuration.....	5
3.2	Principle of operation.....	5
3.3	Packaging, transport and storage.....	5
4	Planning instructions for isolating systems	7
4.1	Influence of the components	7
4.2	Influence of temperature changes	8
4.3	Dynamic behaviour of the chemical seals	12
4.4	Installation position.....	14
4.5	Selection of the measuring range.....	16
4.6	Calculation of the temperature error	17
5	Mounting.....	19
5.1	Application conditions	19
5.2	Oxygen applications.....	19
5.3	Instructions for handling	19
5.4	Mounting instructions	20
6	Maintenance and fault rectification.....	21
6.1	Maintenance	21
7	Supplement	22
7.1	Technical data	22
7.2	Chemical seal with vacuum applications	23
7.3	Dimensions and weight	26
7.4	Industrial property rights.....	35
7.5	Trademark.....	35

1 About this document

1.1 Function

This instruction provides all the information you need for mounting, connection and setup as well as important instructions for maintenance, fault rectification, safety and the exchange of parts. Please read this information before putting the instrument into operation and keep this manual accessible in the immediate vicinity of the device.

1.2 Target group

This instruction manual is directed to trained personnel. The contents of this manual must be made available to the qualified personnel and implemented.

1.3 Symbols used



Document ID

This symbol on the front page of this instruction refers to the Document ID. By entering the Document ID on www.vega.com you will reach the document download.



Information, note, tip: This symbol indicates helpful additional information and tips for successful work.



Note: This symbol indicates notes to prevent failures, malfunctions, damage to devices or plants.



Caution: Non-observance of the information marked with this symbol may result in personal injury.



Warning: Non-observance of the information marked with this symbol may result in serious or fatal personal injury.



Danger: Non-observance of the information marked with this symbol results in serious or fatal personal injury.



Ex applications

This symbol indicates special instructions for Ex applications.



List

The dot set in front indicates a list with no implied sequence.



Sequence of actions

Numbers set in front indicate successive steps in a procedure.



Disposal

This symbol indicates special instructions for disposal.

2 For your safety

2.1 Authorised personnel

All operations described in this documentation must be carried out only by trained and authorized personnel.

During work on and with the device, the required personal protective equipment must always be worn.

2.2 Appropriate use

The chemical seal is a functional part of the differential pressure transmitter VEGADIF 85.

You can find detailed information about the area of application in chapter "*Product description*".

Operational reliability is ensured only if the instrument is properly used according to the specifications in the operating instructions manual as well as possible supplementary instructions.

2.3 Warning about incorrect use

Inappropriate or incorrect use of the instrument can give rise to application-specific hazards, e.g. vessel overfill or damage to system components through incorrect mounting or adjustment.

2.4 General safety instructions

The safety information in the operating instructions manual of the respective device must be noted.

2.5 Installation and operation in the USA and Canada

This information is only valid for USA and Canada. Hence the following text is only available in the English language.

Installations in the US shall comply with the relevant requirements of the National Electrical Code (NEC - NFPA 70) (USA).

Installations in Canada shall comply with the relevant requirements of the Canadian Electrical Code (CEC Part I) (Canada).

3 Product description

3.1 Configuration

Scope of delivery

The scope of delivery encompasses:

- Chemical seal mounted on VEGADIF 85
- Documentation
 - This operating instructions manual

Constituent parts

The CSB chemical seal consists of the following components: separating diaphragm, process fitting as well as temperature decoupler. The components are fully welded with the associated differential pressure transmitter and represent a hermetically sealed system.

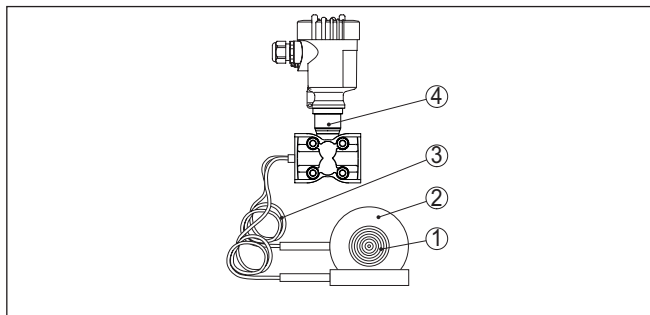


Fig. 1: VEGADIF 85 with chemical seal CSB

- 1 Separating diaphragm
- 2 Process fitting
- 3 Temperature decoupler
- 4 VEGADIF 85

3.2 Principle of operation

Application area

Chemical seals are used if a separation of medium and pressure transmitter is necessary, particularly with:

- High product temperatures
- Corrosive products
- Strong vibration at the measuring point

Functional principle

The process pressure acts on the separating diaphragm. This diaphragm transmits the process pressure through the capillary line with a pressure transmission liquids to the sensor element of the differential pressure transmitter.

3.3 Packaging, transport and storage

Packaging

Your instrument was protected by packaging during transport. Its capacity to handle normal loads during transport is assured by a test based on ISO 4180.

The packaging of standard instruments consists of environment-friendly, recyclable cardboard. For special versions, PE foam or PE

foil is also used. Dispose of the packaging material via specialised recycling companies.

**Caution:**

Instruments for oxygen applications are sealed in PE foil and provided with a label "Oxygen! Use no Oil". Remove this foil just before mounting the instrument! See instruction under "*Mounting*".

Transport

Transport must be carried out in due consideration of the notes on the transport packaging. Nonobservance of these instructions can cause damage to the device.

Transport inspection

The delivery must be checked for completeness and possible transit damage immediately at receipt. Ascertained transit damage or concealed defects must be appropriately dealt with.

Storage

Up to the time of installation, the packages must be left closed and stored according to the orientation and storage markings on the outside.

Unless otherwise indicated, the packages must be stored only under the following conditions:

- Not in the open
- Dry and dust free
- Not exposed to corrosive media
- Protected against solar radiation
- Avoiding mechanical shock and vibration

Storage and transport temperature

- Storage and transport temperature see chapter "*Supplement - Technical data - Ambient conditions*"
- Relative moisture 20 ... 85 %

Lifting and carrying

With instrument weights of more than 18 kg (39.68 lbs) suitable and approved equipment must be used for lifting and carrying.

4 Planning instructions for isolating systems

4.1 Influence of the components

Separating diaphragm

The following properties of the separating diaphragm determine the application area of the chemical seal:

- Diameter
- Resilience
- Material

The bigger the diaphragm diameter, the higher the resilience and the smaller the temperature influence on the measuring result. Note: To keep this influence within reasonable limits, you should use a chemical seal with a nominal width \geq DN 80.

The resilience also depends on the diaphragm thickness, the material as well as a possible coating.

Capillaries

The capillary line influences the temperature coefficient $TK_{\text{Zero point}}$, the permissible ambient temperature and the step response time of an isolating system through its length and inner diameter. See also chapter "Influence of the temperature on the zero point", "Ambient temperature range" and "Step response time".

Chemical seal filling oil

In the selection of filling oil, product and ambient temperature as well as process pressure are of utmost importance. Also take note of temperatures and pressures during setup and cleaning.

Another criterium is the compatibility of the filling oil with the requirements of the medium. In the food processing industry, for example, only filling oils that present no health risks are permitted, e.g. medicinal white oil. See overview of filling oils in the following chart.

The table also shows the permissible medium temperature depending on the isolating liquid and instrument version for $p_{\text{abs}} > 1 \text{ bar}/14.5 \text{ psi}$. For the medium temperature with instrument version for $p_{\text{abs}} < 1 \text{ bar}/14.5 \text{ psi}$, see chapter "Chemical seal for vacuum applications".

Filling oil	Permissible product temperatures	Permissible medium temperature with $p_{\text{abs}} < 1 \text{ bar}/14.5 \text{ psi}$	Density in g/cm^3 at 25°C	Kinematic viscosity in cSt at 25°C	Corrective factor for TK	Application area
Silicone oil VE 2.2, KN 2.2	-40 ... +150 $^\circ\text{C}$ (-40 ... +302 $^\circ\text{F}$)		0.96	54.5	1	Standard
Silicone oil KN 17	-90 ... +180 $^\circ\text{C}$ (-130 ... +356 $^\circ\text{F}$)	-90 ... +80 $^\circ\text{C}$ (-130 ... +176 $^\circ\text{F}$)	0.92	4.4	-	Low temperatures

Filling oil	Permissible product temperatures	Permissible medium temperature with p _{abs} < 1 bar/14.5 psi	Density in g/cm³ at 25 °C	Kinematic viscosity in cSt at 25 °C	Cor- rective factor for TK	Applica- tion area
Silicone oil VE 2.2, KN 2.2 and cooling element	-40 ... +200 °C (-40 ... +392 °F)	-40 ... +150 °C (-40 ... +302 °F)	0.96	54.5	1	High temperatures
High temperature oil VE 32, KN 32	-10 ... +300 °C (-14 ... +572 °F)	-10 ... +200 °C (-14 ... +392 °F)	1.06	47.1	0.77	
High temperature oil VE 32, KN 32	-10 ... +400 °C (+14 ... +752 °F)					
Halocarbon oil KN 21	-40 ... +150 °C (-40 ... +302 °F)	-90 ... +80 °C (-130 ... +176 °F)	1.89	10.6	0.83	Chlorine applications
Halocarbon oil KN 21 (BAM tested) ¹⁾	-40 ... +60 °C (-40 ... +140 °F)					Oxygen applications
Medical white oil KN 92, KN 92 (FDA approved)	-10 ... +150 °C (+14 ... +302 °F)		0.85	45.3	0.63	Food applications
Medical white oil KN 92, KN 92 (FDA approved) and cooling element	-10 ... +250 °C (+14 ... +482 °F)	-10 ... +160 °C (+14 ... +320 °F)				Food applications, high temperatures
Neobee M-20 KN 59 (FDA approved)	-10 ... +150 °C (+14 ... +302 °F)		0.92	10	-	Food applications

The implemented filling oil also influences the TK_{zero point}¹⁾, the permissible ambient temperature and the step response time of a chemical seal. See also chapter "Influence of the temperature on the zero point" and "Step response time".

Differential pressure transmitter

The differential pressure transmitter also influences the temperature application range, the TK_{zero point} and the step response time of the isolating system through the volume of its lateral flanges and its control volume.²⁾

4.2 Influence of temperature changes

The filling oil expands as the temperature increases. The additional volume presses on the chemical seal. The more rigid the diaphragm,

¹⁾ Cleaning procedure oil and grease-free for oxygen applications, max. oxygen pressure 50 bar (725.2 psi) acc. to BAM investigation (Federal Institute for Materials Research and Testing)

²⁾ The control volume is the volume that must be shifted in order to utilise the entire measuring range.

the more it counteracts a volume change. The additional volume also adds to the process pressure on the measuring cell and thus shifts the zero point. The respective temperature coefficient " TK_{Process} " is listed in chapter "*Dimensions and weights*".

Influence of the temperature on the zero point

The following diagram shows the temperature coefficient depending on the capillary length. The process temperature corresponds to the calibration temperature. The temperature coefficients determined from the diagram apply to silicone oil and the diaphragm material 316L. For other filling oil, these temperature coefficients have to be multiplied with the correction factor for the TK of the respective filling oil.

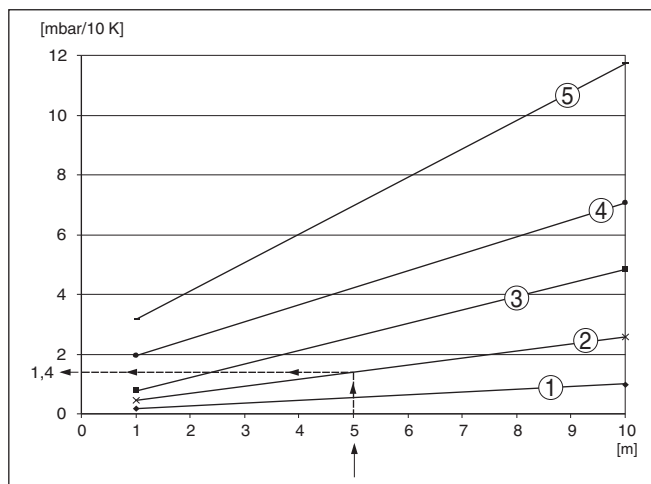


Fig. 2: Temperature coefficient " TK_{Ambient} " depending on the capillary length. Characteristics 1 ... 5 related to the process fittings listed below.

- **Characteristics 1**
 - Clamp 3" (ø 91 mm) according to DIN 32676, ISO 2852/316L
- **Characteristics 2**
 - EN/DIN flange DN 80 PN 10-40 B1, 316L
 - EN/DIN flange DN 100 PN 10-16 B1, 316L
 - EN/DIN flange DN 100 PN 25-40 B1, AISI 316L
 - ASME flange 3" 150 lbs RF, 316/316L
 - ASME flange 3" 300 lbs RF, 316/316L
 - DIN 11851 DN 80 PN 25, 316L
 - DIN 11851 DN 80 PN 25 nozzle, AISI 316L
 - Cell DN 80 PN 16-400, 316L
 - Cell DN 100 PN 16-400, 316L
 - Cells 3" 150-2500 lbs, 316L
- **Characteristics 3**
 - ASME flange 3" 150 lbs RF, 316/316L, extension: 2"/4"/6"/8"
- **Characteristics 4**
 - EN/DIN flange DN 50 PN 10-40 B1, 316L
 - ASME flange 2" 150 lbs RF, 316/316L
 - ASME flange 3" 300 lbs RF, 316/316L

- DIN 11851 DN 50 PN 25, 316L
- DIN 11851 DN 50 PN 25 nozzle, AISI 316L
- Cell DN 50 PN 16-400, 316L
- Cell 2" 150-2500 lbs, 316L

- **Characteristics 5**

- DRD DN 50 (65 mm), PN 25, 316L

Method of calculation

- Chemical seal: EN/DIN flange DN 80 PN 10-40 B1, AISI 316L
- Capillary length: 5 m
- Ambient temperature capillaries/transmitter: 45 °C
- Filling oil: Silicone oil

To calculate the indication, proceed as follows:

1. Choose characteristics for the chemical seal from the list.

Result: characteristics 2

2. Determine value for TK_{Ambient} from the diagram.

Result: 1.4 mbar/10 K

3. $T_{\text{Ambient}} - T_{\text{Calibration}} = 45\text{ °C} - 25\text{ °C} = 20\text{ °C}; (1.4\text{ mbar}/10\text{ K}) \cdot 20\text{ K} = 2.8\text{ mbar}$

Result:

In this application case, the zero point is shifted by 2.8 mbar.

The influence of the temperature on the zero point can be corrected by a position adjustment.

Reduction of the temperature influence

The following are options for reducing the temperature influence:

- Smaller capillary inner diameter (Note: The step response time increases with decreasing diameter, however)
- Shorter capillaries
- Chemical seal with larger diaphragm diameter
- Filling oil with a smaller expansion coefficient

Ambient temperature range

The following parameters determine the ambient temperature range of the chemical seal system:

- Filling oil
- Capillary length
- Capillary inner diameter
- Oil volume of the chemical seal
- Process temperature

The following diagrams show the permissible ambient temperature range depending on the capillary length. They apply to a process temperature of 25 °C and silicone oil. The application range can be extended by using a filling oil with a smaller expansion coefficient and shorter capillaries.

**Note:**

The illustrations are in principle examples and serve as a guideline. The actual permissible temperatures must be determined individually for each application.

- **Group B**

- Cell 2" 150-2500 lbs, 316L
- ASME flange 2" 150 lbs RF, 316/316L
- ASME flange 2" 300 lbs RF, 316/316L
- Cell DN 50 PN 16-400, 316L

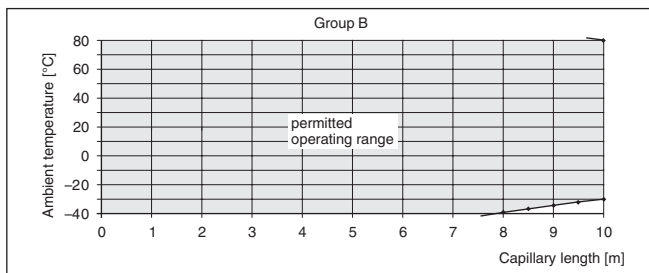


Fig. 3: Permissible ambient temperature range depending on the capillary length for chemical seals of group B

• Group C

- EN/DIN flange DN 80 PN 10-40 B1, 316L
- EN/DIN flange DN 100 PN 10-16 B1, 316L
- EN/DIN flange DN 100 PN 25-40 B1, AISI 316L
- DIN 11851 DN 80 PN 25, 316L
- Cell DN 80 PN 16-400, 316L
- Cell DN 100 PN 16-400, 316L
- Cell 3" 150-2500 lbs, 316L

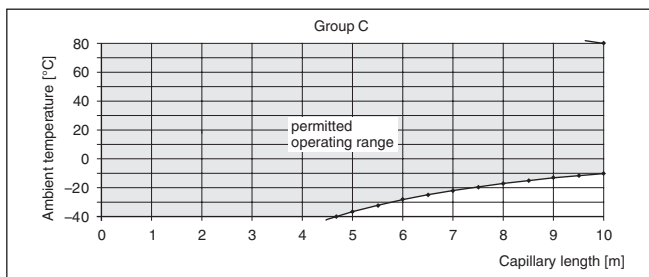


Fig. 4: Permissible ambient temperature range depending on the capillary length for chemical seals of group C

• Group D

- ASME flange 3" 150 lbs RF, 316/316L
- ASME flange 3" 300 lbs RF, 316/316L
- Cell 3" 150-2500 lbs, 316L

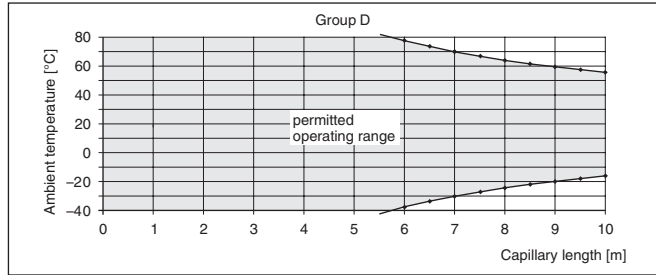


Fig. 5: Permissible ambient temperature range depending on the capillary length for chemical seals of group D

• **Group E**

– ASME flange 3" 150 lbs RF, 316/316L, extension: 2"/4"/6"/8"

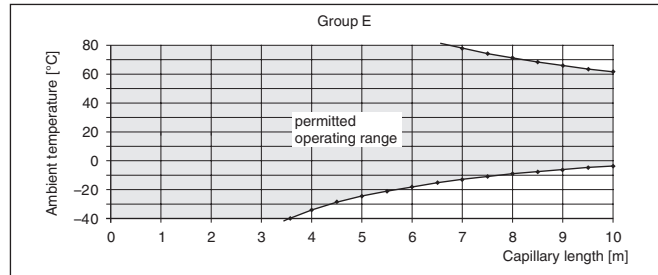


Fig. 6: Permissible ambient temperature range depending on the capillary length for chemical seals of group E

• **Group F**

– DRD DN 50 (65 mm), PN 25, 316L

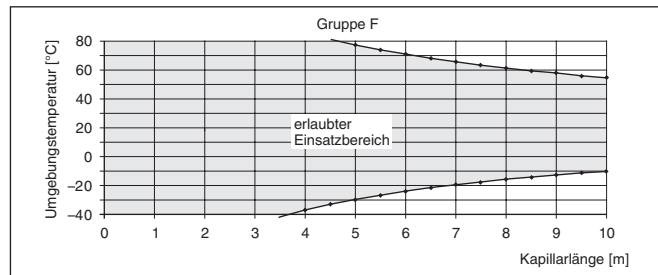


Fig. 7: Permissible ambient temperature range depending on the capillary length for chemical seals of group F

4.3 Dynamic behaviour of the chemical seals

Step response time

The viscosity of the filling oil, the capillary length as well as the inner diameter influence the frictional resistance. The higher the frictional resistance, the longer the step response time. The step response time is also influenced by the control volume of the measuring cell. The

smaller the control volume of the measuring cell, the shorter the step response time.

The following diagram shows the response times (T90) of the different filling oils depending on the measuring cell and capillary inner diameter. The values are specified in seconds per meter capillary length and must be multiplied by the actual length of the capillaries. The step response time of the transmitter must also be taken into account.



Note:

The illustration is exemplary and serves as orientation. The actual times must be determined individually for each application.

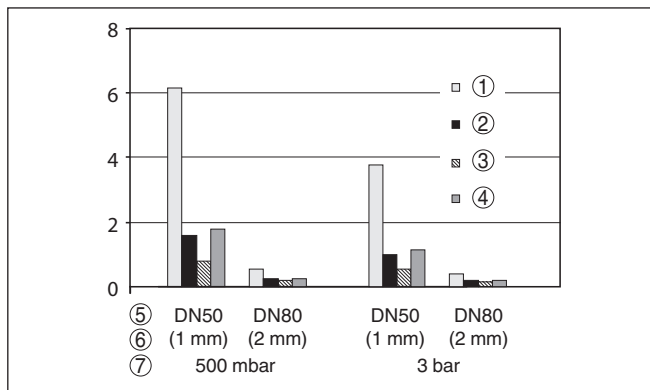


Fig. 8: Typical step response times (T90) in s/m for different filling oils depending on the measuring cell and capillary inner diameter. Ambient temperature = 20 °C

- 1 Silicone oil
- 2 High temperature oil
- 3 Medical white oil
- 4 Halocarbon oil
- 5 Nominal width
- 6 Capillary inner diameter
- 7 Measuring cell

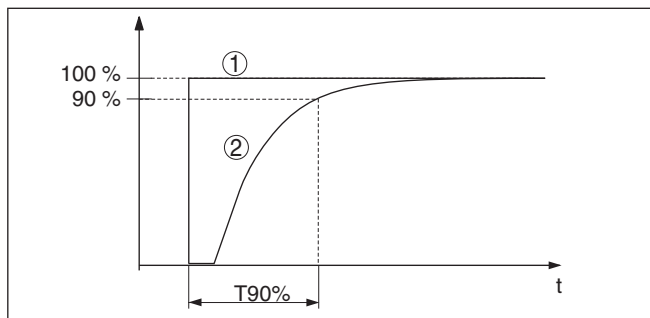


Fig. 9: Presentation of the step response time (T90)

- 1 Pressure jump
- 2 Output signal

Minimization of the step response time

For minimisation of the step response time, you have to following options:

- Bigger capillary inner diameter
- Shorter capillaries
- Filling oil with lowest viscosity

4.4 Installation position**Standard applications**

When the pressure transmitter is mounted above the lower chemical seal, the max. height difference H_1 according to the following illustration may not be exceeded. The value depends on the density of the filling oil and the smallest pressure that may act on the chemical seal of the plus side (empty vessel).

Typical values for H_1 are 7 m with silicone oil and 4 m with halocarbon oil.

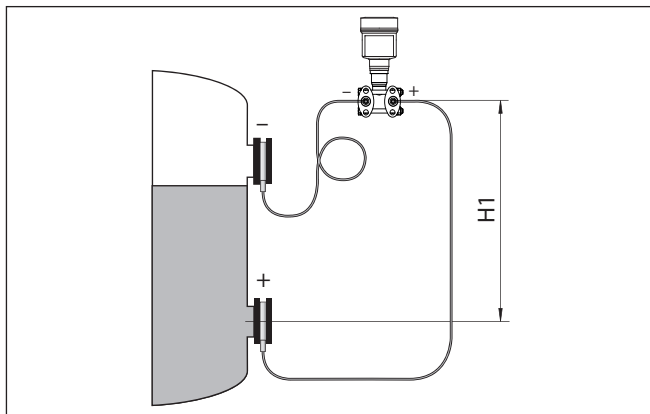


Fig. 10: Max. height when mounting above the lower chemical seal

Vacuum applications

In vacuum applications, the pressure transmitter should be mounted at the same height as or below the lower chemical seal. By doing this, an additional vacuum load from the filling oil in the capillaries is avoided.

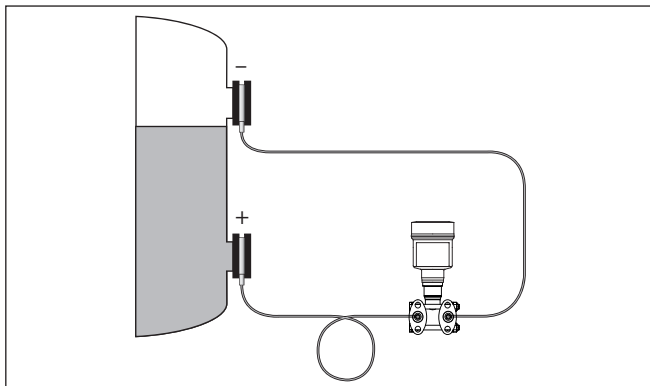


Fig. 11: Preferred mounting below the lower chemical seal

Density measurement

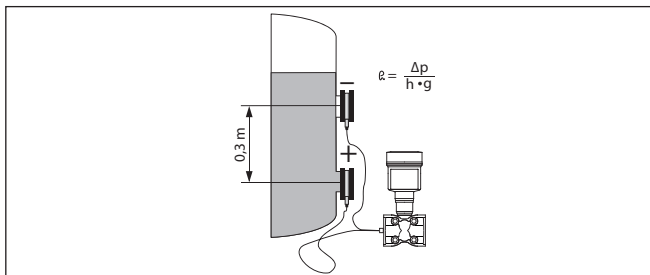


Fig. 12: Density measurement with VEGADIF 85, h = defined mounting distance, Δp = differential pressure, ρ = density of the medium, g = acceleration of gravity

1 VEGADIF 85

Interface measurement

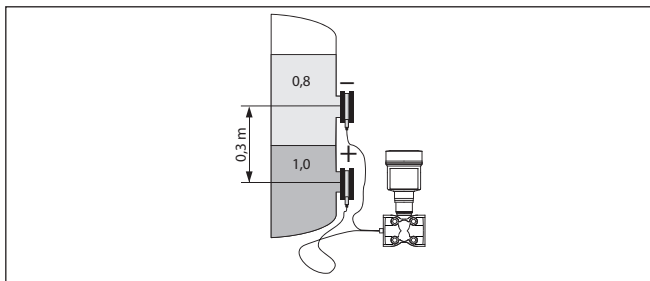


Fig. 13: Interface measurement with VEGADIF 85

- 1 VEGADIF 85
- 2 Liquid with higher density
- 3 Liquid with lower density

4.5 Selection of the measuring range

For instruments with chemical seals and capillaries, the zero point shift due to the hydrostatic pressure of the fluid column in the capillaries must be taken into account when selecting the measuring cell.

Example for selection of the measuring cell

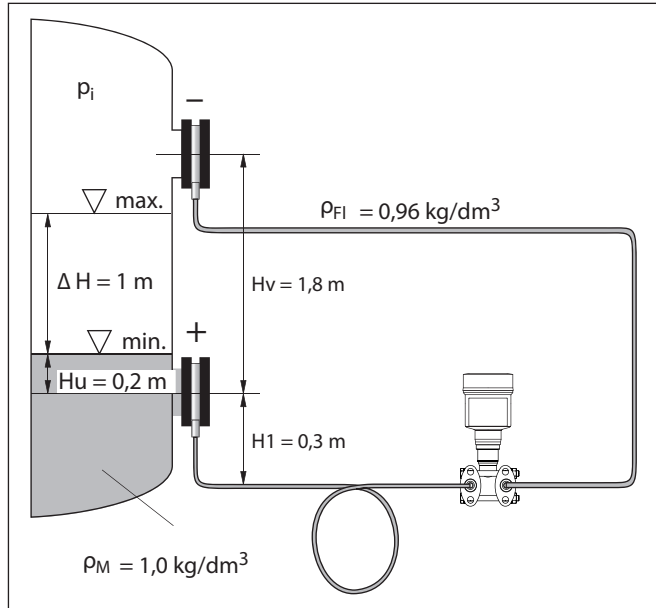


Fig. 14: Data for selection of the measuring cell

Pressure on the minus side of the differential pressure transmitter with min. level:

$$\begin{aligned}
 p_- &= p_{H_v} + p_{H_1} = H_v \cdot \rho_{FI} \cdot g + H_1 \cdot \rho_{FI} \cdot g + p_i \\
 &= 1.8 \text{ m} \cdot (0.96 \text{ kg/dm}^3 \cdot 9.81 \text{ m/s}^2) + 0.3 \text{ m} \cdot (0.96 \text{ kg/dm}^3 \cdot 9.81 \text{ m/s}^2) \\
 &\quad + p_i \\
 &= 197.77 \text{ mbar} + p_i
 \end{aligned}$$

Pressure on the plus side of the differential pressure transmitter with min. level:

$$\begin{aligned}
 p_+ &= p_{H_u} + p_{H_1} = H_u \cdot \rho_M \cdot g + H_1 \cdot \rho_{FI} \cdot g + p_i \\
 &= 0.2 \text{ m} \cdot (1 \text{ kg/dm}^3 \cdot 9.81 \text{ m/s}^2) + 0.3 \text{ m} \cdot (0.96 \text{ kg/dm}^3 \cdot 9.81 \text{ m/s}^2) + p_i \\
 &= 47.87 \text{ mbar} + p_i
 \end{aligned}$$

Differential pressure on the transmitter with min. level:

$$\begin{aligned}
 \Delta p_{\text{Transmitter}} &= p_+ - p_- \\
 &= 47.87 \text{ mbar} - 197.77 \text{ mbar} \\
 &= -149.90 \text{ mbar}
 \end{aligned}$$

Differential pressure on the transmitter with max. level:

$$\Delta p_{\text{Transmitter}} = p_+ - p_- + \Delta H \cdot (1.0 \text{ kg/dm}^3 \cdot 9.81 \text{ m/s}^2)$$

$$= -149.90 \text{ mbar} + 98.1 \text{ mbar}$$

$$= -51.80 \text{ mbar}$$

Hence a 500 mbar measuring cell is required for this application example.

Actuating variables

4.6 Calculation of the temperature error

With double-sided mounting of chemical seals, the total temperature influence is composed of the following:

- Influence of the process temperature on the chemical seal (TK_{Process})
- Corrective factor with special materials (with Tantalum, Alloy: 1.5; with PTFE coating: 1.8)
- Corrective factor for filling oil
- Influence of the ambient temperature $TK_{\text{Amb.}}$ on the pressure transmitter (thermal modification of zero signal and span)

The calibration temperature of the isolating system is 20 °C. For the calculation, the temperature must be deducted from the respective process or ambient temperature.

The TK_{Process} chemical seal is listed in the tables in chapter "*Dimensions and weights*" of this operating instructions. The correction factor for the filling oil is listed in chapter "*Influence of the components*".

The thermal change of zero signal and span is specified in chapter "*Technical data*" of the differential pressure transmitter.



Information:

In case of double-sided, identical chemical seal mounting, the temperature influences should compensate. It shows that there is nevertheless an error through the temperature influence. In practice we calculate with 20 % of the sum of the individual errors of the two chemical seals. This is also taken into account in the following example.

Finally, the calculated temperature errors of pressure transmitter and chemical seal must be added up geometrically.

Example of double-sided chemical seal:

- Process temperature: 100 °C
- Flange isolating diaphragm DN 80 PN 10-40
- TK Process flange isolating diaphragm: 1.34 mbar/10K (see chapter "*Supplement*" of this manual)
- Capillary length: 4 m
- Filling oil silicone: correction factor 1
- Diaphragm material.: Tantalum, correction factor 1.5
- Ambient temperature TU: 40 °C
- $TK_{\text{Capillaries}} = 0.3 \text{ mbar/10K}$ (see diagram in chapter "*Influence of temperature changes*" or delivery documents)

ΔT Process temperature-Reference temperature chemical seal

$$= 100 \text{ °C} - 20 \text{ °C} = 80 \text{ K}$$

ΔT Ambient temperature-Reference temperature capillaries

$$= 40 \text{ °C} - 20 \text{ °C} = 20 \text{ K}$$

Number of chemical seals = 2

Error calculation

$$\Delta p_{\text{chemical seal}} = (1.34 \text{ mbar/10K}) \cdot 80\text{K} \cdot 2 = 21.44 \text{ mbar}$$

$$\text{Corrective factor diaphragm material} = 21.44 \text{ mbar} \cdot 1.5 = 32.16 \text{ mbar}$$

$$\Delta p_{\text{Capillaries}} = (0.3 \text{ mbar/10K}) \cdot 20\text{K} \cdot 4 \text{ m} \cdot 2 = 4.8 \text{ mbar}$$

$$\Delta p_{\text{Total}} = 32.16 \text{ mbar} + 4.8 \text{ mbar} = 36.96 \text{ mbar}$$

The total temperature error of the double-sided chemical seal is 20 % of 36.96 mbar as listed above, i.e. 7.4 mbar.

5 Mounting

5.1 Application conditions

Suitability for the process conditions

Before mounting, setup and operation, take note that the pressure transmitter as well as the chemical seal were selected according to measuring range, version and material suitable for the process conditions. The load limits must be maintained in order to guarantee the specified accuracy.



Caution:

In dangerous substances such as e.g. oxygen, acetylene, combustible or toxic products as well as in refrigerating plants, compressors, etc., the pertinent instructions must be observed in addition to the general regulations.

Process and ambient temperature

Take note of the following issues in respect to the process and ambient temperature:

- Mount the differential pressure transmitter in such a way that the permissible process and ambient temperature limits are neither underrun nor exceeded.
- Take the influence of convection and heat radiation into account
- When selecting the chemical seals, make sure that the fittings and flanges are pressure and temperature resistant
- For this purpose select the suitable material and pressure stage
- Mount in such a way that plus and minus side have the same ambient temperatures to keep the temperature influences low

5.2 Oxygen applications

Oxygen applications

Oxygen and other gases can be explosive when brought into contact with oils, grease and plastics, so the following measures must also be taken:

- All components of the plant, such as e.g. measuring instruments must be cleaned oil and grease-free for oxygen applications according to the requirements of BAM (Federal Institute for Materials Research and Testing)
- Max. temperatures and pressures determined with oxygen applications must not be exceeded, see chapter "*Technical data*" and "*Chemical seals with vacuum applications*", also keep sealing material in mind



Danger:

Instruments for oxygen applications must be unpacked just before mounting. After removing the protective cover of the process fitting, the label "O2" will be visible on the process fitting. Penetration of oil, grease and dirt should be avoided. Danger of explosion!

5.3 Instructions for handling

- Instruments must be protected against soiling and strong fluctuations of the ambient temperature

- Leave the measuring system in the packaging until mounting to protect it against mechanical damages
- When removing the packaging and when mounting, take special care to avoid mechanical damage and deformation of the diaphragm
- Do not carry the pressure transmitter by holding the capillary line
- Do not bent the capillary lines. Kinks can cause leakage and lead to an increase in response time
- Never loosen sealed screws on the chemical seal or the pressure transmitter
- Do not damage the isolating diaphragm: scratches on the isolating diaphragm (e.g. from sharp subjects) are the main areas where corrosion can occur

5.4 Mounting instructions

Sealing

- Suitable seals must be selected for sealing
- With the flange mounting, use a seal with a sufficiently large inner diameter and place the seal centrically; contact with the diaphragm will cause measurement deviations
- When using Elastomer or PTFE seals, take note of the regulations of the seal manufacturer, particularly with respect to torque and settling cycles

Laying the capillaries

- Lay in vibration-free areas to avoid additional pressure fluctuations
- Do not lay close to heating or cooling lines
- Insulate in case of colder or warmer ambient temperatures
- Bending radius of the capillaries ≥ 30 mm

6 Maintenance and fault rectification

6.1 Maintenance

Maintenance

If the device is used properly, no special maintenance is required in normal operation.

In some applications, product buildup on the separating diaphragm can influence the measuring result. Depending on the application, take precautions to ensure that heavy buildup, and especially a hardening thereof, is avoided.



Caution:

Never clean the separating diaphragm mechanically, for example with tools! This can damage the diaphragm and lead to oil leakage.

Cleaning

If necessary, clean the separating diaphragm with a soft brush and suitable cleaning detergent. Make sure that the materials are resistant to the cleaning process. The wide variety of applications of chemical seals makes special cleaning instructions necessary for each application. Please ask the agency serving you.

7 Supplement

7.1 Technical data

Materials

Diaphragm	316L, 316L gold-rhodium coated, Alloy C276 (2.4819), Tantalum, Titanium, PFA, Alloy 400 (2.4819), Alloy 400 (2.4819) gold-rhodium coated, nickle
Flanges	316L, Alloy 400 (2.4819) wetted, Tantalum wetted
Capillaries	316Ti
Protective hose for capillaries	316L

Process conditions

Max. process pressure, max. process temperature	see operating instructions manual of the respective sensor
---	--

Process conditions with oxygen applications

Max. process temperature	Max. oxygen pressure
+60 °C	50 bar
>+60 °C up to 100 °C	30 bar
>+100 °C up to 175 °C	25 bar

Process conditions - mechanical (one-sided rigid mounting)

For the process conditions, please also note the specifications on the type label. The lowest value (amount) always applies.

Vibration resistance³⁾

Version	Housing	Vibration resistance
Pressure transmitter vertically or horizontally	Plastic housing	4M5 (1 g)
	Aluminium housing	
	Stainless steel housing	4M3 (0.5 g)

Schock resistance⁴⁾

Version	Housing	Shock resistance
Pressure transmitter vertically or horizontally	Plastic housing	6M4 (10 g/11 ms, 30 g/6 ms, 50 g/2.3 ms)
	Aluminium housing	
	Stainless steel housing	

³⁾ Test sequence acc. to IEC 60068-2-6 (5 ... 200 Hz), classification acc. to IEC 60721-3-4

⁴⁾ Tested acc. to IEC 60068-2-27, classification acc. to IEC 60721-3-6

7.2 Chemical seal with vacuum applications

A chemical seal is closed to the medium with a metallic diaphragm. The inner space between the diaphragm and the sensor element is completely filled with a pressure transmission fluid.

As the pressure decreases, the boiling temperature of the pressure transmission liquid drops. Thus, at pressure values $< 1 \text{ bar}_{\text{abs}}$, depending on the temperature, gas particles can be released which are dissolved in the pressure transmission fluid. This makes it compressible, which leads to faulty measured values.

For that reason, chemical seal systems can only be used to a limited extent in a vacuum, depending on the pressure transmission liquid, process temperature and pressure. To extend the area of application, we offer a so-called vacuum service as an option.

The following graphics show typical areas of application for different pressure transmission liquids. The characteristic curves are exemplary and can also deviate depending on the process fitting and diaphragm material.

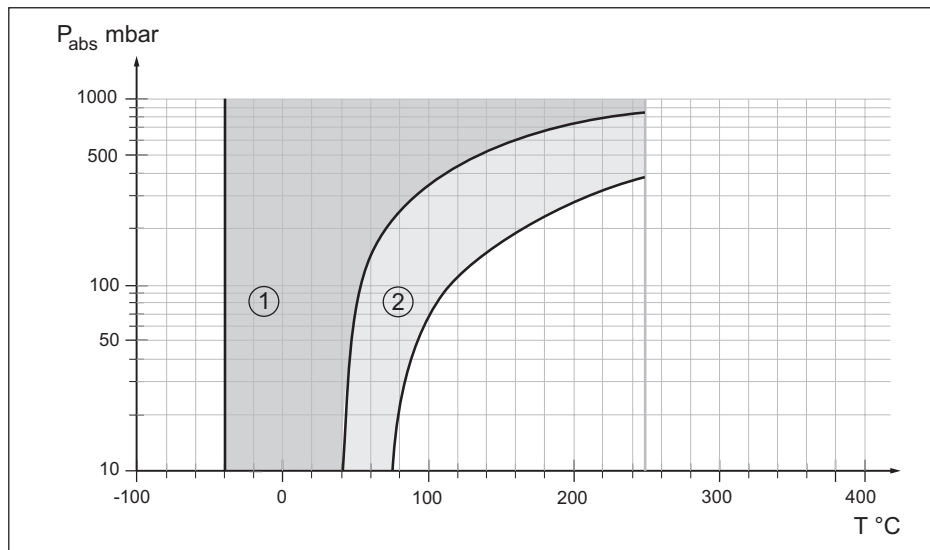


Fig. 15: Area of application for silicone oil VE 2.2, KN 2.2

- 1 Standard chemical seal
- 2 Chemical seal with vacuum service

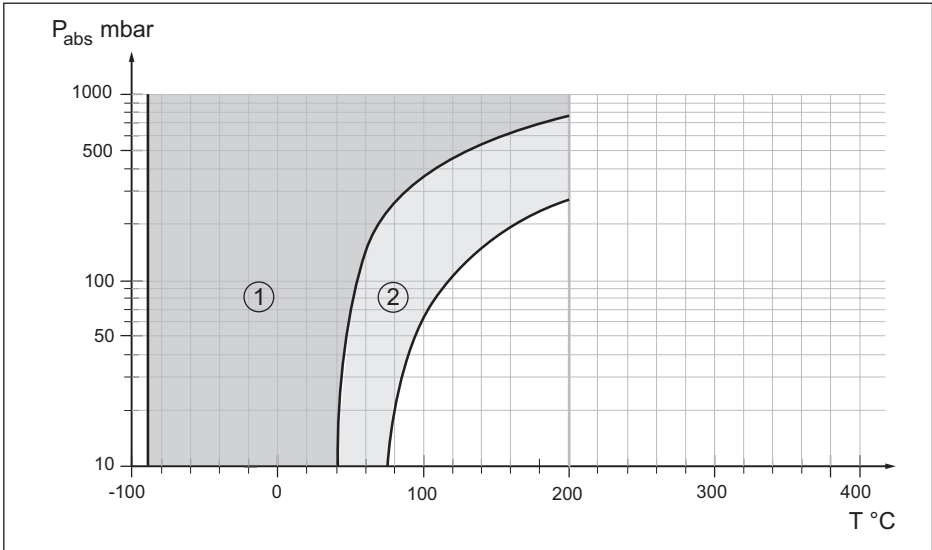


Fig. 16: Area of application for silicone oil KN 17

- 1 Standard chemical seal
- 2 Chemical seal with vacuum service

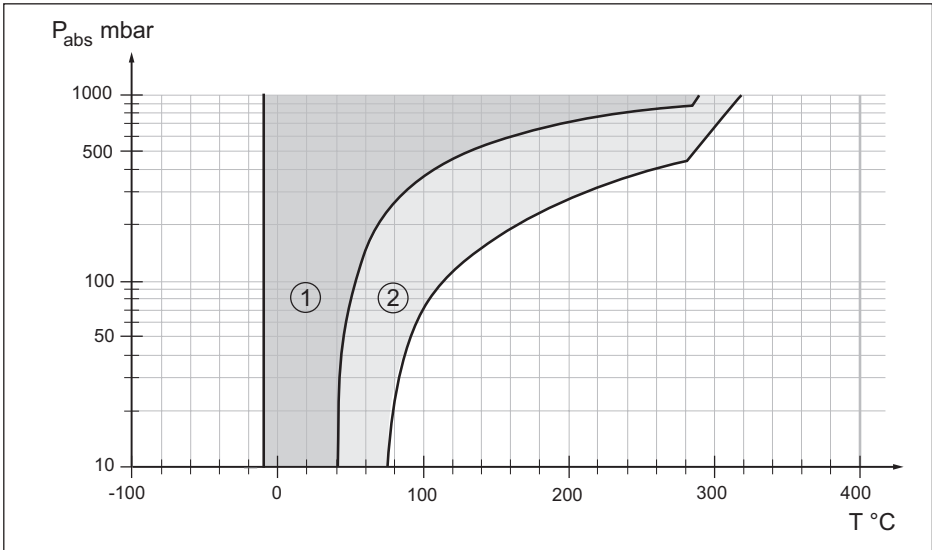


Fig. 17: Area of application for high temperature oil VE 32, KN 32

- 1 Standard chemical seal
- 2 Chemical seal with vacuum service

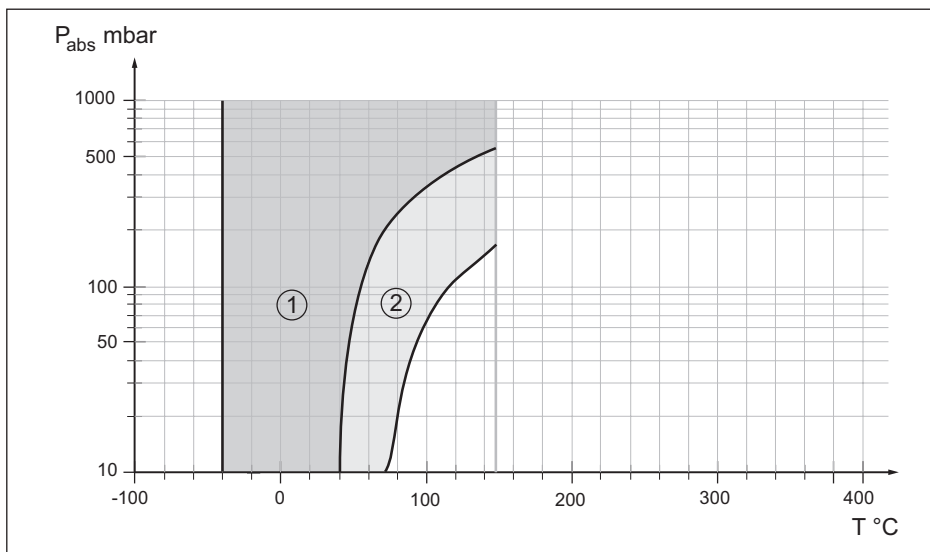


Fig. 18: Area of application for Halocarbon oil KN 21

- 1 Standard chemical seal
- 2 Chemical seal with vacuum service

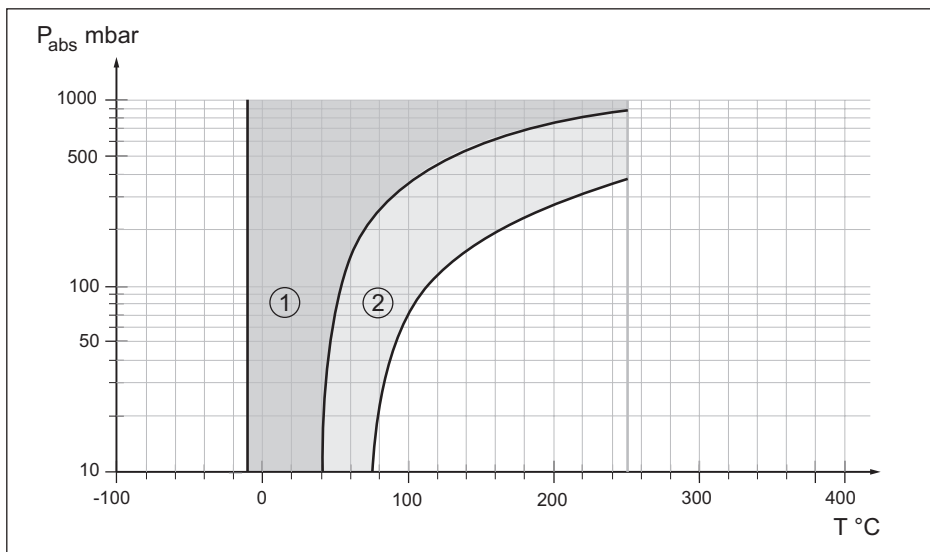


Fig. 19: Application area for medical white oil KN 92

- 1 Standard chemical seal
- 2 Chemical seal with vacuum service

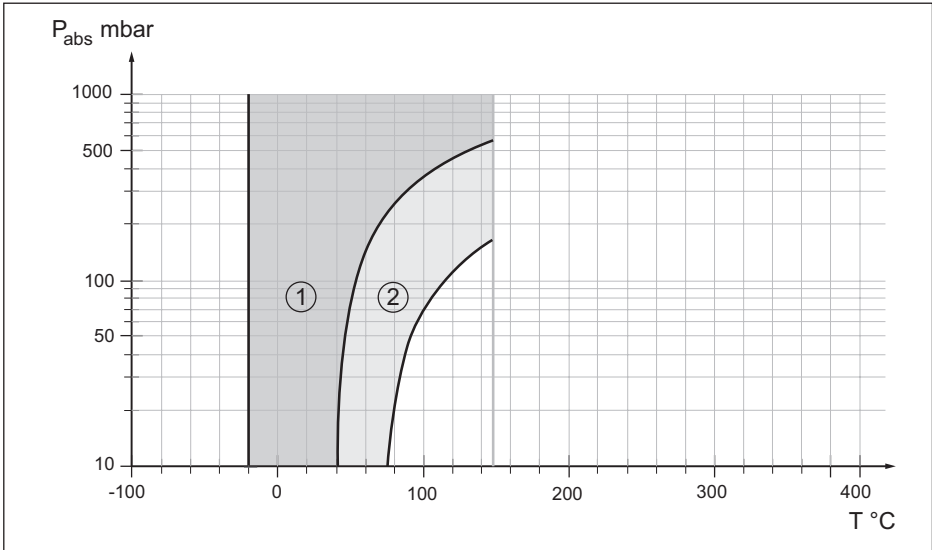


Fig. 20: Area of application for Neobee M-20 KN 59

- 1 Standard chemical seal
- 2 Chemical seal with vacuum service

7.3 Dimensions and weight

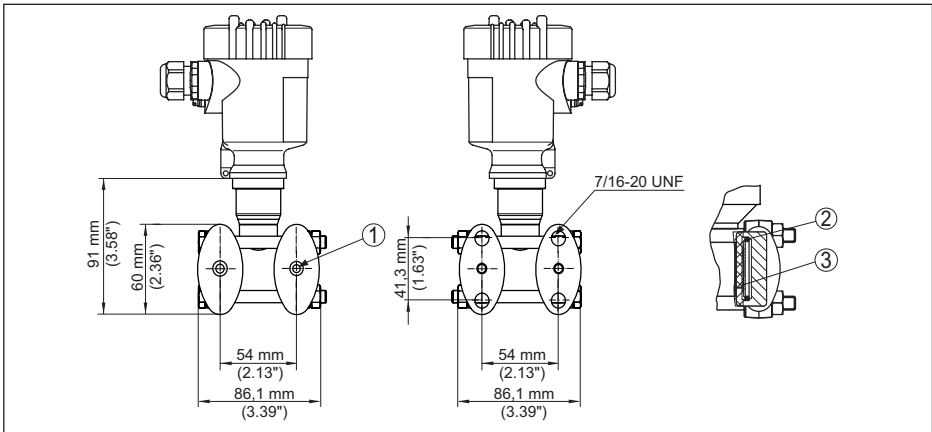


Fig. 21: Illustration left: Process fitting VEGADIF 85 prepared for chemical seal assembly. Illustration right: Position of the copper ring seal

- 1 For chemical seal connection
- 2 Copper ring seal
- 3 Diaphragm

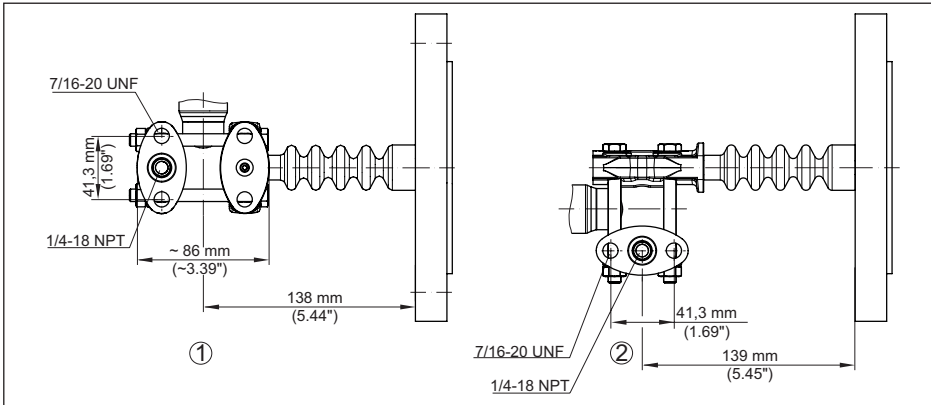


Fig. 22: Process fitting VEGADIF 85 prepared for chemical seal assembly. Rigid assembly of the chemical seal on the high pressure side

- 1 Pressure transmitter vertically (100 mm)
- 2 Pressure transmitter horizontally (100 mm)
- 3 For chemical seal connection low pressure side

In the following charts, the typical values for the temperature coefficient "TK Process" are listed apart from the dimensions. The values apply for silicone oil and the diaphragm material 316L. For other filling oils, these must be multiplied with the TK corrective factor of the respective filling oil.

The stated nominal pressure applies to the chemical seal. The max. pressure for the complete measuring system depends on the weakest element (with regard to pressure) of the selected components.

The weights of the chemical seals are listed in the charts. For the weight of the transmitter see also "Dimensions and weights" in operating instructions VEGADIF 85.

The following drawings are unifilar diagrams. The actual dimensions of the chemical seal can deviate from these dimensions.

Chemical seal with EN flange

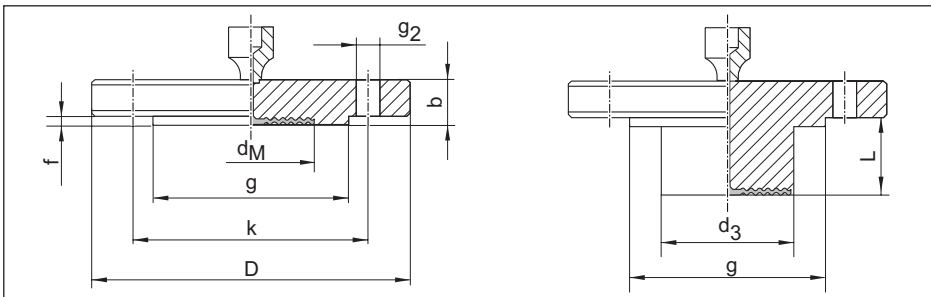


Fig. 23: Chemical seal with EN flange, dimensions according to EN 1092-1

Version	Nominal diameter	Nominal pressure	Form	Diameter D [mm]	Thickness b [mm]	Seal ledge g [mm]	Extension length L [mm]	Extension diameter d3 [mm]
AH	DN 50	PN 40	D	165	20	102	-	-

Version	Nominal diameter	Nominal pressure	Form	Diameter D [mm]	Thickness b [mm]	Seal ledge g [mm]	Extension length L [mm]	Extension diameter d3 [mm]
FD	DN 50	PN 40	D	165	20	102	50	48.5
DH	DN 50	PN 40	D	165	20	102	150	48.5
FH	DN 80	PN 40	D	200	24	138	-	-
FJ	DN 80	PN 40	D	200	24	138	50	76
FK	DN 80	PN 40	D	200	24	138	100	76
FL	DN 80	PN 40	D	200	24	138	150	76
PW	DN 100	PN 40	D	220	20	158	150	94

Version	Number of screw holes	Diameter, screw holes g2 [mm]	Hole circle, screw holes k [mm]	Max. dia-phragm diameter dM [mm]	TK process [mbar/10K]	Weight of two chemical seals [kg]
FC	4	18	125	59	+1.20	6.0
AH	4	18	125	47	+4.2	8.6
DH	4	18	125	47	+4.2	-
FH	8	18	160	89	+0.4	10.4
FJ	8	18	160	72	+1.34	-
FK	8	18	160	72	-	-
FL	8	18	160	72	-	-
PW	8	18	190	89	+0.4	13.4

Chemical seal with ASME flange

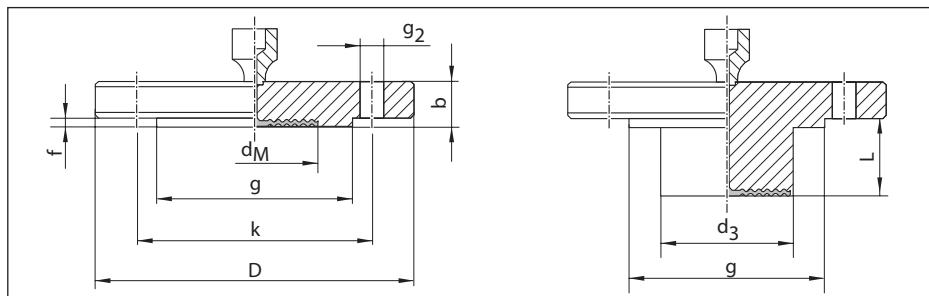


Fig. 24: Chemical seal with ASME flange, dimensions according to B16.5, seal ledge RF

Version	Nominal diameter ["]	Class [lb] [sq.in]	Diameter D [in][mm]	Thickness b [in][mm]	Seal ledge g [in][mm]	Extension length L [in][mm]	Extension diameter d3 [in][mm]
F5	2	150	6 (150)	0.75 (20)	3.62 (92)	-	-
F7	2	150	6 (150)	0.75 (20)	3.62 (92)	2 (50)	1.9 (48.3)
FS	3	150	7.5 (190)	0.94 (24)	5 (127)	-	-

Version	Nominal di- ameter ["]	Class [lb [sq.in]	Diameter D [in][mm]	Thickness b [in][mm]	Seal ledge g [in][mm]	Extension length L [in][mm]	Extension diameter d3 [in][mm]
EW	3	150	7.5 (190)	0.94 (24)	5 (127)	2 (50)	2.9 (73.7)

Version	Number of screw holes	Diameter, screw holes g2 [in][mm]	Hole circle, screw holes k [in][mm]	Max. dia- phragm diameter dM [in][mm]	TK process [mbar/10K]	Weight [kg]
F5	4	0.75 20	4.75 120.5	2.32 59	+1.20	2.7
F7	4	0.75 20	4.75 120.5	1.85 47	-	3.7
FS	4	0.75 20	6 152.5	3.50 89	+0.4	5.3
EW	4	0.75 20	6 152.5	2.83 72	+1.34	6.3

Tube isolating diaphragm with EN flange

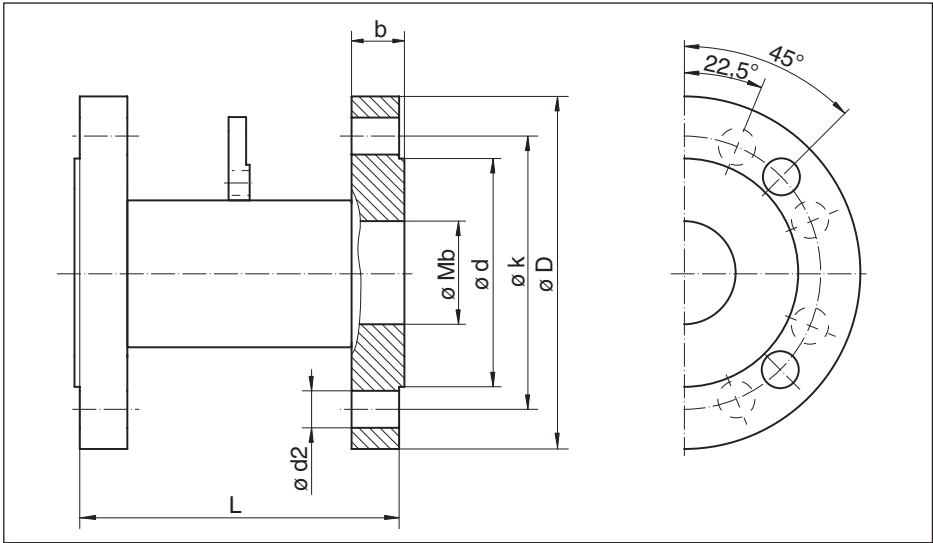


Fig. 25: Tube isolating diaphragm with EN flange, dimensions according to EN 1092-1

Version	Nominal di- ameter	Nominal pressure	Form	Diameter D [mm]	Thickness b [mm]	Seal ledge g [mm]	Length L [mm]
RB	DN 40	PN 40	D	150	18	88	146

Version	Number of screw holes	Diameter, screw holes d2 [mm]	Hole circle, screw holes k [mm]	Diaphragm diameter dM [mm]	TK process [mbar/10K]	Weight of two chemical seals [kg]
RB	4	18	110	43	-	-

The following drawings are unifilar drawings, i.e. the dimensions of the supplied isolating diaphragm can deviated from the dimensions specified.

Chemical seal with Clamp

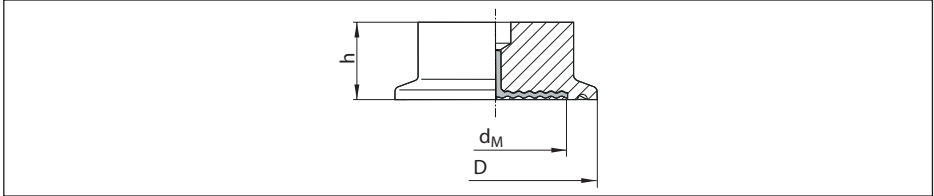


Fig. 26: Chemical seal with Clamp according to ISO 2852

Version	Nominal diameter	Nominal pressure	Diameter C7 [mm]	Diaphragm diameter dM [mm]	Height h [mm]	TK process [mbar/10K]	Weight of two chemical seals [kg]
CB	DN 40	PN 10	64	35	20	±0.44	0.5

Chemical seal with aseptic connection with compression nut

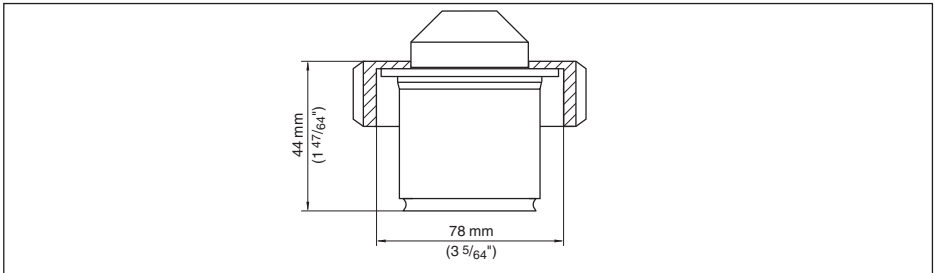


Fig. 27: Chemical seal with aseptic connection with compression nut

Version	Nominal pressure	TK process [mbar/10K]	Weight of two chemical seals [kg]
LA	PN 40	±0.44	0.5

Fig. 28: Chemical seal with connection Varivent type N for tubes

Version	Nominal diameter	Nominal pressure	Diameter D [mm]	Diaphragm diameter dM [mm]	TK process [mbar/10K]	Weight of two chemical seals [kg]
TA	DN 40 ... DN 162	PN 25	68	34	±0.56	1.6

Technical drawing of a shaft-hub assembly. The drawing shows a shaft with diameter d_M and a hub with outer diameter D . The hub has a total width G and a central bore with diameter d_M . The height of the hub is H . The drawing includes a cross-section view of the shaft and hub, showing the fit and the dimensions d_M , D , G , and H .

Fig. 29: Chemical seal with slotted nut according to DIN 11851 (version cone socket with compression nut)

Version	Nominal diameter	Nominal pressure	Diameter D [mm]	Diaphragm diameter dM [mm]	Groove nut thread G	Groove nut height m [mm]	Cone height f [mm]	TK process [mbar/10K]	Weight of two chemical seals [kg]
RW	DN 50	PN 25	68.5	52	Rd 78x1/6"	19	11	±1.23	2.2
RX	DN 80	PN 25	100	81	Rd 110x1/4"	26	12	±0.34	4.1

Chemical seal with DRD connection

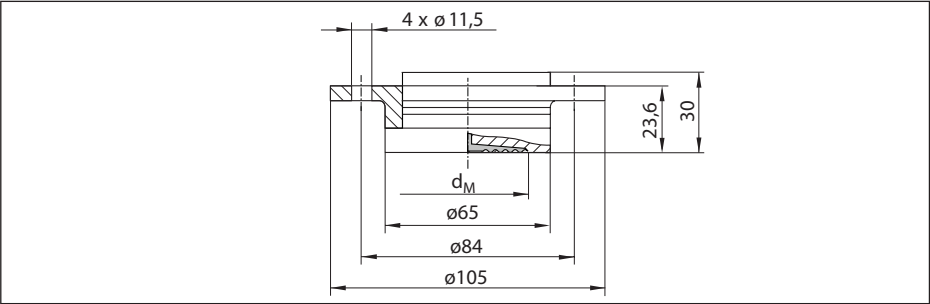


Fig. 30: Chemical seal with DRD connection

Version	Diaphragm diameter d _M [mm]	Nominal pressure	TK process [mbar/10K]	Weight of two chemical seals [kg]
DW	65	PN 25	±0.20	1.5

Chemical seal with SMS connection

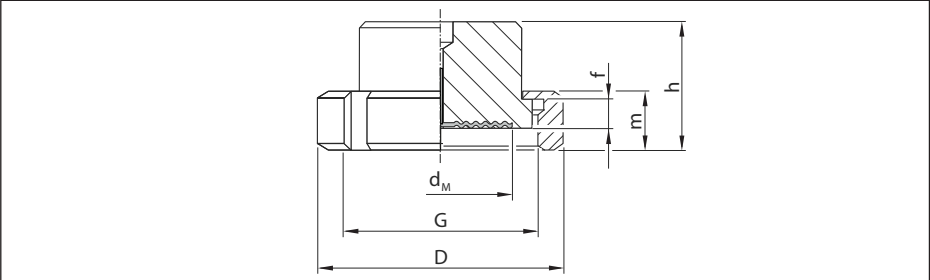


Fig. 31: Chemical seal with connection SMS 2" DN 51

Version	Nominal diameter	Nominal pressure	Groove nut diameter D [mm]	Thread diameter G [mm]	Diaphragm diameter d _M [mm]	Groove nut height m [mm]	Socket height f [mm]	TK process [mbar/10K]	Weight of two chemical seals [kg]
SB	2"	PN 6	74	Rd 60 - 1/6	36	25	57	±0.18	1.3
SC	3"	PN 6	84	Rd 70 - 1/6	48	26	62	±0.18	2.1

Cell isolating diaphragm

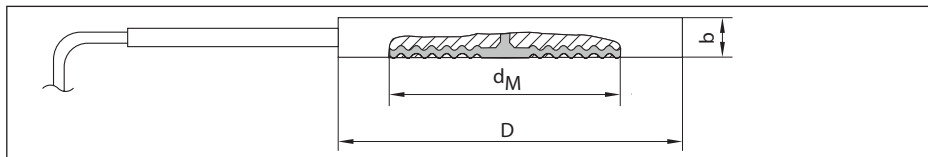


Fig. 32: Chemical seal in cell construction

Version	Nominal diameter	Nominal pressure	Diameter d [mm]	Diaphragm diameter dM [mm]	Height b [mm]	Extension length L [in] [mm]	Extension diameter d3 [in][mm]	TK process [mbar/10K]	Weight of two chemical seals [kg]
AA	DN 50	PN 16-400	102	59	20-22	-	-	±0.30	2.6
AQ	DN 80	PN 16-400	138	89	20-22	-	-	±0.06	4.6
ZH	DN 80	PN 16-400	138	89	20-22	350	76	-	5.6
AR	DN 100	PN 16-400	138	89	20-22	-	-	±0.06	4.6

Version	Nominal diameter [in]	Class [lb][sq. in]	Diameter d [in] [mm]	Diaphragm diameter dM [in] [mm]	Height b [in] [mm]	Extension length L [in][mm]	Extension diameter d3 [in][mm]	TK process [mbar/10K]	Weight of two chemical seals [kg]
CA	2	150-2500	3.91 102	2.32 59	0.792 20	-	-	±0.30	2.6
CK	3	150-2500	5.28 138	3.50 89	0.792 20	-	-	±0.06	4.6

Chemical seal with connection for headbox

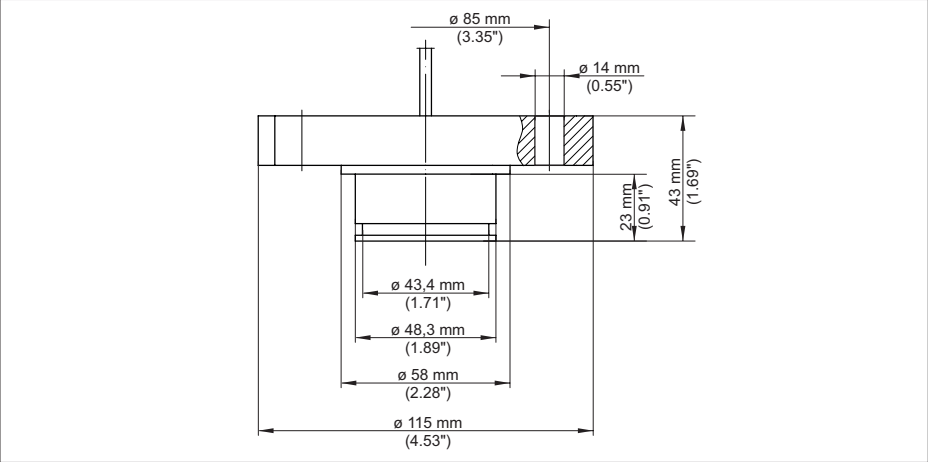


Fig. 33: Chemical seal with connection for headbox acc. to ZG 2976, flattened on both sides

Version	Flange size	Nominal pressure	Diameter d [mm]	Dia-phragm diameter dM [mm]	Height b [mm]	Extension length L [in] [mm]	Extension diameter d3 [in][mm]	TK process [mbar/10K]	Weight of two chemical seals [kg]
A1	DN 25	without PN specification	102	59	20	23	48	±0.30	2.6

7.4 Industrial property rights

VEGA product lines are global protected by industrial property rights. Further information see www.vega.com.

VEGA Produktfamilien sind weltweit geschützt durch gewerbliche Schutzrechte.

Nähere Informationen unter www.vega.com.

Les lignes de produits VEGA sont globalement protégées par des droits de propriété intellectuelle. Pour plus d'informations, on pourra se référer au site www.vega.com.

VEGA lineas de productos están protegidas por los derechos en el campo de la propiedad industrial. Para mayor información revise la pagina web www.vega.com.

Линии продукции фирмы ВЕГА защищаются по всему миру правами на интеллектуальную собственность. Дальнейшую информацию смотрите на сайте www.vega.com.

VEGA系列产品在全球享有知识产权保护。

进一步信息请参见网站www.vega.com。

7.5 Trademark

All the brands as well as trade and company names used are property of their lawful proprietor/originator.

Printing date:

VEGA

All statements concerning scope of delivery, application, practical use and operating conditions of the sensors and processing systems correspond to the information available at the time of printing.

Subject to change without prior notice

© VEGA Grieshaber KG, Schiltach/Germany 2024



54850-EN-240618

VEGA Grieshaber KG
Am Hohenstein 113
77761 Schiltach
Germany

Phone +49 7836 50-0
E-mail: info.de@vega.com
www.vega.com