



## Supplementary instruction

### Connection VEGALOG 571 acc. to GL approval

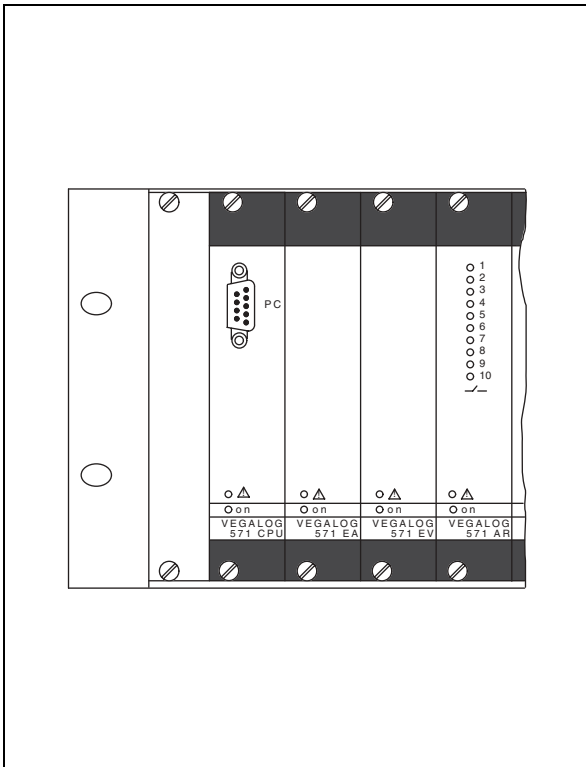


## 1 Mounting split ferrite

When using a VEGALOG 571 with GL approval, additional split ferrites must be used to keep the EMC regulations. This concerns the RS232 connection cable for the CPU and the Profibus PA cable of the EP card. The ferrites are attached to each VEGALOG with GL approval and must be mounted by the operator.

### RS232 connection CPU


- 1 Open the two rectangular split ferrites
- 2 Place the first ferrite close to a plug around the RS232 cable
- 3 Apply the second split ferrite subsequently to the first one
- 4 Plug the side with the two ferrites to the RS232 of the VEGALOG CPU and the other side to the PC

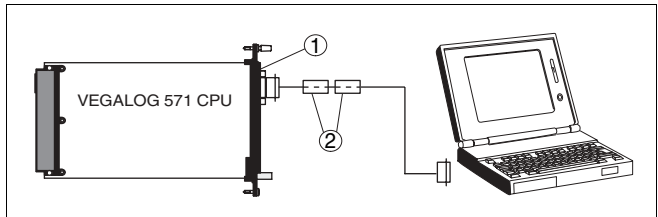

- 1 *RS232 interface CPU*
- 2 *Split ferrite*

**Profibus PA connection  
EP card**

- 1 Open the round split ferrite
- 2 Place the ferrite close to the EP card around the Profibus PA cable

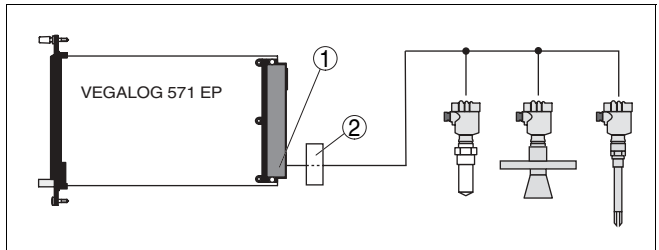

- 1 *Profibus PA output EP card*
- 2 *Split ferrite*



VEGA Grieshaber KG  
Am Hohenstein 113  
77761 Schiltach  
Germany  
Phone +49 7836 50-0  
Fax +49 7836 50-201  
E-mail: [info@de.vega.com](mailto:info@de.vega.com)  
**[www.vega.com](http://www.vega.com)**



All statements concerning scope of delivery, application, practical use and operating conditions of the sensors and processing systems correspond to the information available at the time of printing.