

Safety Manual

PROTRAC series 30

Four-wire 4 ... 20 mA/HART

With SIL qualification



Document ID: 66111



VEGA

Contents

1 Document language	3
2 Scope	4
2.1 Instrument version.....	4
2.2 Application area	4
2.3 SIL conformity	5
3 Planning	6
3.1 Safety function	6
3.2 Safe state	6
3.3 Prerequisites for operation	7
3.4 System limitations	7
3.5 Water/air cooling	7
4 Safety-related characteristics.....	8
4.1 Key figures according to IEC 61508 for all applications	8
4.2 Key figures according to IEC 61508 for the applications for point level detection	8
4.3 Key figures according to IEC 61508 for the applications for level measurement.....	10
4.4 Characteristics acc. to ISO 13849-1	12
4.5 Supplementary information	12
5 Setup	14
5.1 General information.....	14
5.2 Instrument parameter adjustment.....	14
6 Diagnostics and servicing	16
6.1 Behaviour in case of failures.....	16
6.2 Messages in case of malfunction	16
6.3 Repair	16
7 Proof test	17
7.1 General information.....	17
7.2 Test 1: For mode "Point level detection".....	17
7.3 Test 2: For mode "Level measurement"	18
8 Appendix A: Test report.....	19
9 Appendix B: Term definitions.....	20
10 Supplement C: SIL conformity.....	21

1 Document language

DE	Das vorliegende <i>Safety Manual</i> für Funktionale Sicherheit ist verfügbar in den Sprachen Deutsch, Englisch, Französisch und Russisch.
EN	The current <i>Safety Manual</i> for Functional Safety is available in German, English, French and Russian language.
FR	Le présent <i>Safety Manual</i> de sécurité fonctionnelle est disponible dans les langues suivantes: allemand, anglais, français et russe.
RU	Данное руководство по функциональной безопасности <i>Safety Manual</i> имеется на немецком, английском, французском и русском языках.

2 Scope

2.1 Instrument version

This safety manual applies to the following radiometric transmitter:

- **POINTRAC 31** Four-wire 8/16 mA/HART
- **MINITRAC 31, 32** Four-wire 4 ... 20 mA/HART
- **SOLITRAC 31** Four-wire 4 ... 20 mA/HART
- **FIBERTRAC 31, 32** Four-wire 4 ... 20 mA/HART

Valid versions:

- from hardware version 2.0.0
- from software version 3.1.0

SIL FIBERTRAC 31 and 32 must only be used with a detector length of max. 1.524 m!

The SOLITRAC 31 is only available in the version "*short*" stated in the certification and hence suitable with all detector lengths for safety-related applications.

SIL The source holder was not part of the instrument certification!

2.2 Application area

The transmitters can be used for point level detection or level measurement of liquids and bulk solids in a safety-instrumented system according to IEC 61508 in the modes *low demand mode* and *high demand mode*.

Due to the systematic capability SC2 this is possible up to:

- SIL2 in a single-channel architecture
- SIL3 in a multiple-channel architecture with diversitary redundancy

The following interfaces can be used:

Point level detection

- Relay output: NO contact¹⁾
- Current output: 8/16 mA
- Current output 4 ... 20 mA, if the limit value is stipulated in a connected processing system

Level measurement

- Current output: 4 ... 20 mA

SIL The following interfaces are only permitted for parameter adjustment and for informative use:

- HART
- Display and adjustment module PLICSCOM (also via Bluetooth)
- VEGACONNECT

¹⁾ NO = Normal Open

2.3 SIL conformity

The SIL conformity was independently assessed and certified by *exida* Certification LLC according to IEC 61508.²⁾

²⁾ Verification documents see "appendix"

3 Planning

Safety function point level detection

The transmitter detects a stipulated limit level and signals the detected condition to its relay output with contact open/closed or to its current output with 8 mA/16 mA.

Safety function level measurement

The transmitter generates on its current output a signal between 3.8 mA and 20.5 mA corresponding to the level. This analogue signal is fed to a connected processing system to monitor the following conditions:

- Exceeding a preset level
- Falling below a preset level
- Monitoring a level range (limitations, see chapter "*Characteristics for level measurement applications*")

Safety tolerance

For the design of the safety function, the following aspects must be taken into account with regard to the tolerances:

- Due to undetected failures in the range between 3.8 mA and 20.5 mA, an incorrect output signal can be generated which deviates from the real measured value by up to 2 %
- Due to the special application conditions, increased measurement deviations can be caused (see Technical data in the operating instructions)

3.2 Safe state

Safe state, point level detection

Safe state relay output

The safe condition of the output is independent of the mode, by definition the currentless state of the relay (quiescent current principle).

Therefore only the NO contact may be used for safety-relevant applications.

Safe state, current output

The safe state of the current output depends on the mode and the characteristics set in the sensor.

	Overfill protection	Dry run protection
Level	uncovered (high count rate)	covered (low count rate)
Relay output	NO contact open (currentless)	NO contact open (currentless)
Current output: 8/16 mA	8 mA \pm 2 %	16 mA \pm 2 %
Current output: 16/8 mA	16 mA \pm 2 %	8 mA \pm 2 %

Safe state, level measurement

Safe state, current output

The safe state of the current output depends on the mode and the characteristics set in the sensor.

Characteristics	Monitoring upper limit value	Monitoring lower limit value
4 ... 20 mA	Output current > Switching point	Output current < Switching point
20 ... 4 mA	Output current < Switching point	Output current > Switching point

Fault signals in case of malfunction

Relay output

- NO contact open

Current output

- ≤ 3.6 mA ("fail low")
- > 21 mA ("fail high")

Instructions and restrictions

3.3 Prerequisites for operation

- The measuring system should suit the application. The application-specific limits must be maintained
- The specifications according to the operating instructions manual, particularly the current load on the output circuits, must be kept within the specified limits
- To avoid a fusing of the relay contacts, these must be protected by an external fuse that triggers at 60 % of the max. contact current load.
- Existing communication interfaces (e. g. HART, USB) are not used for transmission of the safety-relevant measured value
- The instructions in chapter "Safety-related characteristics", paragraph "Supplementary information" must be noted
- All parts of the measuring chain must correspond to the planned "Safety Integrity Level (SIL)"

SIL In mode "Dry run protection" the switching position ON must be fixed on the source holder!

3.4 System limitations

SIL There are several factors relating to the measuring principle that influence the measurement result. These factors must be taken into account in order to meet the requirements on the instrument with respect to stability and nonrepeatability. Further information on this can be found in the operating instructions manual in chapter "Product description".

3.5 Water/air cooling

SIL If a water/air cooling is necessary to keep the specified operating temperature, then the cooling facility is part of the safety function and must be monitored accordingly, for example by a SIL qualified temperature sensor.

The instructions in the operating instructions manual referring to mounting and flow characteristics values must be observed.

4 Safety-related characteristics

4.1 Key figures according to IEC 61508 for all applications

Parameter according to IEC 61508	Value
Safety Integrity Level	SIL2 in single-channel architecture SIL3 in multiple channel architecture ³⁾
Hardware fault tolerance	HFT = 0
Instrument type	Type B
Mode of operation	Low demand mode, High demand mode
SFF	> 90 %
MTTR	8 h
MTBF ⁴⁾	0.39×10^6 h (45 years)
Diagnostic test interval ⁵⁾	< 10 min
Fault reaction time ⁶⁾	10 s

4.2 Key figures according to IEC 61508 for the applications for point level detection

Relay output

Relay for control of an actuator for monitoring a limit value (e.g. overflow or dry run protection)

Possible instrument versions:

- POINTRAC 31
- MINITRAC 31, 32
- SOLITRAC 31
- FIBERTRAC 31, 32

λ_S	λ_{DD}	λ_{DU}	λ_H	λ_L	λ_{AD}	λ_{AU}
476 FIT	1119 FIT	123 FIT	0 FIT	0 FIT	24 FIT	30 FIT

PFD _{AVG}	0.102×10^{-2}	(T1 = 1 year)
PFD _{AVG}	0.150×10^{-2}	(T1 = 2 years)
PFD _{AVG}	0.295×10^{-2}	(T1 = 5 years)
PFH	0.123×10^{-6} 1/h	

³⁾ Only diversitary redundancy possible, because instrument software SIL2.

⁴⁾ Refers only to failures concerning the safety function.

⁵⁾ Time during which all internal diagnoses are carried out at least once.

⁶⁾ Time between failure detection and output of the failure signal.

Proof Test Coverage (PTC)

Test type (see section "Proof test")	Remaining dangerous undetected failures	PTC
Test 1	12 FIT	90 %

Current output

Current output 8/16 mA or 4 ... 20 mA for control of a connected processing system (e.g. SSPS) for monitoring a limit value (e.g. overflow or dry run protection).

Possible instrument versions:

- POINTRAC 31
- MINITRAC 31, 32
- SOLITRAC 31
- FIBERTRAC 31, 32

Single or Primary Device

λ_S	λ_{DD}	λ_{DU}	λ_H	λ_L	λ_{AD}	λ_{AU}
123 FIT	1435 FIT	125 FIT	12 FIT	74 FIT	86 FIT	11 FIT

PFD _{AVG}	0.105 x 10 ⁻²	(T1 = 1 year)
PFD _{AVG}	0.154 x 10 ⁻²	(T1 = 2 years)
PFD _{AVG}	0.302 x 10 ⁻²	(T1 = 5 years)
PFH	0.125 x 10 ⁻⁶ 1/h	

Proof Test Coverage (PTC)

Test type (see section "Proof test")	Remaining dangerous undetected failures	PTC
Test 1	13 FIT	90 %

Current output in summation mode

Current output 4 ... 20 mA for control of a connected processing system (e.g. SSPS) for monitoring a limit value (e.g. overflow or dry run protection).

Possible instrument versions with N Secondary Device:⁷⁾

- SOLITRAC 31 Primary Device + Secondary Device(s)
- FIBERTRAC 31, 32 Primary Device + Secondary Device(s)

Secondary

λ_S	λ_{DD}	λ_{DU}	λ_H	λ_L	λ_{AD}	λ_{AU}
123 FIT	1373 FIT	120 FIT	0 FIT	0 FIT	19 FIT	2 FIT

Primary + 1 Secondary Device

λ_S	λ_{DD}	λ_{DU}	λ_H	λ_L	λ_{AD}	λ_{AU}
246 FIT	2808 FIT	245 FIT	12 FIT	74 FIT	105 FIT	13 FIT

⁷⁾ For N Secondary Device: $\lambda_x = \lambda_{x \text{ Primary Device}} + N * \lambda_{x \text{ Secondary}}$

PFD _{AVG}	0.206 x 10 ⁻²	(T1 = 1 year)
PFD _{AVG}	0.303 x 10 ⁻²	(T1 = 2 years)
PFH	0.245 x 10 ⁻⁶ 1/h	

Proof Test Coverage (PTC)

Test type (see section "Proof test")	Remaining dangerous undetected failures	PTC
Test 1	25 FIT	90 %

Primary Device + 2 Secondary Devices

λ_S	λ_{DD}	λ_{DU}	λ_H	λ_L	λ_{AD}	λ_{AU}
369 FIT	4181 FIT	365 FIT	12 FIT	74 FIT	125 FIT	16 FIT

PFD _{AVG}	0.307 x 10 ⁻²	(T1 = 1 year)
PFH	0.365 x 10 ⁻⁶ 1/h	

Proof Test Coverage (PTC)

Test type (see section "Proof test")	Remaining dangerous undetected failures	PTC
Test 1	37 FIT	90 %

4.3 Key figures according to IEC 61508 for the applications for level measurement**Current output**

Current output 4 ... 20 mA for control of a connected processing system (e.g. SSPS) for monitoring a level range.

Possible instrument versions:

- MINITRAC 31, 32
- SOLITRAC 31
- FIBERTRAC 31, 32

Single or Primary Device

λ_S	λ_{DD}	λ_{DU}	λ_H	λ_L	λ_{AD}	λ_{AU}
0 FIT	1529 FIT	154 FIT	12 FIT	74 FIT	86 FIT	11 FIT

PFD _{AVG}	0.129 x 10 ⁻²	(T1 = 1 year)
PFD _{AVG}	0.190 x 10 ⁻²	(T1 = 2 years)
PFD _{AVG}	0.371 x 10 ⁻²	(T1 = 5 years)
PFH	0.154 x 10 ⁻⁶ 1/h	

Proof Test Coverage (PTC)

Test type ⁸⁾	Remaining dangerous undetected failures	PTC
Test 2	15 FIT	90 %

Current output in summation mode Current output 4 ... 20 mA for control of a connected processing system (e.g. SSPS) for monitoring a level range.

Possible instrument versions with N Secondary Device:⁹⁾

- SOLITRAC 31 Primary Device + Secondary Device(s)
- FIBERTRAC 31, 32 Primary Device + Secondary Device(s)

Secondary Device

λ_S	λ_{DD}	λ_{DU}	λ_H	λ_L	λ_{AD}	λ_{AU}
0 FIT	1467 FIT	149 FIT	0 FIT	0 FIT	19 FIT	2 FIT

Primary Device + 1 Secondary Device

λ_S	λ_{DD}	λ_{DU}	λ_H	λ_L	λ_{AD}	λ_{AU}
0 FIT	2996 FIT	303 FIT	12 FIT	74 FIT	105 FIT	13 FIT

PFD _{AVG}	0.255 x 10 ⁻²	(T1 = 1 year)
PFD _{AVG}	0.374 x 10 ⁻²	(T1 = 2 years)
PFH	0.303 x 10 ⁻⁶ 1/h	

Proof Test Coverage (PTC)

Test type ¹⁰⁾	Remaining dangerous undetected failures	PTC
Test 2	30 FIT	90 %

Primary Device + 2 Secondary Devices

λ_S	λ_{DD}	λ_{DU}	λ_H	λ_L	λ_{AD}	λ_{AU}
0 FIT	4463 FIT	452 FIT	12 FIT	74 FIT	124 FIT	15 FIT

PFD _{AVG}	0.380 x 10 ⁻²	(T1 = 1 year)
PFH	0.452 x 10 ⁻⁶ 1/h	

⁸⁾ See section "Proof test".

⁹⁾ For N Secondary Device: $\lambda_x = \lambda_{x, \text{Primary Device}} + N * \lambda_{x, \text{Secondary}}$

¹⁰⁾ See section "Proof test".

Proof Test Coverage (PTC)

Test type ¹¹⁾	Remaining dangerous undetected failures	PTC
Test 2	45 FIT	90 %

4.4 Characteristics acc. to ISO 13849-1

The transmitter has been manufactured and verified using principles that demonstrate its suitability and reliability for safety-related applications. It can therefore be considered a "*proven component*" according to DIN EN ISO 13849-1.

Derived from the safety-related characteristics, the following figures result according to ISO 13849-1 machine safety):¹²⁾

Point level detection

Application	MTTFd	DC	PFHd
Relay output	91 years	90 %	1.23×10^{-7} 1/h
Current output	66 years	93 %	1.25×10^{-7} 1/h
Summation operation with 1 Secondary Device	35 years	92 %	2.45×10^{-7} 1/h
Summation operation with 2 Secondary Device	24 years	92 %	3.65×10^{-7} 1/h

Level measurement

Application	MTTFd	DC	PFHd
Current output	62 years	92 %	1.54×10^{-7} 1/h
Summation operation with 1 Secondary Device	33 years	91 %	3.02×10^{-7} 1/h
Summation operation with 2 Secondary Device	22 years	91 %	4.51×10^{-7} 1/h

4.5 Supplementary information**Determination of the failure rates**

The failure rates of the instruments were determined by an FMEDA according to IEC 61508. The calculations are based on failure rates of the elements according to **SN 29500**:

All figures refer to an average ambient temperature of 40 °C (104 °F) during the operating time. For higher temperatures, the values should be corrected:

¹¹⁾ See section "Proof test".

¹²⁾ ISO 13849-1 was not part of the certification of the instrument.

Assumptions of the FMEDA

- Continuous application temperature > 50 °C (122 °F) by factor 1.3
- Continuous application temperature > 60 °C (140 °F) by factor 2.5

Similar factors apply if frequent temperature fluctuations are expected.

- The failure rates are constant. Take note of the useful lifetime of the components according to IEC 61508-2.
- Multiple failures are not taken into account
- Wear on mechanical parts is not taken into account
- Failure rates of external power supplies are not taken into account
- The environmental conditions correspond to an average industrial environment
- To avoid a fusing of the relay contacts, these must be protected by an external fuse

Calculation of PFD_{AVG}

The values for PFD_{AVG} specified above were calculated as follows for a 1oo1 architecture:

$$PFD_{AVG} = \frac{PTC \times \lambda_{DU} \times T1}{2} + \lambda_{DD} \times MTTR + \frac{(1 - PTC) \times \lambda_{DU} \times LT}{2}$$

Parameters used:

- T1 = Proof Test Interval
- PTC = 90 %
- LT = 10 years
- MTTR = 8 h

Boundary conditions relating to the configuration of the processing unit

A connected control and processing unit must have the following properties:

- The failure signals of the measuring system are judged according to the idle current principle
- "fail low" and "fail high" signals are interpreted as a failure, whereupon the safe state must be taken on

If this is not the case, the respective percentages of the failure rates must be assigned to the dangerous failures and the values stated in chapter *Safety-related characteristics*“ redetermined!

Multiple channel architecture

In multiple channel systems for SIL3 applications, this measuring system must only be used with diversitary redundancy.

The safety-related characteristics must be calculated especially for the selected structure of the measuring chain using the stated failure rates. In doing this, a suitable Common Cause Factor (CCF) must be considered (see IEC 61508-6, appendix D).

5 Setup

5.1 General information

Mounting and installation Take note of the mounting and installation instructions in the operating instructions manual.

Setup must be carried out under process conditions.

5.2 Instrument parameter adjustment

Tools The following adjustment units are permitted for parameterization of the safety function:

- Display and adjustment module
- The DTM suitable for PROTRAC in conjunction with an adjustment software according to the FDT/DTM standard, e. g. PACTware

The parameter adjustment is described in the operating instructions manual.

Safety-relevant parameters

For protection against unwanted or unauthorized adjustment, the set parameters must be protected against unauthorized access. For this reason, the instrument is shipped in locked condition. The PIN in delivery status is "0000".

The default values of the parameters are listed in the operating instructions. When shipped with customer-specific parameter settings, the instrument is accompanied by a list of the values differing from the default values.

By means of the serial number this list can also be downloaded at "www.vega.com", "*Instrument search (serial number)*".

Safe parameterization

To avoid or detect possible errors during parameter adjustment for unsafe operating environments, a verification procedure is used that allows the safety-relevant parameters to be checked.

Parameter adjustment proceeds according to the following steps:

- Unlock adjustment
- Change parameters
- Lock adjustment and verify modified parameters

The exact process is described in the operating instructions.



Wireless connection is also possible with existing Bluetooth function.



The instrument is shipped in blocked condition!



For verification, all modified, safety-relevant and non safety-relevant parameters are shown.

The verification texts are displayed either in German or, when any other menu language is used, in English.

Unsafe device status



Warning:

When the adjustment is released, the safety function must be considered as unsafe. This applies until the parameters are verified and the adjustment is locked again.

If necessary, you must take other measures to maintain the safety function.

**Incomplete process
of the parameter
adjustment**



Warning:

If the described process was not carried out completely or correctly (e.g. interruption or voltage loss), the instrument remains in "unlocked" status.

Instrument reset



Warning:

In case a reset to "*Basic adjustment*" or "*Default setting*" is carried out, all safety-relevant parameters must be checked or set anew.

6 Diagnostics and servicing

6.1 Behaviour in case of failures

Internal diagnosis

The instrument is permanently monitored by an internal diagnostic system. If a malfunction is detected, this will be signalled by respective failure signals (see section "Safe status").

The diagnosis interval is specified in chapter "Safety-related characteristics".

SIL

If faults are detected, the entire measuring system must be shut down and the process held in a safe state by other measures.

The occurrence of a failure must be reported to the manufacturer (including a description of the fault and whether it is a dangerous, undetected failure). The device must be returned to the manufacturer for examination.

6.2 Messages in case of malfunction

Messages in case of malfunction

A fault message coded according to the type of fault is output. The fault messages are listed in the operating instructions.

Rectifying the malfunction

Malfunctions occur for different reasons and have to be rectified accordingly:

- Malfunctions due to an operating error (for example communication problems, incorrect adjustment, etc.) are gone immediately after rectification.
- Malfunctions due to a hardware failure can usually be rectified by a manual restart. If the reason for the failure is no longer present, the safety function will be executed correctly.
- In case of hardware failures "F041 Photomultiplier error" and "F045 Error on the current output", the malfunction is gone immediately after rectification of the error.
- When a failure that automatically triggers a restart occurs, the instrument remains in the "malfunction" status for at least 5 seconds after the restart. If the failure is no longer detected, the safety function is executed again correctly.

6.3 Repair

Electronics exchange

An exchange of the electronics may only be carried out by VEGA service technicians or other qualified personnel that have received training from VEGA (e.g. VEGA sales partners).

The procedure is described in the operating instructions manual. Note the instructions for parameter adjustment and setup.

Software update

A software update may be carried out by the user. The procedure is described in the operating instructions manual. The instructions for parameter adjustment and setup must be taken into account.

7 Proof test

7.1 General information

Objective

To identify possible dangerous, undetected failures, the safety function must be checked by a proof test at adequate intervals. It is the user's responsibility to choose the type of testing. The time intervals are determined by the selected PFD_{AVG} (see chapter "Safety-related characteristics").

For documentation of these tests, the test protocol in the appendix can be used.

If one of the tests proves negative, the entire measuring system must be switched out of service and the process held in a safe state by means of other measures.

In a multiple channel architecture this applies separately to each channel.

Preparation

- Determine safety function (mode, switching points)
- If necessary, remove the instruments from the safety chain and maintain the safety function by other means

Unsafe device status



Warning:

During the function test, the safety function must be treated as unreliable. Take into account that the function test influences downstream connected devices.

If necessary, you must take other measures to maintain the safety function.

After the function test, the status specified for the safety function must be restored.

7.2 Test 1: For mode "Point level detection"

Conditions

- Instrument in installed condition
- Output signal corresponds to the process pressure or the level
- Device status in the menu Diagnosis: "OK"

Procedure

1. Change the process conditions in such a way that the radiation on the sensor is as high as possible
2. Check if the measured value is correct
3. Close radiation source(s)
4. Check if the measured value is correct
5. Open radiation source(s)
6. Check if the measured value is correct
7. Continue normal operation

Expected result

- On 1: Level below the sensor
- On 2: Switching status signals "uncovered"
- On 4: Switching status signals "covered"
- On 6: like point 2

Proof Test Coverage

See *Safety-related characteristics*

7.3 Test 2: For mode "Level measurement"

Conditions	<ul style="list-style-type: none">● Instrument in installed condition● Output signal corresponds to the process pressure or the level● Device status in the menu Diagnosis: "OK"
Procedure	<ol style="list-style-type: none">1. Change the process conditions in such a way that the radiation on the sensor is as high as possible2. Check if the measured value is correct3. Close radiation source(s)4. Check if the measured value is correct5. Open radiation source(s)6. Check if the measured value is correct7. Continue normal operation
Expected result	<ul style="list-style-type: none">● On 1: Level below 50 %● On 2: Measured value corresponds to the level● On 4: Instrument displays "Full"● On 6: like point 2
Proof Test Coverage	See <i>Safety-related characteristics</i>

8 Appendix A: Test report

Identification	
Company/Tester	
Plant/Instrument TAG	
Meas. loop TAG	
Instrument type/Order code	
Instrument serial number	
Date, setup	
Date, last function test	

Test reason		Test scope	
(...)	Setup	(...)	Test 1
(...)	Proof test	(...)	Test 2

Adjusted device parameters of the safety function	
Isotope	(...) Cs-137 (...) Co-60
Used safety-relevant outputs	(...) relay output (...) current output
Set mode	(...) level detection, overflow protection (...) level detection, dry run protection (...) level measurement
Detector length	mm
Point level detection: setting "uncovered"	ct/s
Point level detection: setting "covered"	ct/s
Level measurement: max. process value	
Level measurement: min. process value	

Test result			
Test step	Status relay	Output current	Test result
		mA	
		mA	
		mA	
		mA	
		mA	
		mA	
		mA	

Confirmation

Date:

Signature:

66111-EN-250226

9 Appendix B: Term definitions

Abbreviations

SIL	Safety Integrity Level (SIL1, SIL2, SIL3, SIL4)
SC	Systematic Capability (SC1, SC2, SC3, SC4)
HFT	Hardware Fault Tolerance
SFF	Safe Failure Fraction
PFD_{AVG}	Average Probability of dangerous Failure on Demand
PFH_D	Average frequency of a dangerous failure per hour (Ed.2)
FMEDA	Failure Mode, Effects and Diagnostics Analysis
FIT	Failure In Time (1 FIT = 1 failure/10 ⁹ h)
λ_{SD}	Rate for safe detected failure
λ_{SU}	Rate for safe undetected failure
λ_S	$\lambda_S = \lambda_{SD} + \lambda_{SU}$
λ_{DD}	Rate for dangerous detected failure
λ_{DU}	Rate for dangerous undetected failure
λ_H	Rate for failure, who causes a high output current (> 21 mA)
λ_L	Rate for failure, who causes a low output current (≤ 3.6 mA)
λ_{AD}	Rate for diagnostic failure (detected)
λ_{AU}	Rate for diagnostic failure (undetected)
DC	Diagnostic Coverage
PTC	Proof Test Coverage (Diagnostic coverage for manual proof tests)
T1	Proof Test Interval
LT	Useful Life Time
MTBF	Mean Time Between Failure = MTTF + MTTR
MTTF	Mean Time To Failure
MTTR	IEC 61508, Ed1: Mean Time To Repair IEC 61508, Ed2: Mean Time To Restoration
$MTTF_d$	Mean Time To dangerous Failure (ISO 13849-1)

10 Supplement C: SIL conformity

SIL Manufacturer declaration, NE130: Form B.1

Manufacturer	
VEGA Grieshaber KG Am Hohenstein 113, D-77761 Schiltach, Germany	VEGA Americas, Inc. 4241 Allendorf Drive, Cincinnati, Ohio 45209, USA

General			
Device designation and permissible types	PROTRAC Series 30 POINTRAC 31 8/16 mA/HART - Four-wire with SIL qualification PT31.***/I/L/S***** MINITRAC 31, 32 4 ... 20 mA/HART - Four-wire with SIL qualification MT31/32.***/I/L/S**** SOLITRAC 31 4 ... 20 mA/HART - Four-wire with SIL qualification ST31.***/I/L/S***** FIBERTRAC 31, 32 4 ... 20 mA/HART - Four-wire with SIL qualification FT31/32.***/I/L/S*****		
Safety-related output signal	4...20 mA or 8/16 mA and/or Relay		
Fault current	Current output: ≥ 21 mA; ≤ 3,6 mA; Relay output: NO contact open		
Process variable / function	Point level detection or level measurement In addition with secondary sensor in summation mode		
Safety function(s)	<ul style="list-style-type: none"> - MIN/MAX limit detection - Range measurement 		
Device type acc. to IEC 61508-2	<input type="checkbox"/> Type A	<input checked="" type="checkbox"/> Type B	
Operating mode	<input checked="" type="checkbox"/> Low Demand Mode	<input checked="" type="checkbox"/> High Demand or Continuous Mode	
Valid Hardware-Version	≥ 2.0.0		
Valid Software-Version	≥ 3.0.0		
Safety manual	Document ID: 66111		
Type of evaluation (check only one box)	<input checked="" type="checkbox"/> Complete HW/SW evaluation parallel to development incl. FMEDA and change request acc. to IEC 61508-2, 3 <input type="checkbox"/> Evaluation of "Prior use" performance for HW/SW incl. FMEDA and change request acc. to IEC 61508-2, 3 <input type="checkbox"/> Evaluation of HW/SW field data to verify „prior use" acc. to IEC 61511 <input type="checkbox"/> Evaluation by FMEDA acc. to IEC61508-2 for devices without software		
Evaluation through (incl. certificate no.)	exida Certification LLC VEGA 1202050C P0011 C004		
Test documents	Development documents	Test reports	Data sheets

Safety Integrity			
Systematic Capability (SC)		<input checked="" type="checkbox"/> SC2 for SIL2	<input type="checkbox"/> SC3 for SIL3
Hardware Safety Integrity	Single-channel use (HFT=0)	<input checked="" type="checkbox"/> SIL2 capable	<input type="checkbox"/> SIL3 capable
	Multi-channel use (HFT≥1)	<input checked="" type="checkbox"/> SIL2 capable	<input type="checkbox"/> SIL3 capable

	Version: POINTRAC 31; MINITRAC 31, 32; SOLITRAC 31; FIBERTRAC 31, 32	
	Relay	Current output
Safety function(s)	MIN / MAX	MIN / MAX
λ_{DU} (FIT = Failure In Time / 10 ⁹ h)	123 FIT	125 FIT
λ_{DD}	1119 FIT	1435 FIT
λ_{Su}	382 FIT	29 FIT

SIL Manufacturer declaration, NE130: Form B.1

λ_{SD}	94 FIT	94 FIT
SFF (Safe Failure Fraction)	> 90 %	> 90 %
PTC (Proof Test Coverage)	Test 1: 90%, with checking the process value	Test 1: 90%, with checking the process value
FMEDA data source	SN 29500	

FMEDA	Version with secondary sensor consisting of a combination of SOLITRAC 31 primary device + secondary device; FIBERTRAC 31, 32 primary device + secondary device		
	secondary device	primary + 1 secondary device	primary + 2 secondary devices
Safety function(s)	MIN / MAX	MIN / MAX	MIN / MAX
λ_{DU} (FIT = Failure In Time / 10^9 h)	120 FIT	245 FIT	365 FIT
λ_{DD}	1373 FIT	2808 FIT	4181 FIT
λ_{SU}	29 FIT	58 FIT	86 FIT
λ_{SD}	94 FIT	188 FIT	282 FIT
SFF (Safe Failure Fraction)		> 90 %	> 90 %
PTC (Proof Test Coverage)		Test 1: 90% ¹⁾	Test 1: 90% ¹⁾
	*) Test 1 with checking the process value		
FMEDA data source	SN 29500		

FMEDA	Version: MINITRAC 31, 32; SOLITRAC 31; FIBERTRAC 31, 32 Current output	
Safety function(s)	Range	
λ_{DU} (FIT = Failure In Time / 10^9 h)	154 FIT	
λ_{DD}	1529 FIT	
λ_{SU}	0 FIT	
λ_{SD}	0 FIT	
SFF (Safe Failure Fraction)	> 90 %	
PTC (Proof Test Coverage)	Test 1: 90%, with checking the process value	
FMEDA data source	SN 29500	

FMEDA	Version with secondary sensor consisting of a combination of SOLITRAC 31 primary device + secondary device; FIBERTRAC 31, 32 primary device + secondary device		
	secondary device	primary + 1 secondary device	primary + 2 secondary devices
Safety function(s)	Range	Range	Range
λ_{DU} (FIT = Failure In Time / 10^9 h)	149 FIT	303 FIT	452 FIT
λ_{DD}	1467 FIT	2996 FIT	4463 FIT
λ_{SU}	0 FIT	0 FIT	0 FIT
λ_{SD}	0 FIT	0 FIT	0 FIT
SFF (Safe Failure Fraction)		> 90 %	> 90 %
PTC (Proof Test Coverage)		Test 1: 90% ¹⁾	Test 1: 90% ¹⁾
	*) Test 1 with checking the process value		
FMEDA data source	SN 29500		

SIL Manufacturer declaration, NE130: Form B.1

Declaration	
<input checked="" type="checkbox"/>	Our internal company quality management system ensures information on safety-related systematic faults which become evident in the future.



The manufacturer may use the mark:



Revision 2.6 December 20, 2024
Surveillance Audit Due January 1, 2028



Certificate / Certificat Zertifikat / 合格証

VEGA 1202050C P0011 C004

exida hereby confirms that the:

**Radiation-based Transmitters
PROTRAC 30 Series
VEGA Grieshaber KG
Schiltach - Germany**

Have been assessed per the relevant requirements of:

IEC 61508 : 2010 Parts 1-3

and meets requirements providing a level of integrity to:

Systematic Capability: SC 2 (SIL 2 Capable)

Random Capability: Type B Element

SIL 2 @ HFT = 0; Route 1_H

PFD_{AVG} and Architecture Constraints must be verified for each application

Safety Function:

The PROTRAC 30 Series Transmitter will measure the level of the process material within the stated safety accuracy.

Application Restrictions:

The unit must be properly designed into a Safety Instrumented Function per the Safety Manual requirements.





Evaluating Assessor



Certifying Assessor

PROTRAC 30 Series
Transmitter



80 N Main St
Sellersville, PA 18360

T-013, V3R7

Certificate / Certificat / Zertifikat / 合格証

VEGA 1202050C P0011 C004

Systematic Capability: SC 2 (SIL 2 Capable)

Random Capability: Type B Element

SIL 2 @ HFT = 0; Route 1_H

**PFDAVG and Architecture Constraints
must be verified for each application**

Systematic Capability:

These Products have met manufacturer design process requirements of Safety Integrity Level (SIL) 2. These are intended to achieve sufficient integrity against systematic errors of design by the manufacturer. A Safety Instrumented Function (SIF) designed with these products must not be used at a SIL level higher than stated.

Random Capability:

The SIL limit imposed by the Architectural Constraints must be met for each element.

Versions:

Applications with continuous level measurement and level limit detection of liquids and bulk solids. Hardware version 2.0.0 and Software version 3.1.0

Single or Master devices:

- C1 – Point Level PT31, MT31, MT32 using relay output (MIN/MAX)
- C2 – Point Level PT31, MT31, MT32 using 8/16mA current output (MIN/MAX)
- C3 – Level MT31, MT32, FT31/32 (short), ST31 using 4..20mA current output (MIN/MAX/RANGE)
- C4 – Level FT31/32 (long) using 4..20mA current output (MIN/MAX)

Slave devices:

- C5 – Level FT31/32, ST31 (MIN/MAX/RANGE)
- C6 – Level FT31/32 (long scintillator) (MIN/MAX)

Configuration	λ_s	λ_{SD}	λ_{SU}	λ_{SI}	λ_L	λ_{LD}	λ_{LU}
C1: MIN/MAX limit detection	476	1119	123			24	30
C2, C3, C4: MIN/MAX limit detection	123	1435	125	12	74	86	11
C3: RANGE measurement	0	1529	154	12	74	86	11
C5: RANGE measurement 2014	0	1467	149			19	2
C5, C6: MIN/MAX limit detection	123	1373	120			19	2
C3 with 2 slaves C5: RANGE measurement	0	4463	452	12	74	124	15
C4 with 2 slaves C6: MIN/MAX limit detection	369	4181	365	12	74	124	15

All failure rates are given in FIT (failures / 10⁹ hours)

SIL Verification:


The Safety Integrity Level (SIL) of an entire Safety Instrumented Function (SIF) must be verified via a calculation of PFDAVG considering redundant architectures, proof test interval, proof test effectiveness, any automatic diagnostics, average repair time and the specific failure rates of all products included in the SIF. Each element must be checked to assure compliance with minimum hardware fault tolerance (HFT) requirements.

The following documents are a mandatory part of certification:

Assessment Report: VEGA 1202-050-C R008 V1R7

Safety Manual: PROTRAC 30 Series 66111

Page 2 of 2

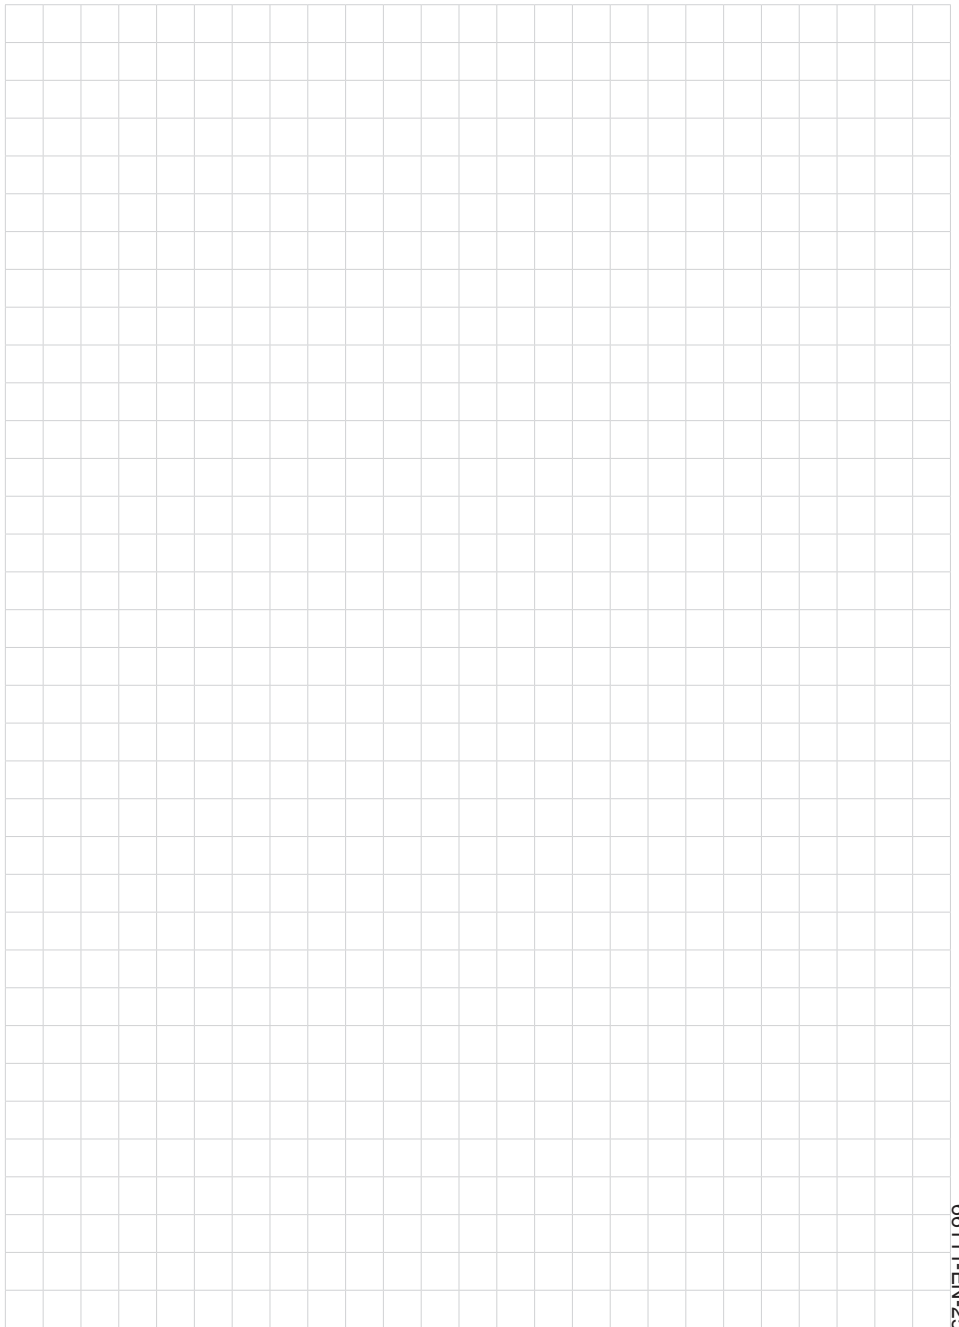



Printing date:

VEGA

All statements concerning scope of delivery, application, practical use and operating conditions of the sensors and processing systems correspond to the information available at the time of printing.

Subject to change without prior notice

© VEGA Grieshaber KG, Schiltach/Germany 2025

66111-EN-250226

VEGA Grieshaber KG
Am Hohenstein 113
77761 Schiltach
Germany

Phone +49 7836 50-0
E-mail: info.de@vega.com
www.vega.com