



Reliable

Optimised distillation process through a reliable measurement

Cost effective

Simple installation saves time and costs

User friendly


Output of additional measured values

Distillation vessel

Level measurement in a distillation vessel and pressure monitoring in the supply line

Solvents are used in the pharmaceutical industry for extracting active ingredients. They are then recovered via evaporation in a high-vacuum distillation vessel. After the solvent has been removed from the pharmaceutical product by evaporation, it is further processed. Reliable level measurement is required in the distillation vessel for process control.

[More details](#)

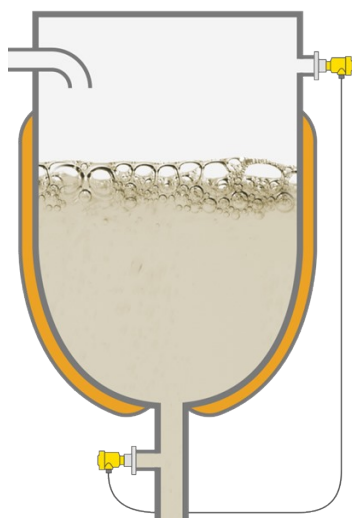

VEGABAR 82

Electronic differential pressure measurement for level measurement in a distillation vessel

- Reliable measuring results safeguard the distillation process
- Robust and drift-free, thanks to oil-free CERTEC® ceramic measuring cell
- Reliable level measurement, unaffected by foam generation
- Additional measured values such as vacuum and temperature

[Show Product](#)



VEGABAR 38

Pressure monitoring with IO-Link connection in the supply line of the heating medium

- Reliable measurement thanks to fast response time
- Robust ceramic CERTEC® measuring cell guarantees a long service life
- Simple operation thanks to VDMA menu structure and integrated display

[Show Product](#)

PRO

BASIC

VEGABAR 82
[Show Product](#)

Measuring range - Distance

-

Measuring range - Pressure

-1 ... 100 bar

Process temperature

-40 ... 150 °C

Process pressure

-1 ... 100 bar

Accuracy

0.05 %

Materials, wetted parts

PVDF
 316L
 Alloy C22 (2.4602)
 PP
 1.4057
 1.4410
 Alloy C276 (2.4819)
 Duplex (1.4462)
 Titanium Grade 2 (3.7035)

Threaded connection

≥ G½, ≥ ½ NPT

Flange connection

≥ DN15, ≥ ½"

Hygienic fittings

Clamp ≥ 1" - DIN32676, ISO2852
 Slotted nut ≥ DN25 - DIN 11851
 hygienic fitting with tension flange DN32
 hygienic fitting F40 with compression nut
 DRD connection ø 65 mm
 SMS 1145 DN51
 SMS DN38
 Swagelok VCR screwing
 Varivent G125
 Varivent N50-40
 for NEUMO BioControl D50 PN16 / 316L

Seal material

EPDM
 FKM
 FFKM

VEGABAR 38
[Show Product](#)

Measuring range - Pressure

-1 ... 60 bar

Process temperature

-40 ... 130 °C

Accuracy

0.3 %

Materials, wetted parts

PVDF
 316L
 Duplex (1.4462)
 Ceramic

Threaded connection

≥ G½, ≥ ½ NPT

Hygienic fittings

Clamp ≥ 2", DN50 - DIN32676, ISO2852
 Clamp ≥ 1" - DIN32676, ISO2852
 Clamp ≥ 1½" - DIN32676, ISO2852
 Slotted nut ≥ 1½", ≥ DN40 - DIN 11851
 Slotted nut ≥ DN25 - DIN 11851
 SMS DN38
 Hygienic fittings ≥ DN25 - DIN11864-1-A
 Hygienic fittings ≥ DN40 - DIN11864-1-A
 Varivent N50-40
 SMS DN25
 Ingold connection PN10
 Varivent F25

Seal material

EPDM
 FKM
 FFKM

Housing material

Plastic

Protection rating

IP66/IP67
 IP65

Output

4 ... 20 mA
 Three-wire (PNP/NPN, 4 ... 20 mA)
 IO-Link