



#### Reliable

Optimised distillation process through a reliable measurement

#### Cost effective

Simple installation saves time and costs

#### User friendly


Output of additional measured values

## Distillation vessel

### Level measurement in a distillation vessel and pressure monitoring in the supply line

Solvents are used in the pharmaceutical industry for extracting active ingredients. They are then recovered via evaporation in a high-vacuum distillation vessel. After the solvent has been removed from the pharmaceutical product by evaporation, it is further processed. Reliable level measurement is required in the distillation vessel for process control.

[More details](#)

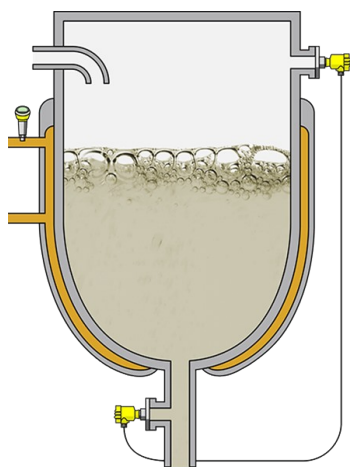

#### VEGABAR 82

Electronic differential pressure measurement for level measurement in a distillation vessel

- Reliable measuring results safeguard the distillation process
- Robust and drift-free, thanks to oil-free CERTEC® ceramic measuring cell
- Reliable level measurement, unaffected by foam generation
- Additional measured values such as vacuum and temperature

[Show Product](#)



#### VEGABAR 38

Pressure monitoring with IO-Link connection in the supply line of the heating medium

- Reliable measurement thanks to fast response time
- Robust ceramic CERTEC® measuring cell guarantees a long service life
- Simple operation thanks to VDMA menu structure and integrated display

[Show Product](#)

PRO

BASIC

**VEGABAR 82**  
[Show Product](#)

**Measuring range - Distance**

-

**Measuring range - Pressure**

-1 ... 100 bar

**Process temperature**

-40 ... 150 °C

**Process pressure**

-1 ... 100 bar

**Accuracy**

0.05 %

**Materials, wetted parts**

PVDF  
 316L  
 Alloy C22 (2.4602)  
 PP  
 1.4057  
 1.4410  
 Alloy C276 (2.4819)  
 Duplex (1.4462)  
 Titanium Grade 2 (3.7035)

**Threaded connection**

≥ G½, ≥ ½ NPT

**Flange connection**

≥ DN15, ≥ ½"

**Hygienic fittings**

Clamp ≥ 1" - DIN32676, ISO2852  
 Slotted nut ≥ DN25 - DIN 11851  
 hygienic fitting with tension flange DN32  
 hygienic fitting F40 with compression nut  
 DRD connection ø 65 mm  
 SMS 1145 DN51  
 SMS DN38  
 Swagelok VCR screwing  
 Varivent G125  
 Varivent N50-40  
 for NEUMO BioControl D50 PN16 / 316L

**Seal material**

EPDM  
 FKM  
 FFKM

**VEGABAR 38**  
[Show Product](#)

**Measuring range - Pressure**

-1 ... 60 bar

**Process temperature**

-40 ... 130 °C

**Accuracy**

0.3 %

**Materials, wetted parts**

PVDF  
 316L  
 Duplex (1.4462)  
 Ceramic

**Threaded connection**

≥ G½, ≥ ½ NPT

**Hygienic fittings**

Clamp ≥ 2", DN50 - DIN32676, ISO2852  
 Clamp ≥ 1" - DIN32676, ISO2852  
 Clamp ≥ 1½" - DIN32676, ISO2852  
 Slotted nut ≥ 1½", ≥ DN40 - DIN 11851  
 Slotted nut ≥ DN25 - DIN 11851  
 SMS DN38  
 Hygienic fittings ≥ DN25 - DIN11864-1-A  
 Hygienic fittings ≥ DN40 - DIN11864-1-A  
 Varivent N50-40  
 SMS DN25  
 Ingold connection PN10  
 Varivent F25

**Seal material**

EPDM  
 FKM  
 FFKM

**Housing material**

Plastic

**Protection rating**

IP66/IP67  
 IP65

**Output**

4 ... 20 mA  
 Three-wire (PNP/NPN, 4 ... 20 mA)  
 IO-Link

**VEGA**