



Reliable

Certified materials according to FDA and EC 1935/2004 regulations

Cost effective

Maintenance-free operation

User friendly


Simple installation

Preparation tank for solvents

Level measurement and point level detection in the solvent preparation tank

A hot caustic solution is required for fast cleaning. It is heated in the storage tank and then flushed into the production equipment. The tank is wrapped in a steam heating jacket that serves to control the temperature inside the tank. The level measuring system is used to control filling and discharge. Level detection prevents the tank from overflowing or running empty.

[More details](#)

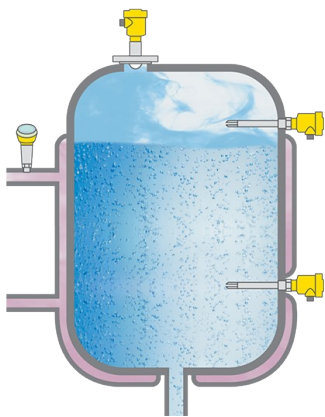

VEGAPULS 64

Non-contact level measurement in the solvent preparation tank

- Strong focusing allows reliable measurement at close range and at the bottom of the tank as well as in media with low dielectric constant
- The front-flush, encapsulated antenna is easy to clean and resistant to the extreme conditions of the CIP processes
- Measurement not affected by condensate and internal fixtures

[Show Product](#)



VEGASWING 63

Vibrating level switch as overflow and dry run protection

- Reliable detection of the limit level, independent of medium
- Reliable function under all process conditions
- Simple setup without adjustment
- Hygienic design ensures easy, reliable CIP cleaning

[Show Product](#)

PRO

VEGAPULS 64

[Show Product](#)



Measuring range - Distance
120 m

Process temperature
-196 ... 450 °C

Process pressure
-1 ... 160 bar

Accuracy
± 1 mm

Frequency
6 GHz
26 GHz
80 GHz

Beam angle
≥ 3°

Materials, wetted parts
PTFE
PVDF
316L
PP
PEEK

Threaded connection
≥ G $\frac{3}{4}$, ≥ $\frac{3}{4}$ NPT

Flange connection
≥ DN20, ≥ $\frac{3}{4}$ "

Hygienic fittings
Clamp ≥ 1½" - DIN32676, ISO2852
Slotted nut ≥ 2", DN50 - DIN 11851
Varivent ≥ DN25
hygienic fitting with tension flange DN32
hygienic fitting F40 with compression nut
Hygienic screw connections ≥ DN50 tube ø53 - DIN11864-1-A
Hygienic flange connection ≥ DN50 DIN11864-2
Hygienic clamp connection ≥ DN50 pipe Ø53 - DIN11864-3-A
DRD connection ø 65 mm
SMS 1145 DN51

PRO

VEGASWING 63

[Show Product](#)



Process temperature
-50 ... 250 °C

Process pressure
-1 ... 64 bar

Version
Standard
Hygienic applications
with gas-tight leadthrough
with tube extension
with temperature adapter

Materials, wetted parts
PFA
316L
Alloy C22 (2.4602)
Alloy 400 (2.4360)
ECTFE
Enamel

Threaded connection
≥ G $\frac{3}{4}$, ≥ $\frac{3}{4}$ NPT

Flange connection
≥ DN25, ≥ 1"

Hygienic fittings
Clamp ≥ 1" - DIN32676, ISO2852
Slotted nut ≥ 1½", ≥ DN40 - DIN 11851
Varivent ≥ DN25
hygienic fitting F40 with compression nut
SMS 1145 DN51
SMS DN38
Hygienic fittings ≥ DN25 - DIN11864-1-A
Hygienic flange connection DIN11864-2-A;
DN60(ISO)ø60,3
SMS socket piece DN38 PN6

Seal material
no media contact

Housing material
Plastic
Aluminium
Stainless steel (precision casting)
Stainless steel (electropolished)

Protection rating
IP66/IP67
IP66/IP68 (1 bar)
IP65

VEGA